

Installation Guide




Makita



Set [h] / [i], [g] or Original Flange, and Blade into the Spindle. Then tighten the Lock Nut by Wrench.


4

Hold [b] and tighten the Bolt with [d] securely.

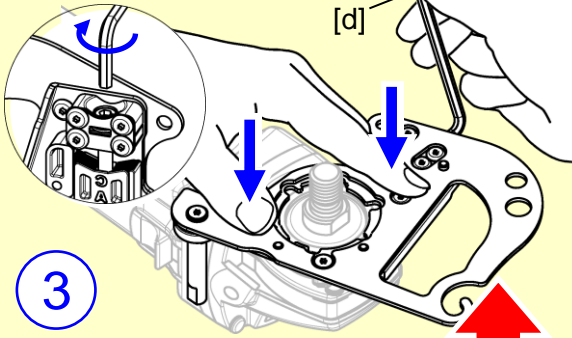


3

Place [b] on gearcase of the grinder.






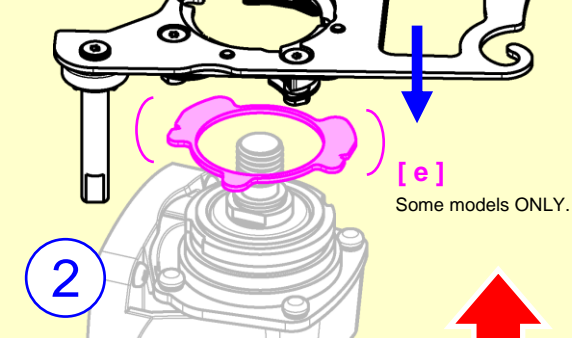


2

Set Upper / Lower Brackets on [b].

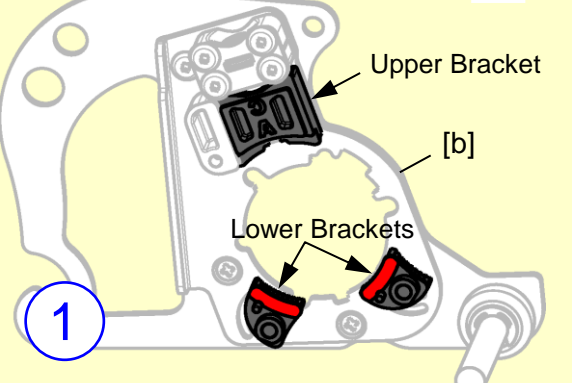

1

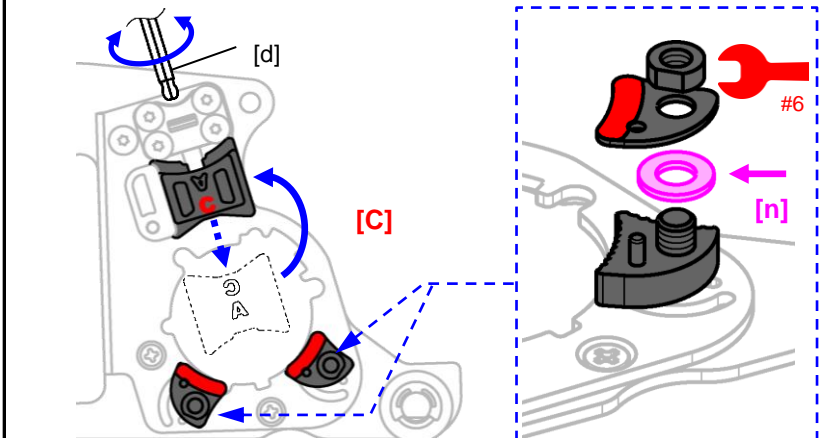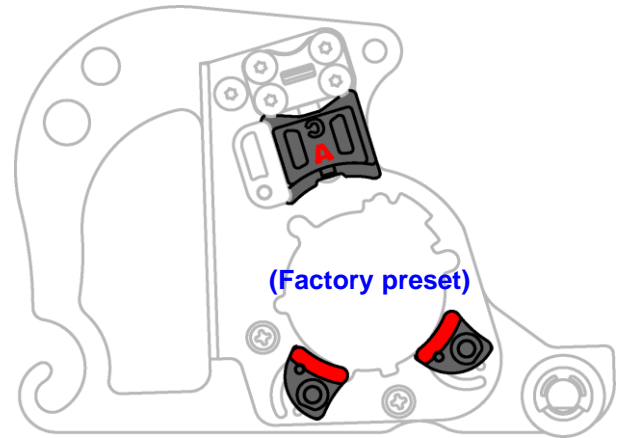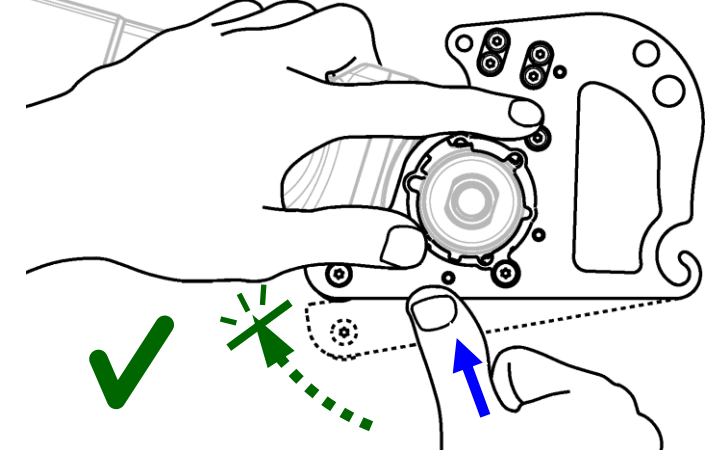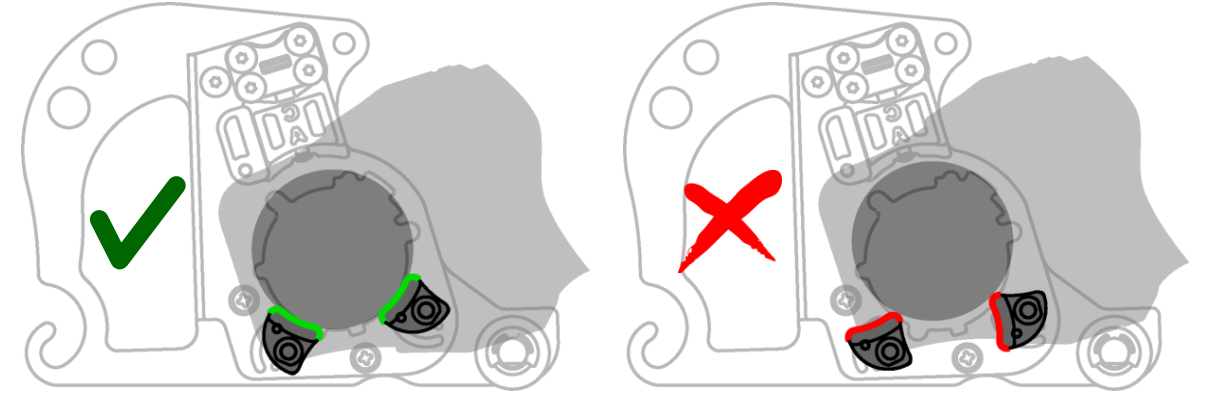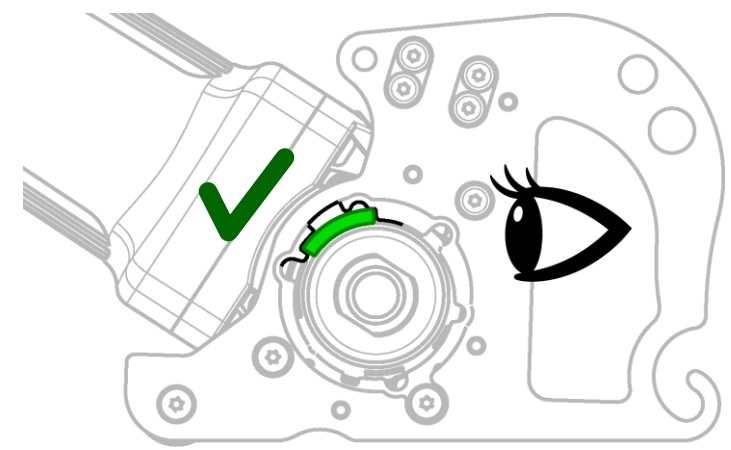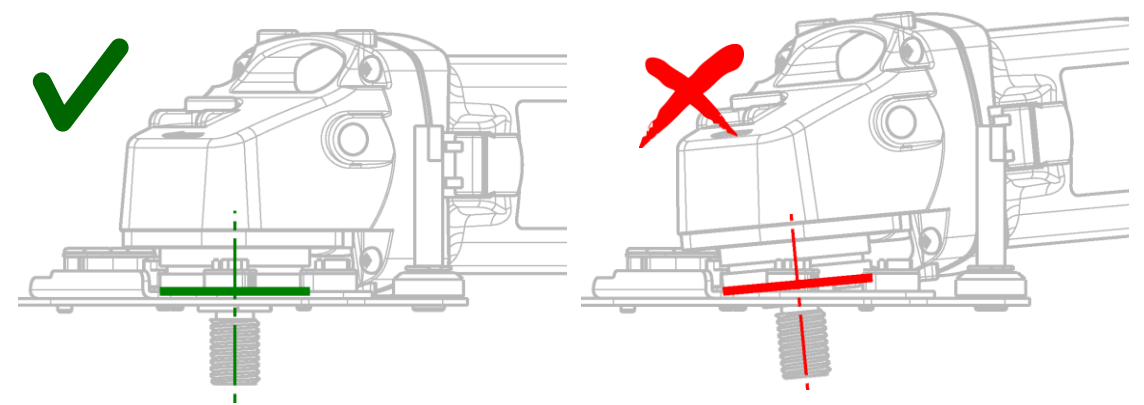  

XAG011 / XAG016 / XAG020 etc.


9564 / GA4530 / GA5010 etc.

GA4542 / GA5042 etc.


9557NB etc.

GAG01 / GAG03 / GAG07 etc.


GA4553 / GA5052 / GA5053 etc.

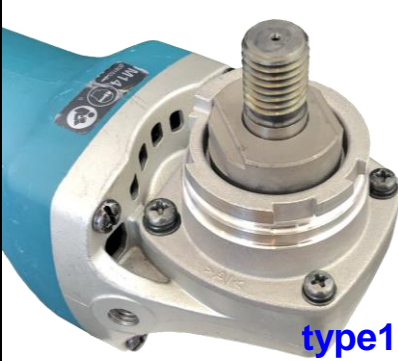


type1

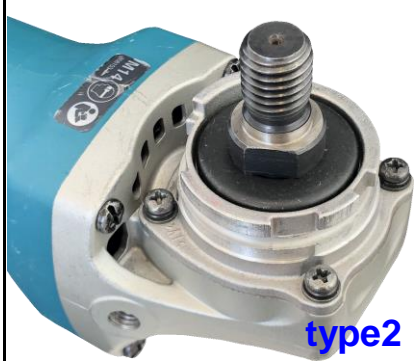


type2

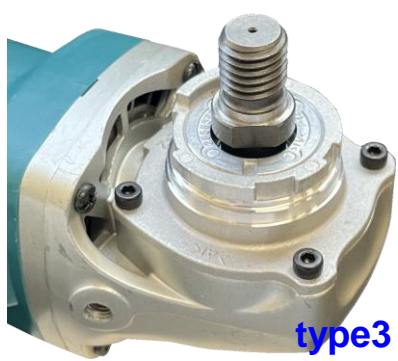


type3

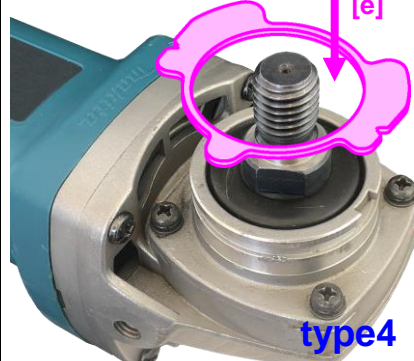

type4

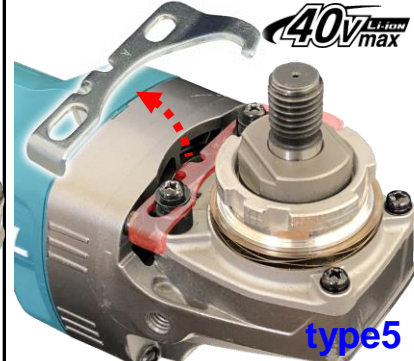

type5

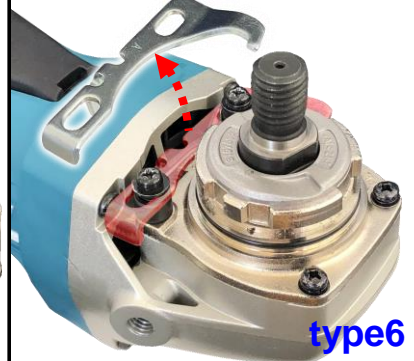










type6

Makita

XLOCK model can't be fitted.

 ※Based on the web information as of 2022 Jan.



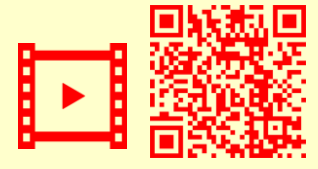


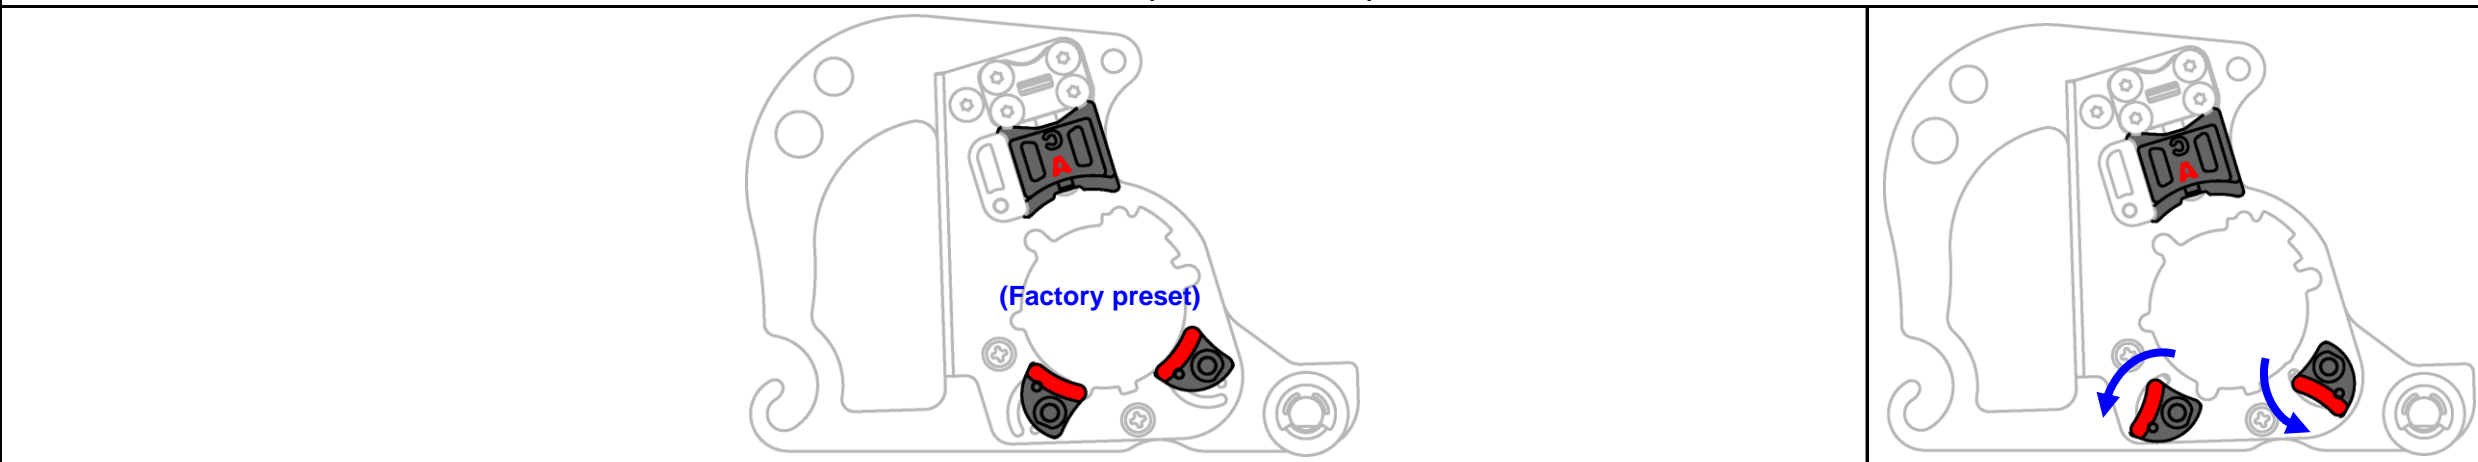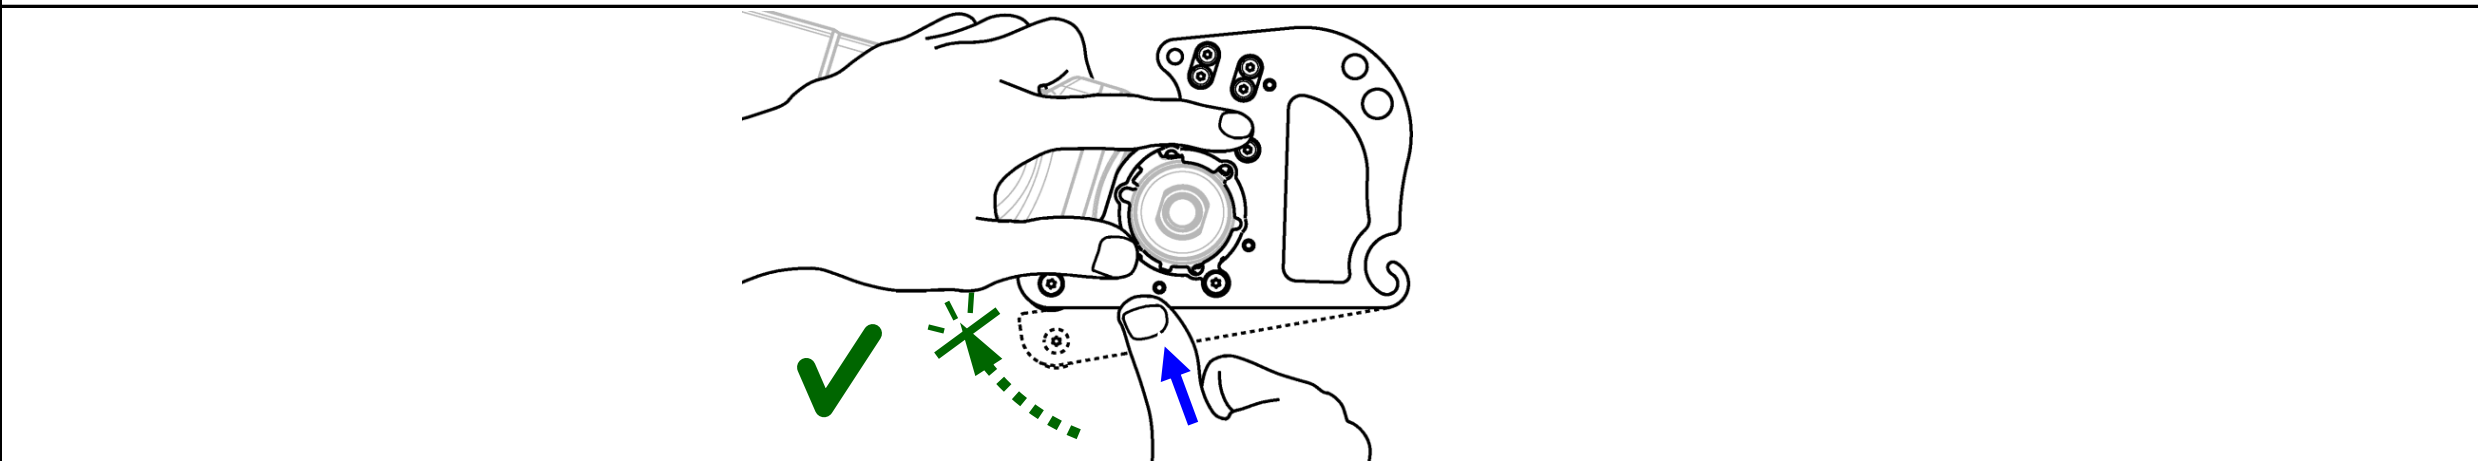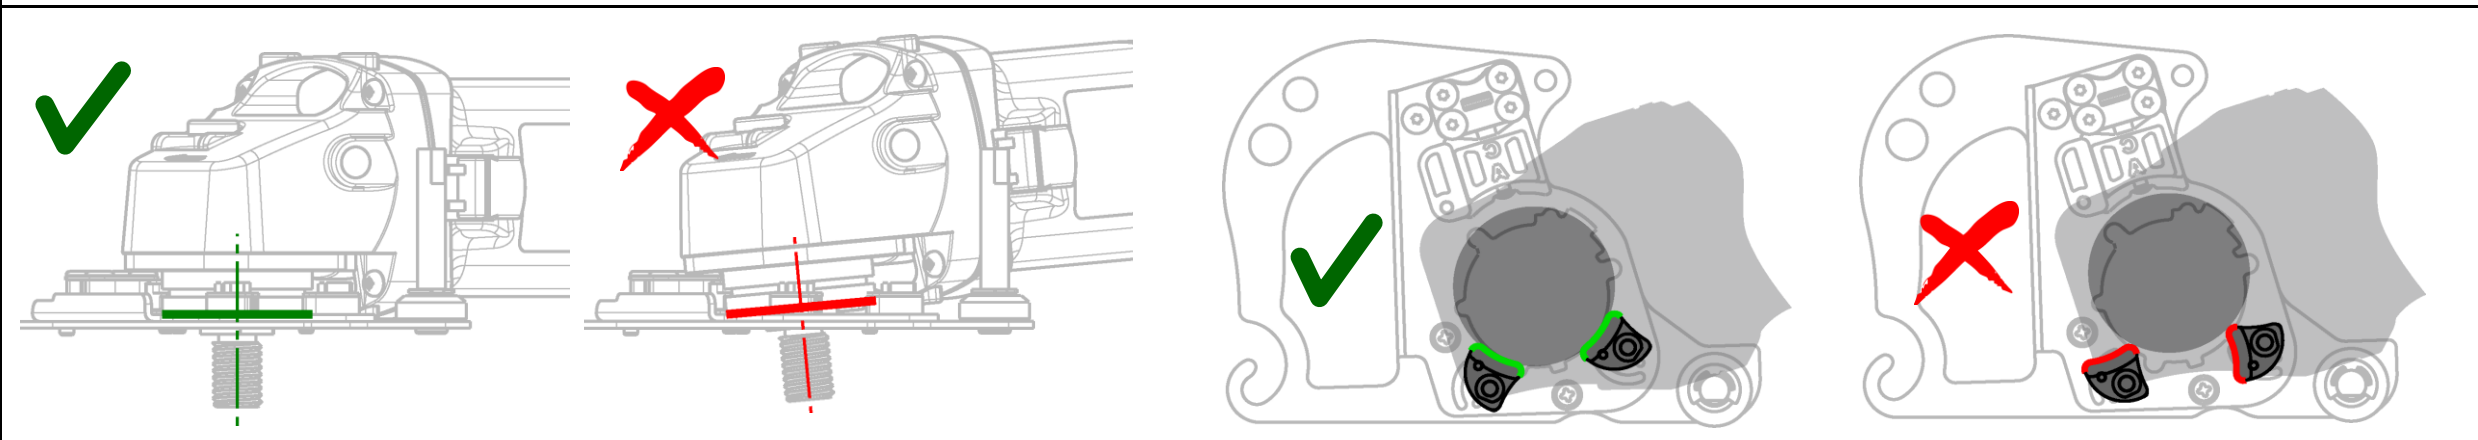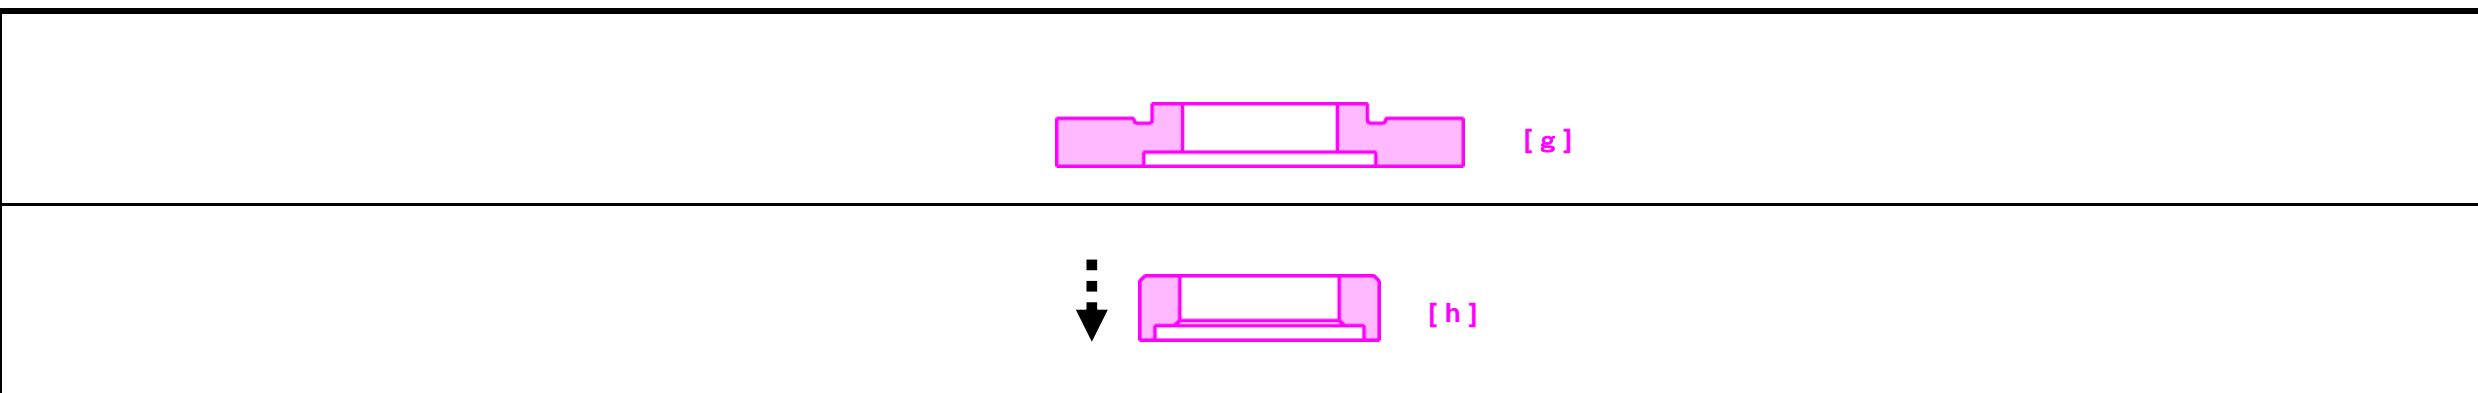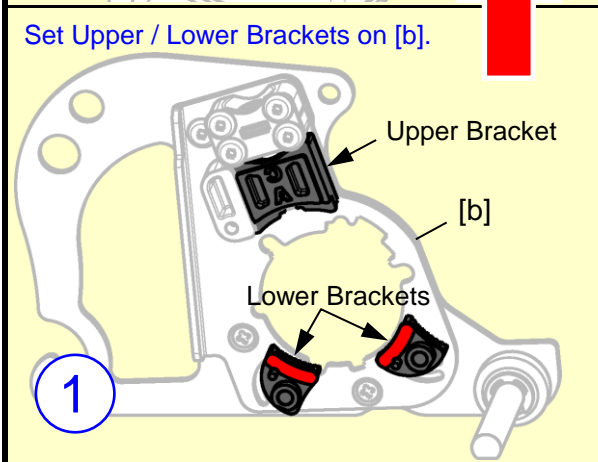
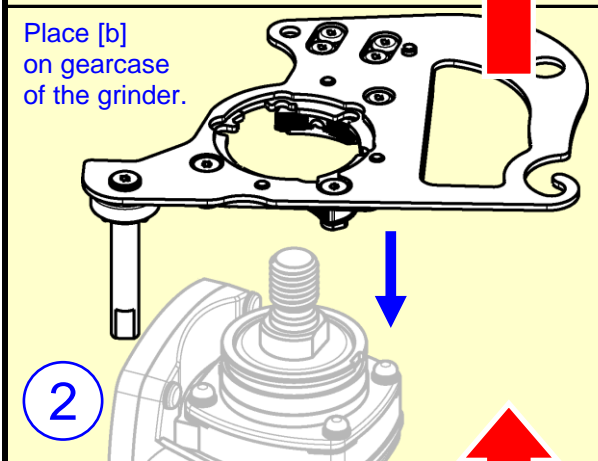
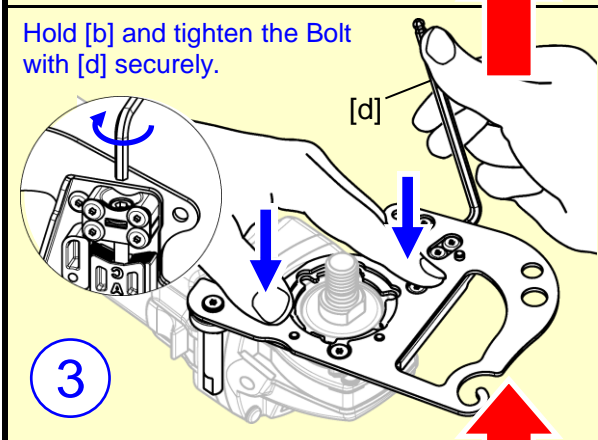
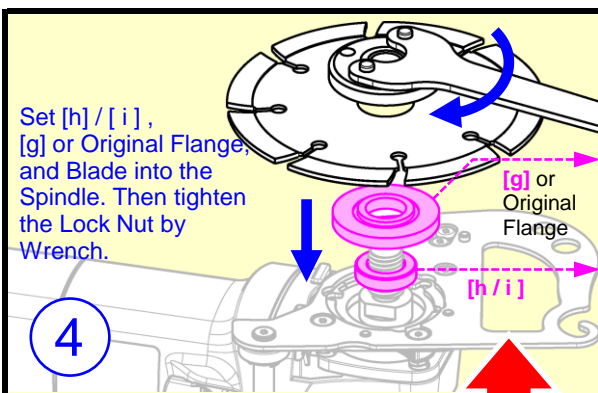


BOSCH

⚠️ **XLOCK** model can't be fitted.










※Based on the web information as of 2022 Jan.

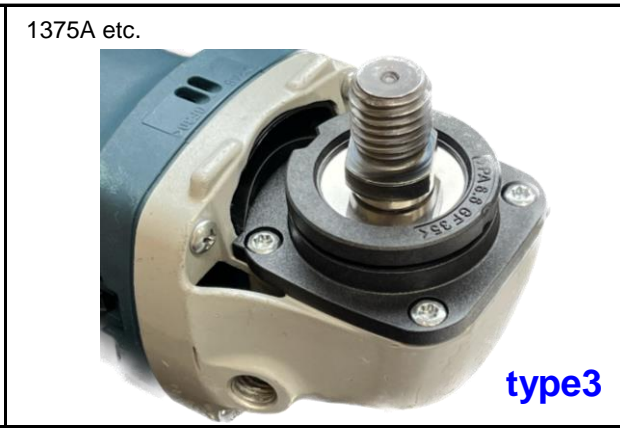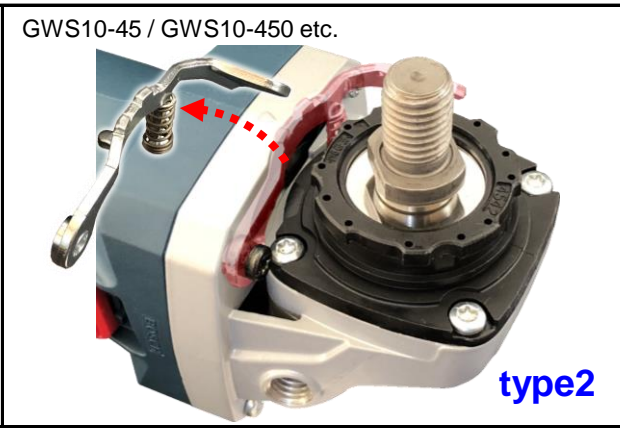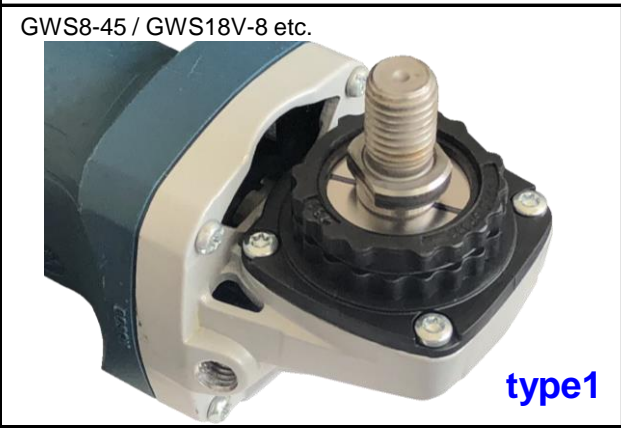

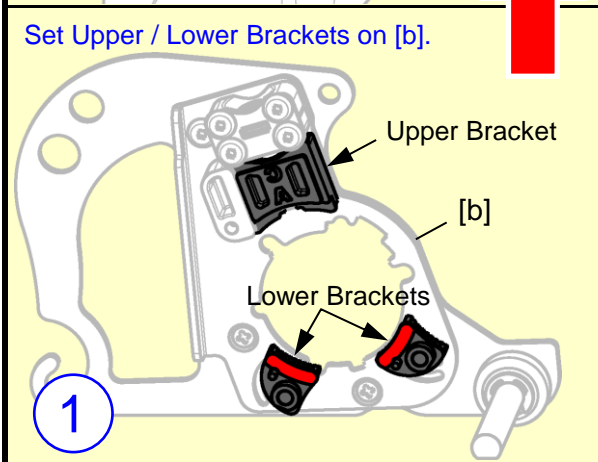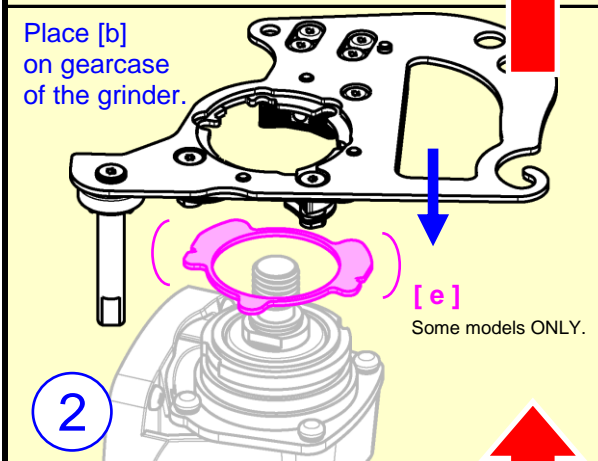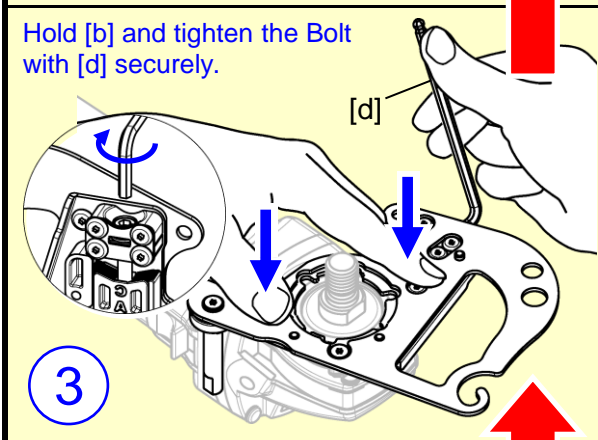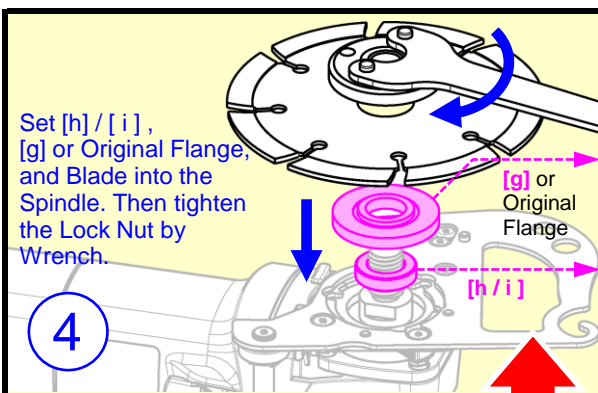

⚠ D28115 / D28114 / D28066 / D28131 / D28065 / D28140 type can't be fitted.

※Based on the web information as of 2022 Jan.

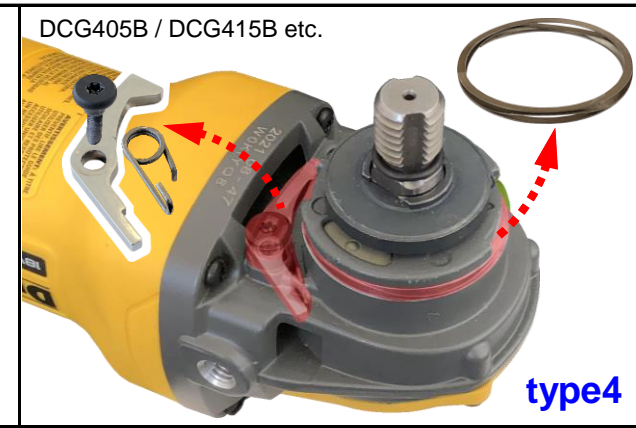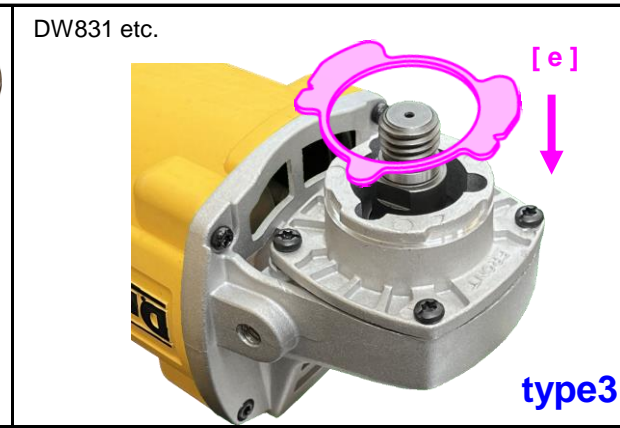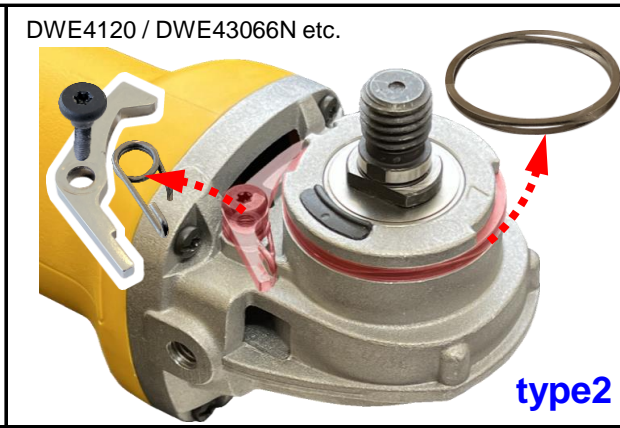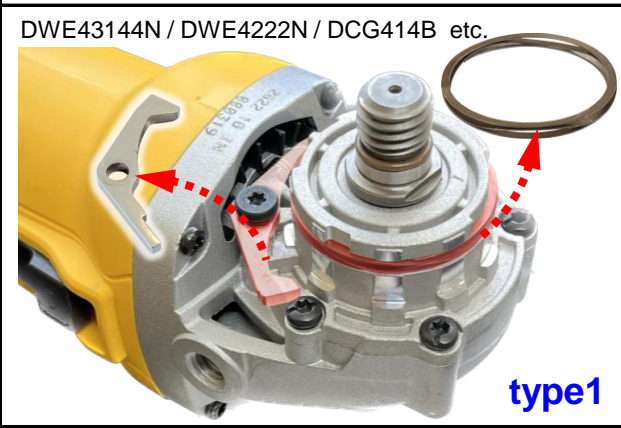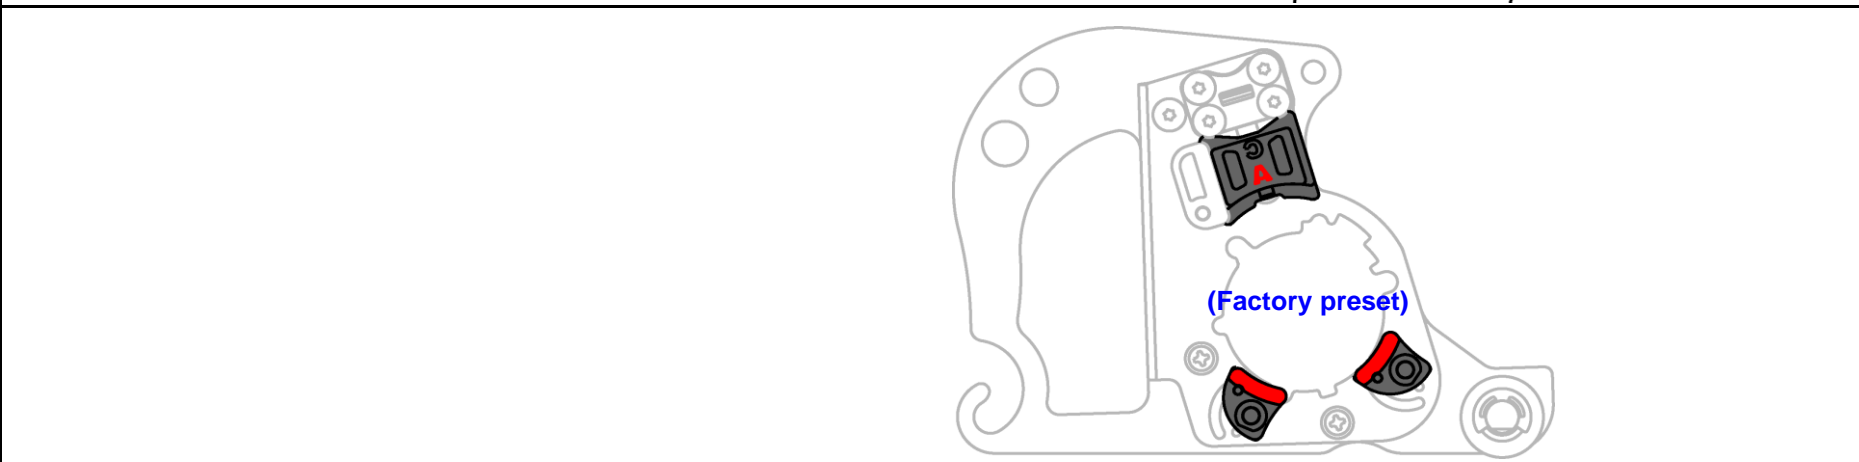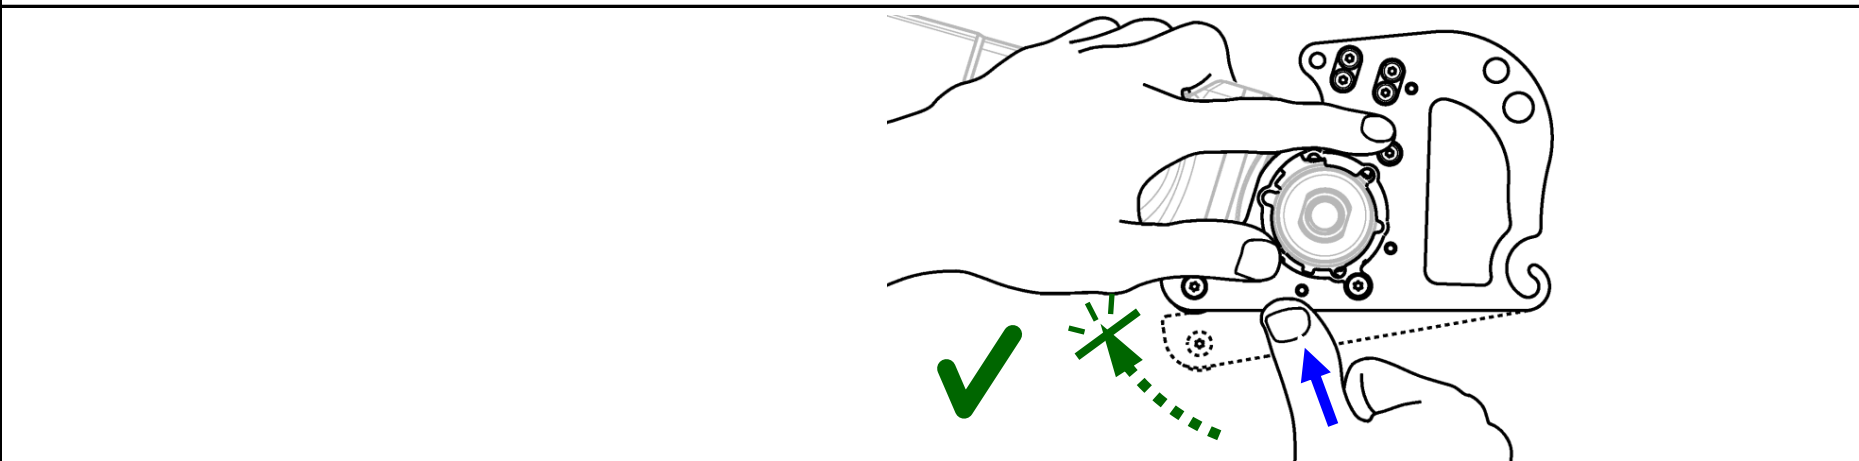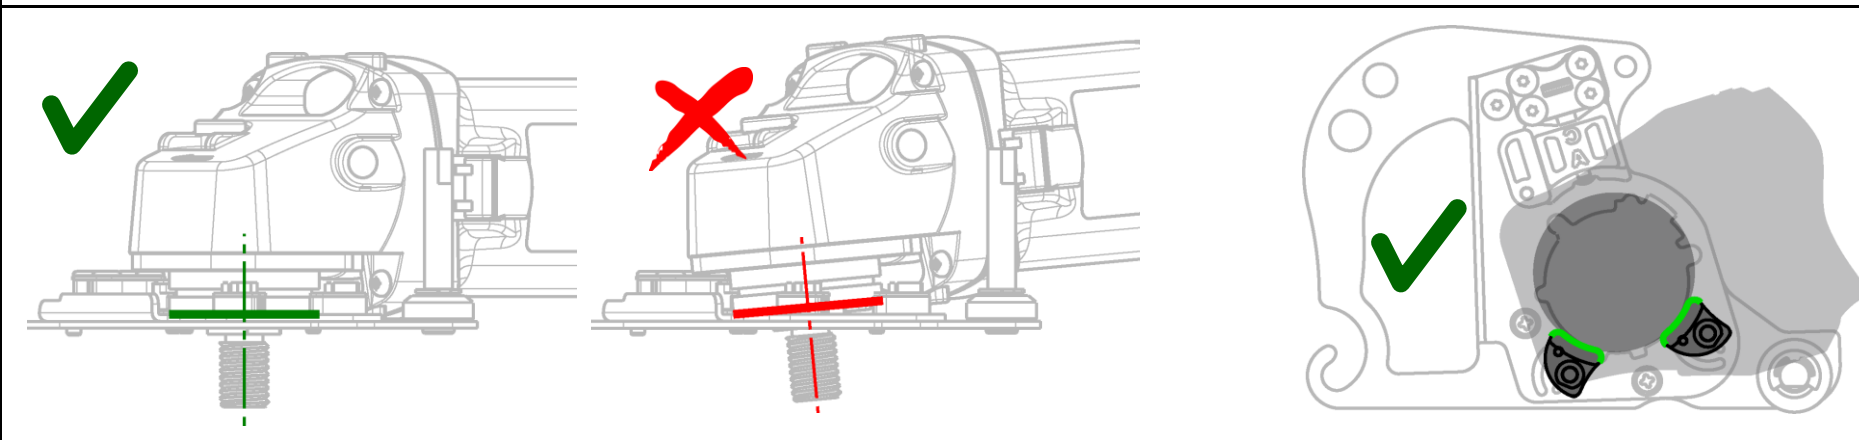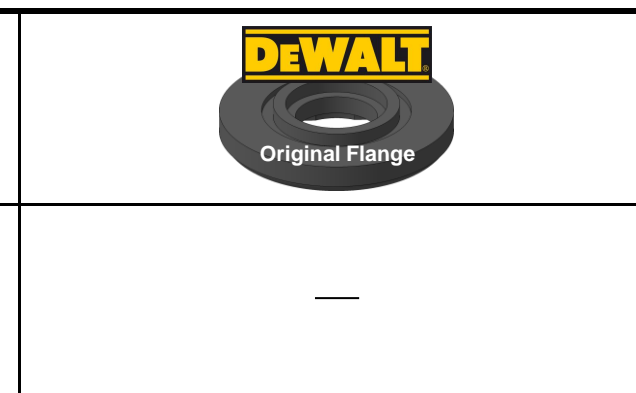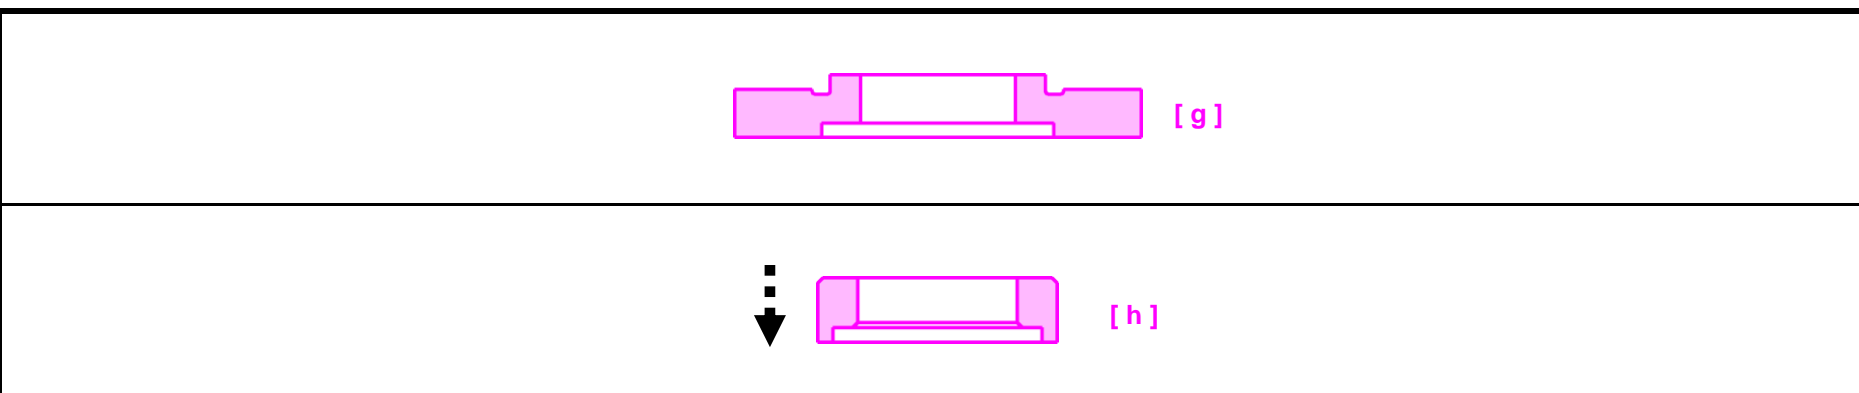

4

Set [h] / [i], [g] or Original Flange, and Blade into the Spindle. Then tighten the Lock Nut by Wrench.

3

Hold [b] and tighten the Bolt with [d] securely.

2

Place [b] on gearcase of the grinder.

[e/f] Some models ONLY.

1

Set Upper / Lower Brackets on [b].

Upper Bracket

Lower Brackets

[b]

[g]

[h]

[i]

[h]

Sold separately

Milwaukee Spacer N400401

Original Flange

(Factory preset)

#15

Milwaukee

6130-33 / 2680 / 6140 type can't be fitted.

Based on the web information as of 2022 Jan.

2980 / 2981 / 6143 etc.

[e]

type1

6121 / 6141 / 6142 etc.

[e]

type2

2888 / 2889 etc.

















[e]





type3

6146 / 6147 etc.




[f]

 type4

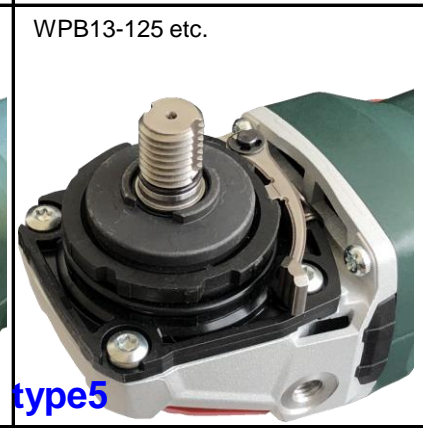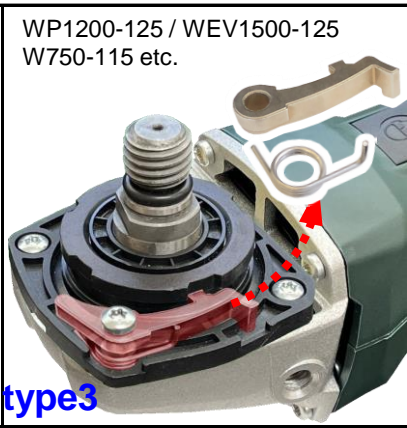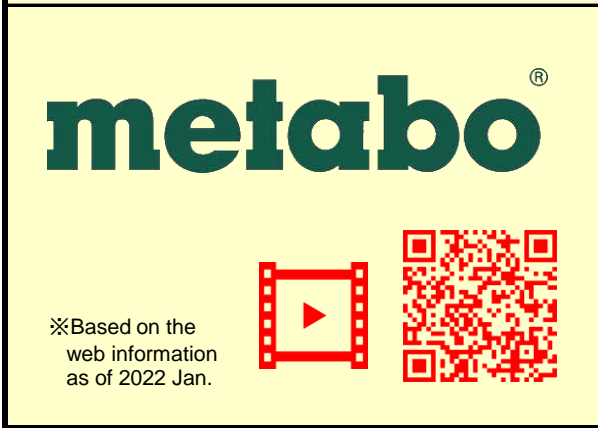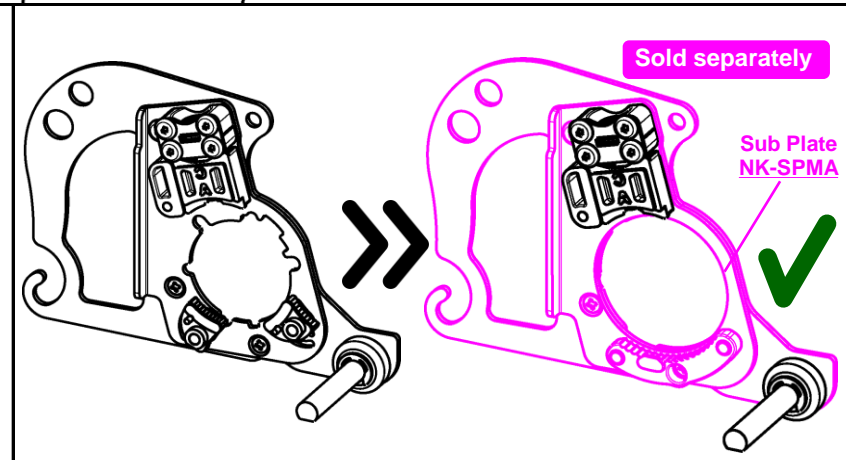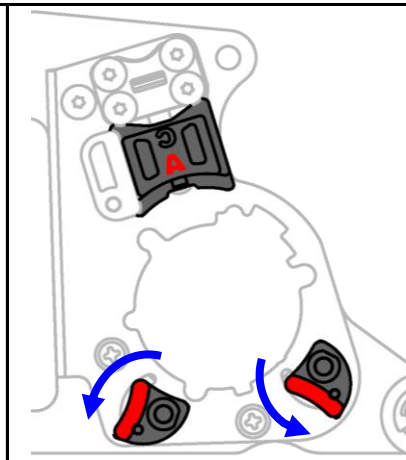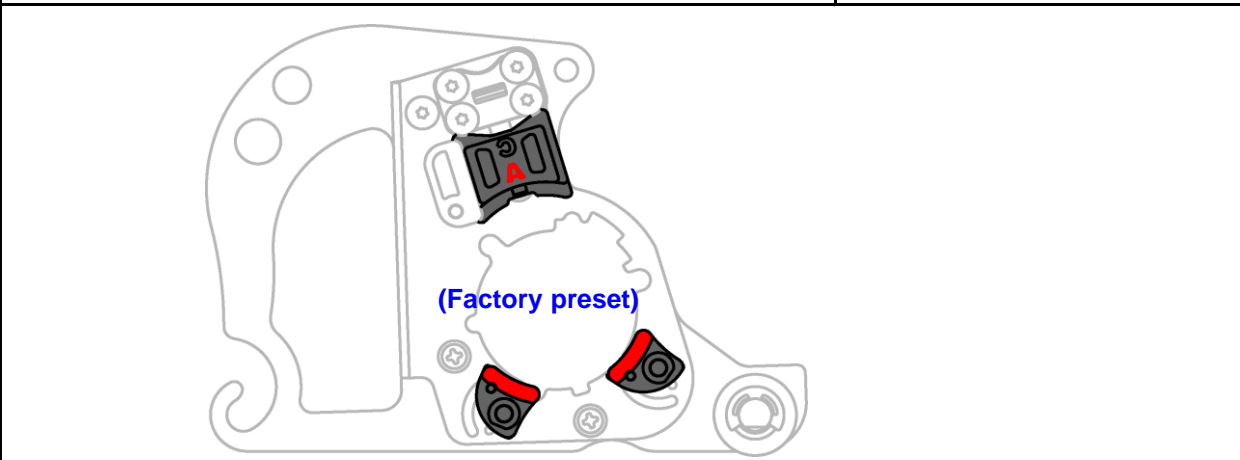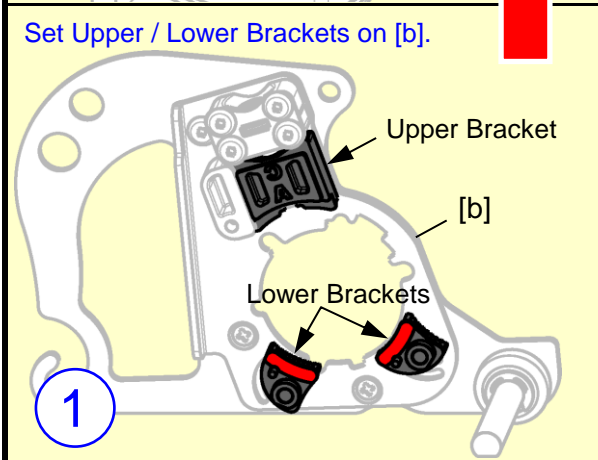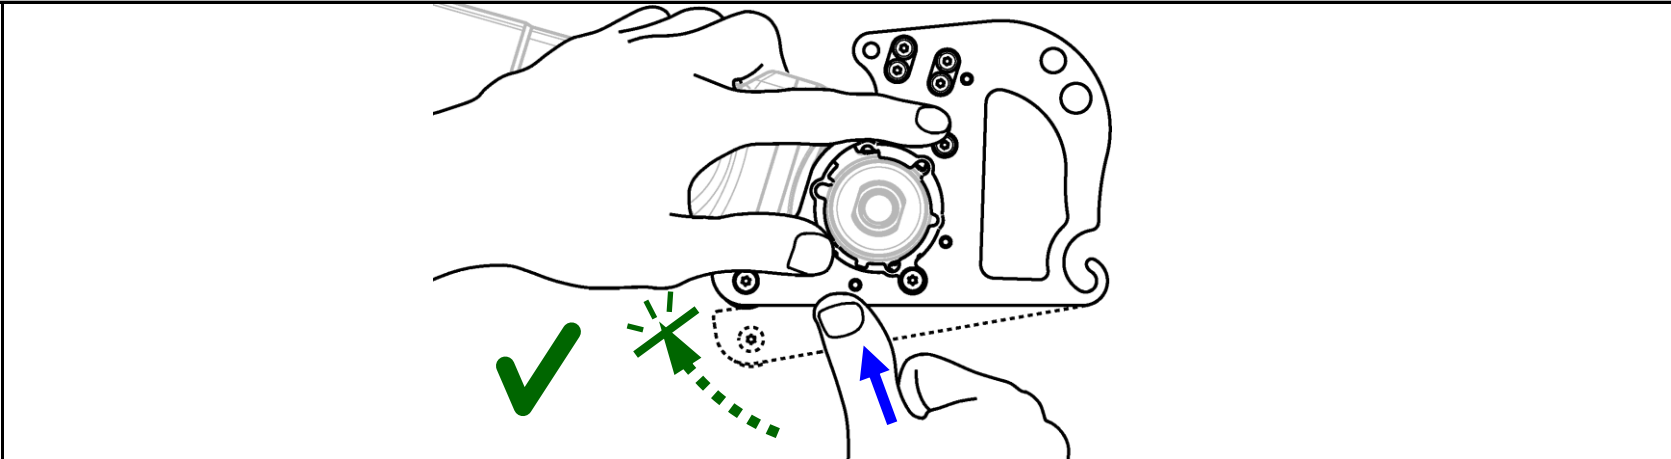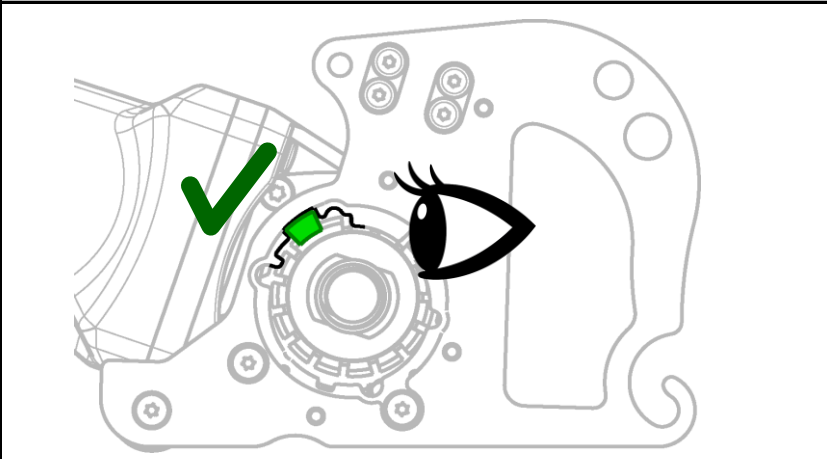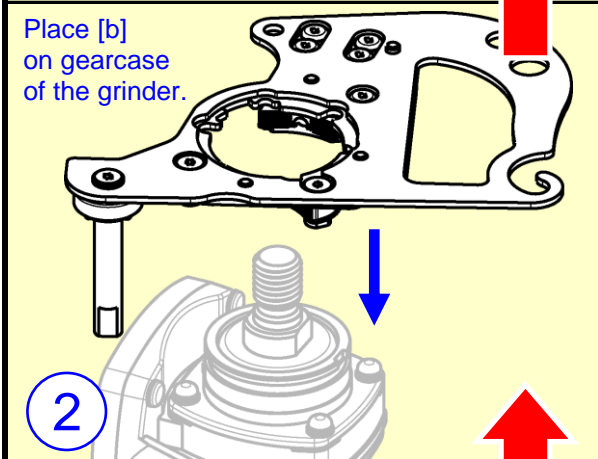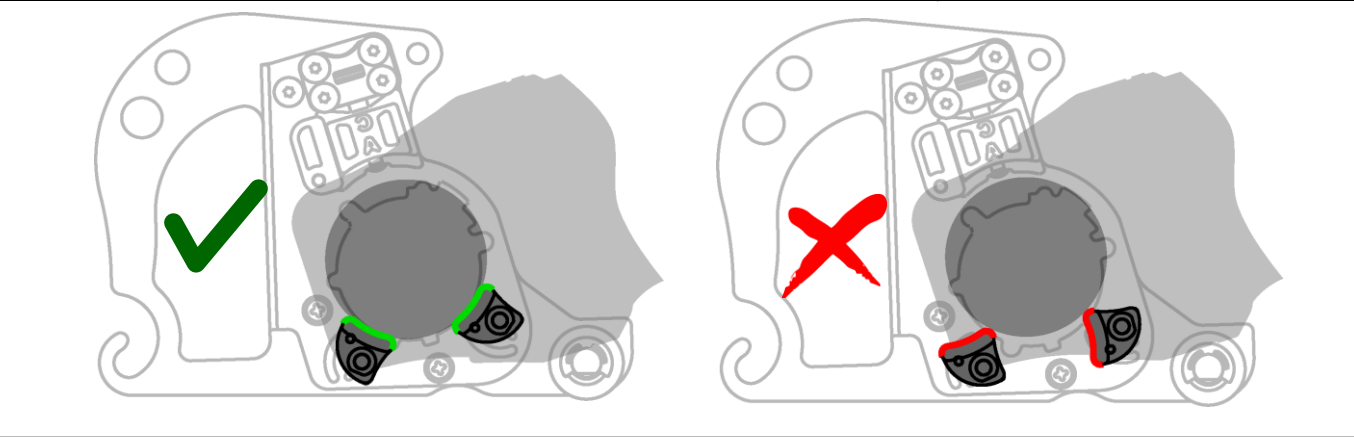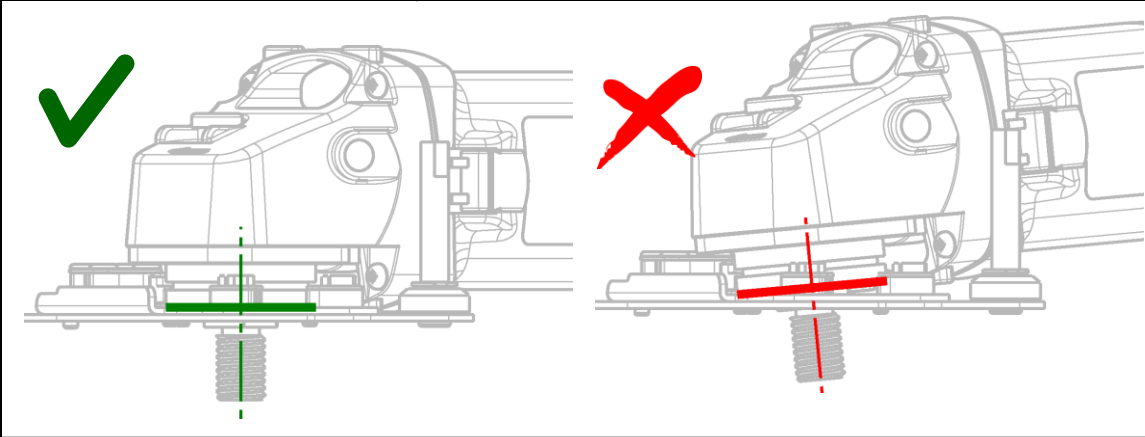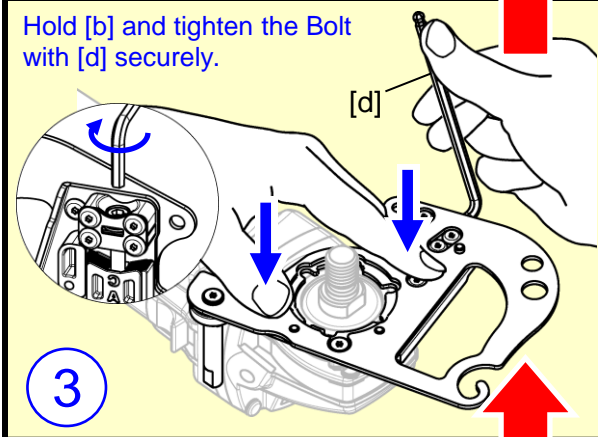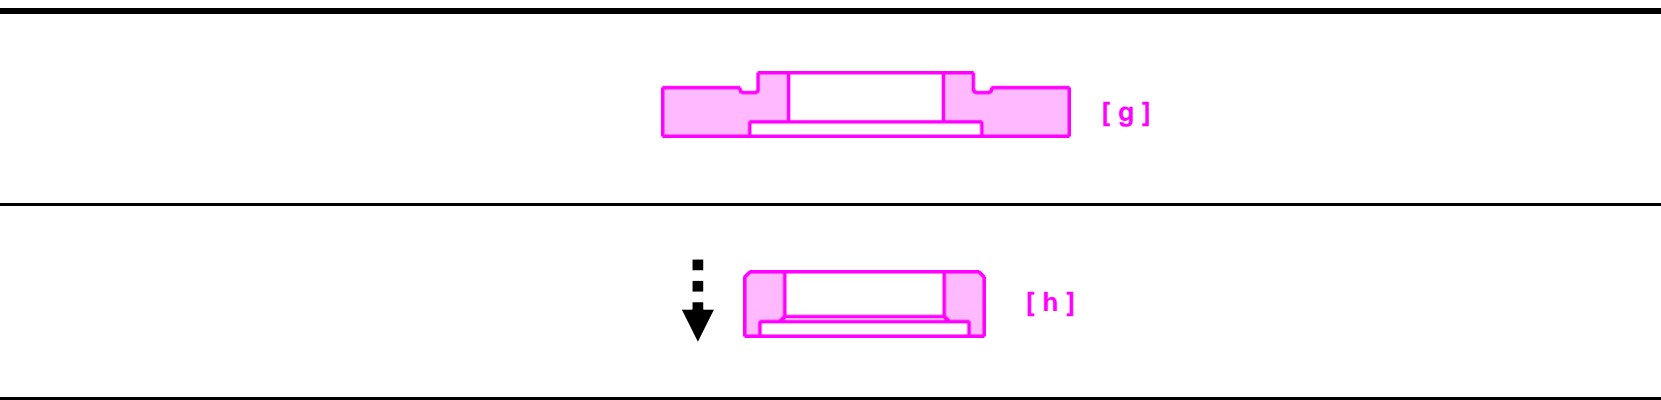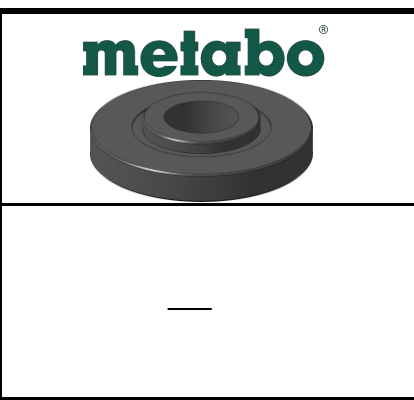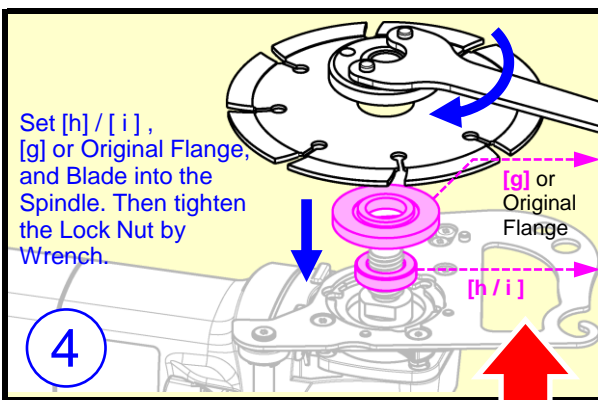

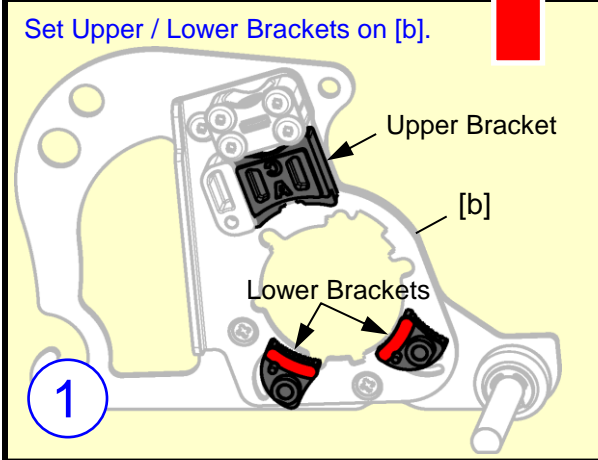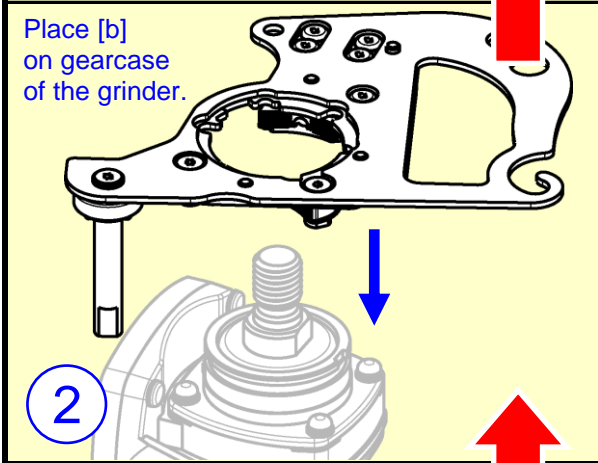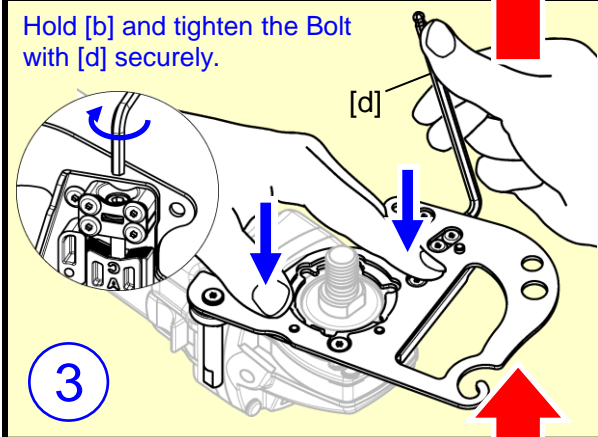
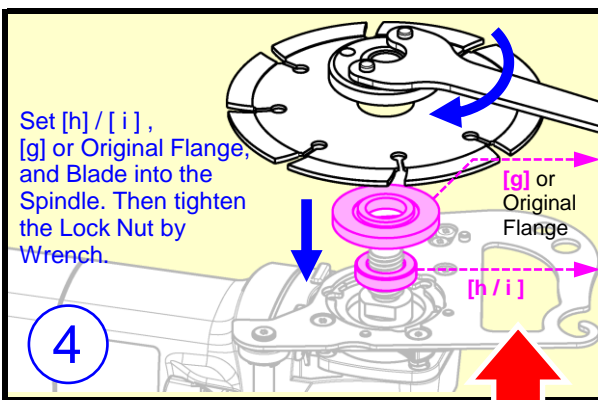


metabo HPT

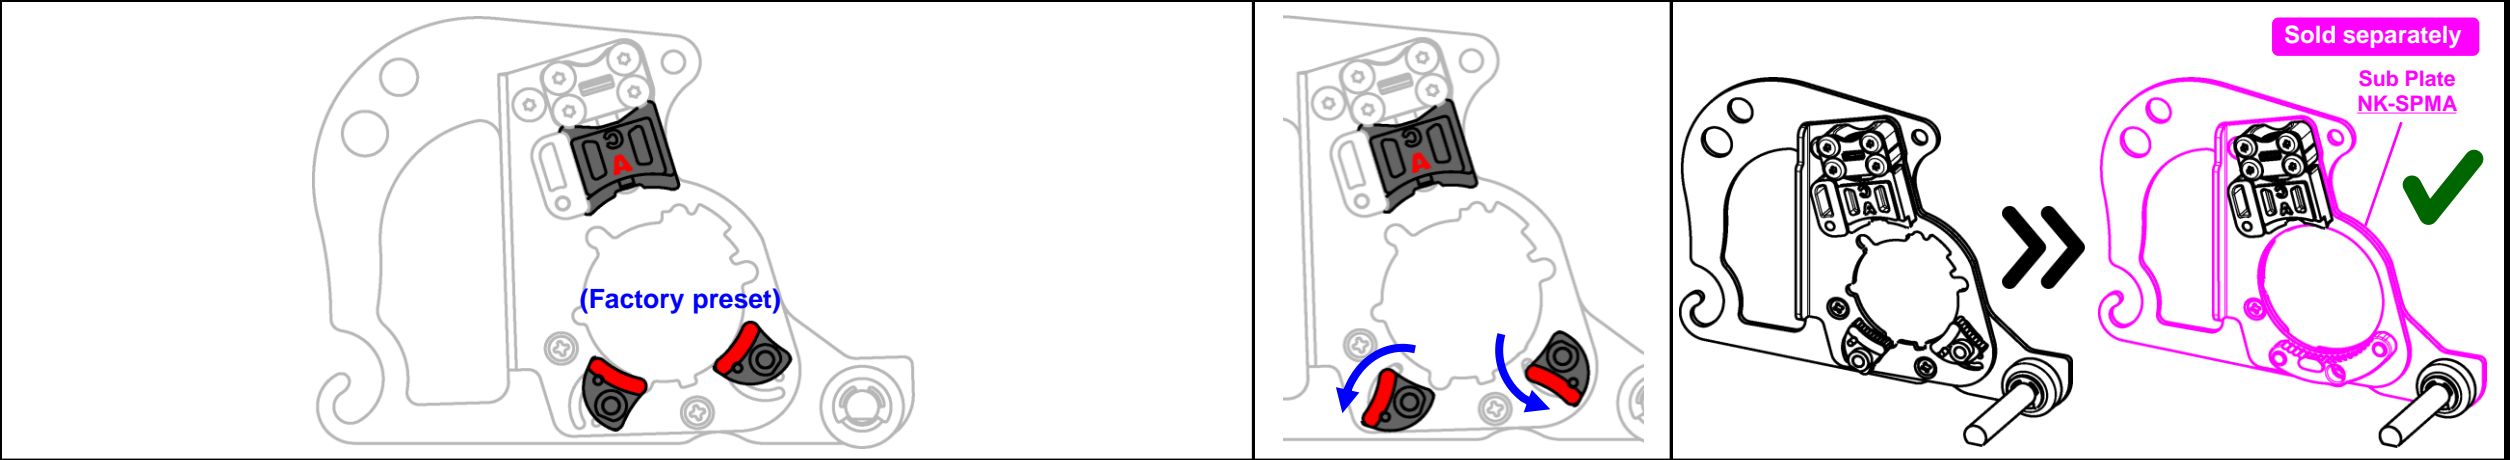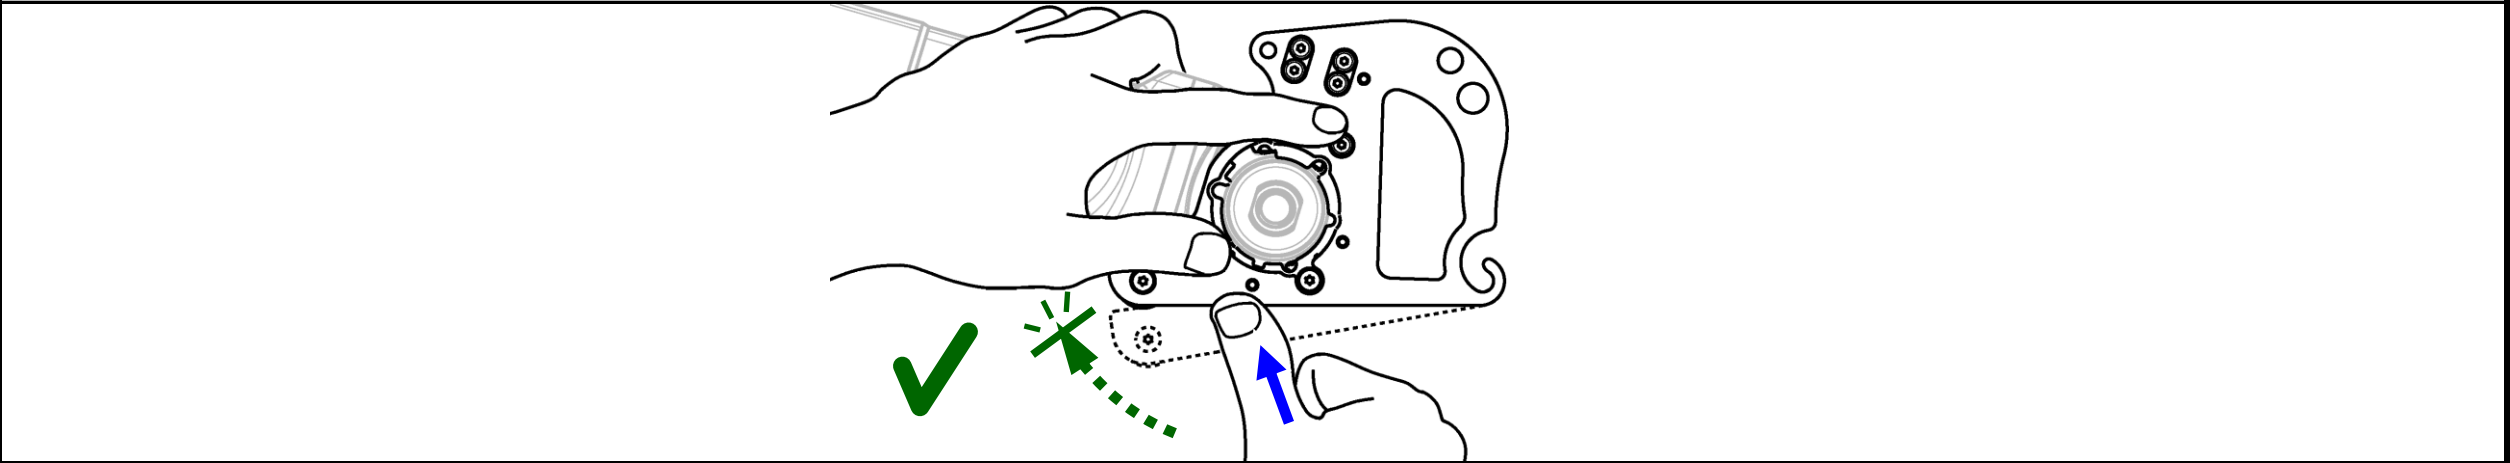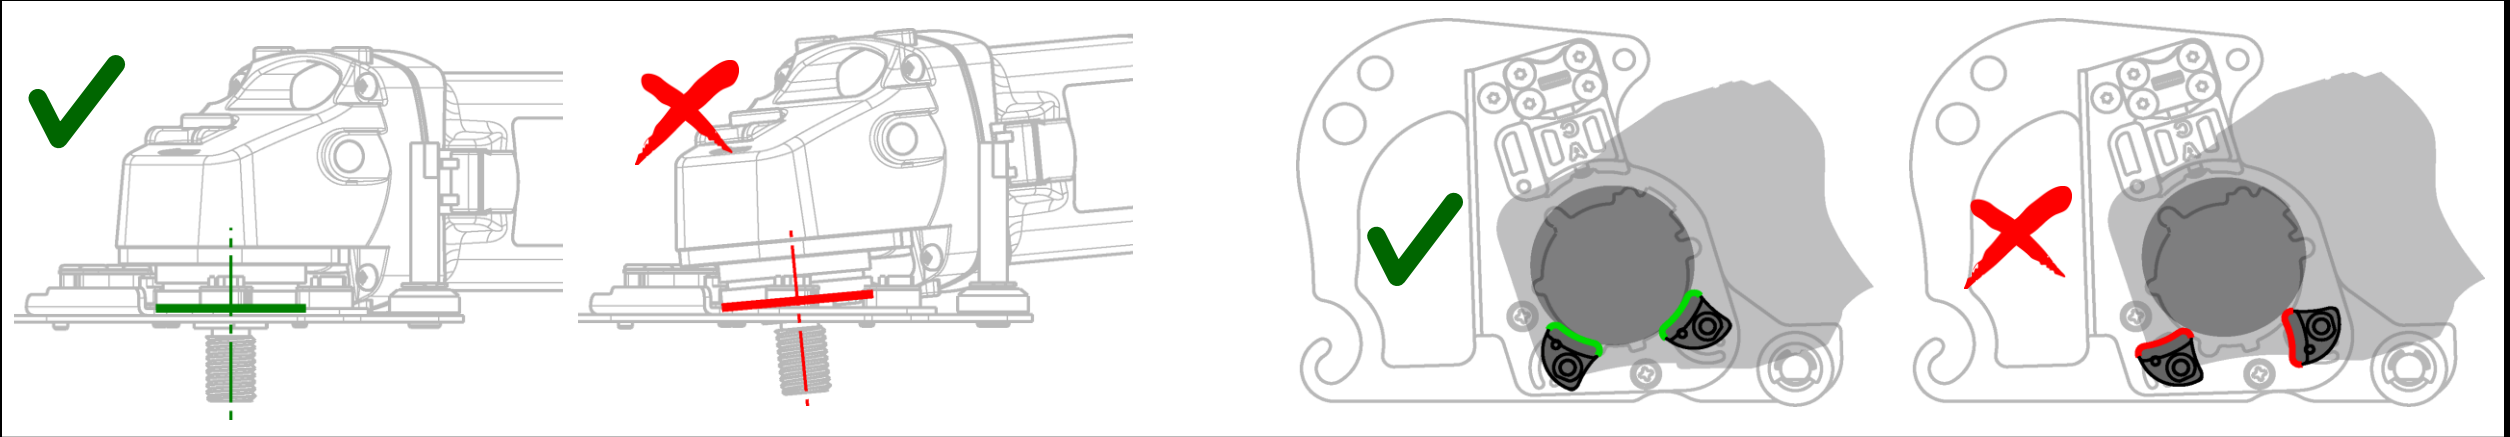

metabo HPT

※Based on the web information as of 2022 Jan.

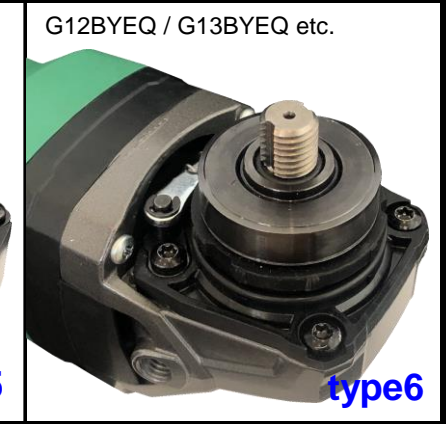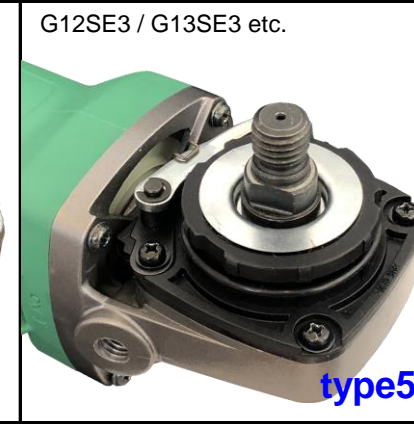



Check the
instruction
video.

