 


Set [g/h/i] Spacer, [f] Flange, Grinding Cup, then tighten [e] Lock-Nut with Wrench.

 
※In the case of h21mm Grinding Cup.

4

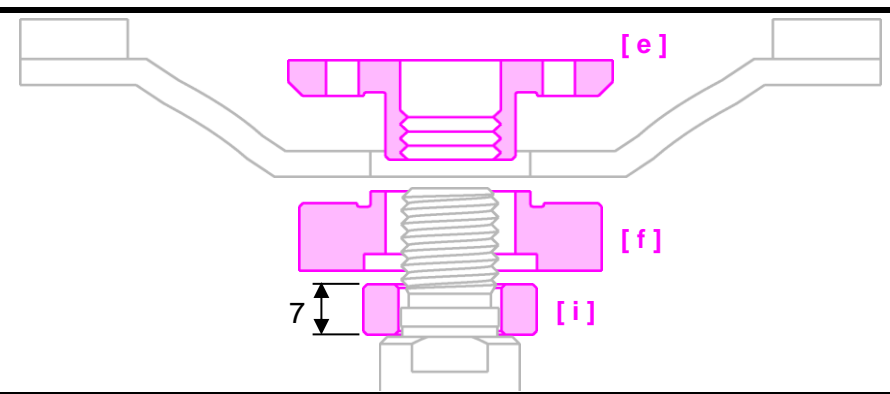


Hold the Inner Plate of [a] and tighten the Bolt with [d] Wrench securely.

3

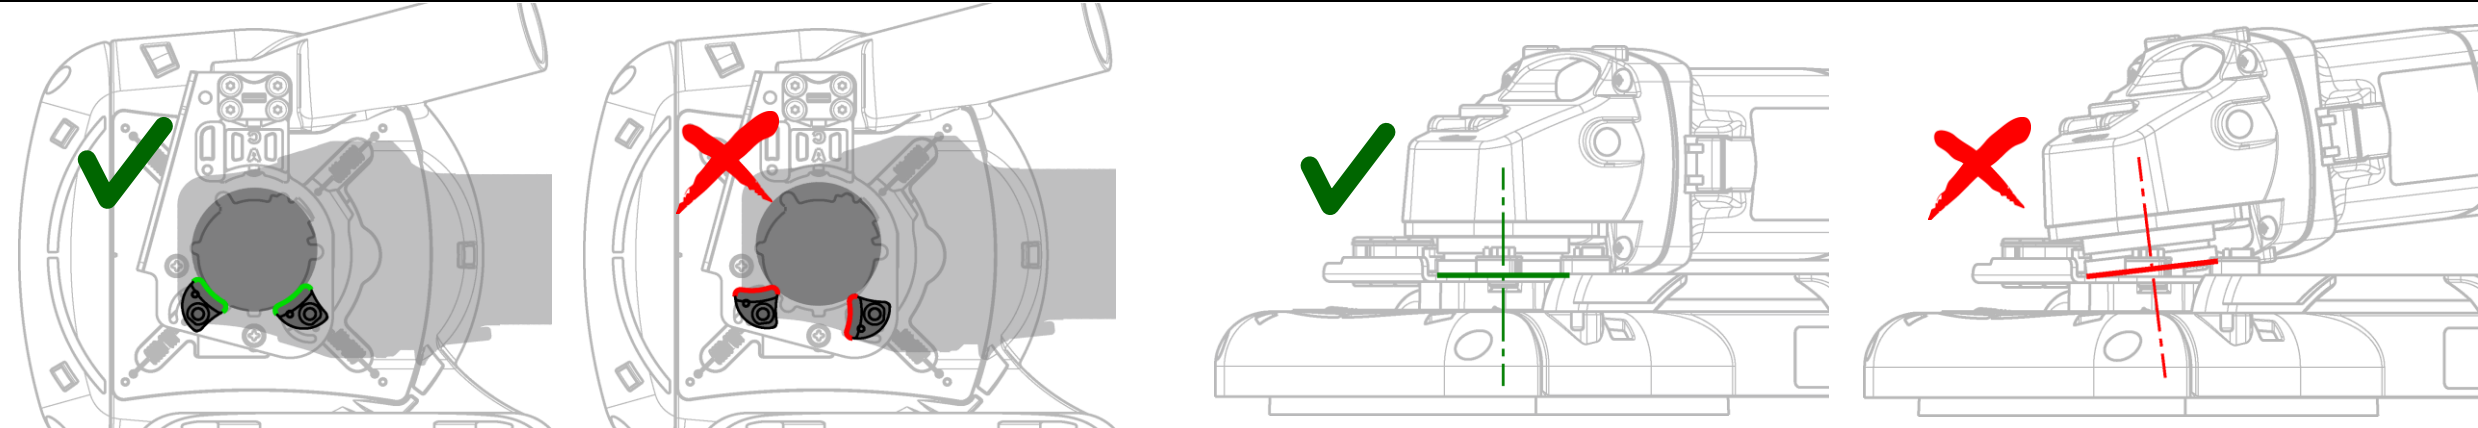


Place [a] on the gearcase of the Grinder.

 2

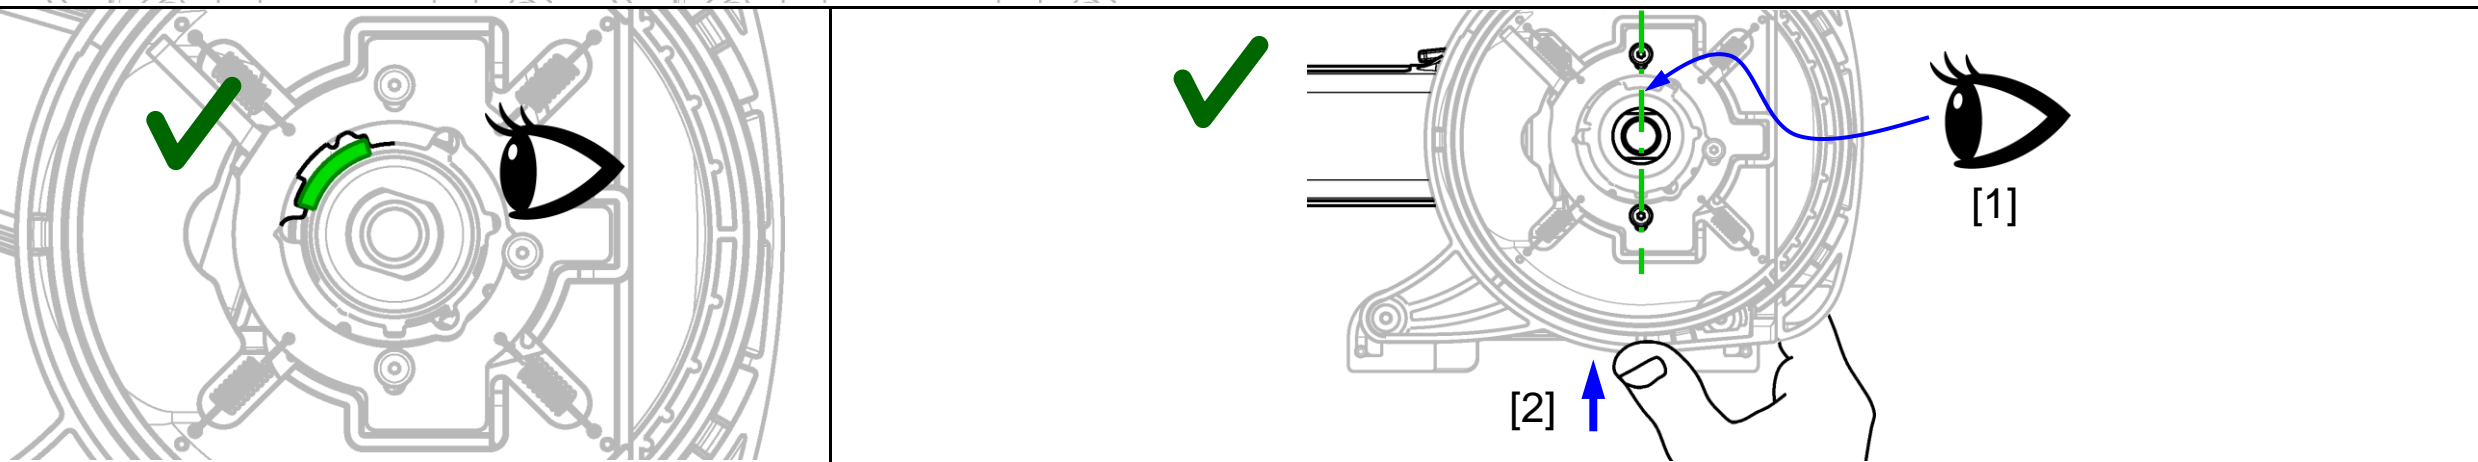

Set Upper / Lower Brackets at [a] Main Unit.






 
1

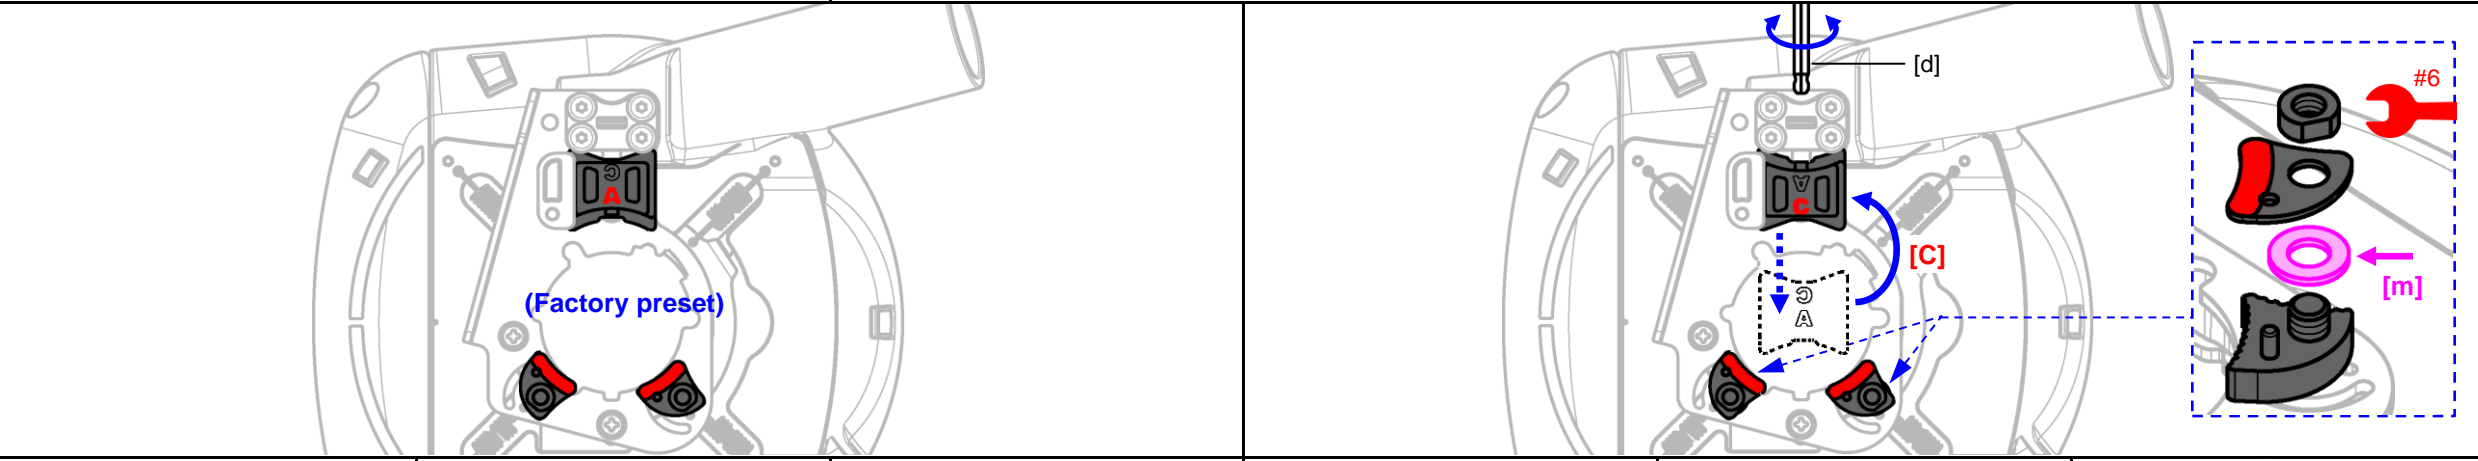

**Makita**

⚠ XLOCK model can't be fitted.

     
 
※Based on the web information as of 2022 Jan.

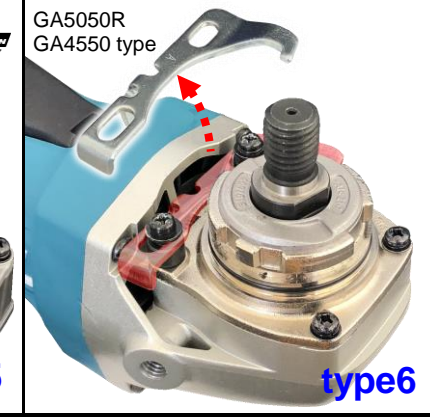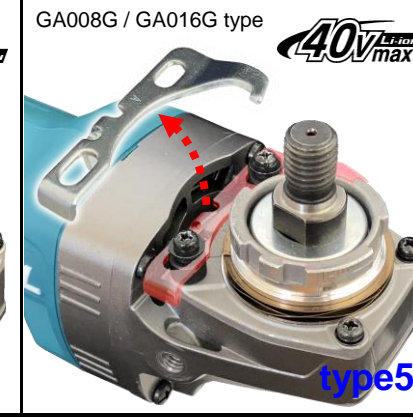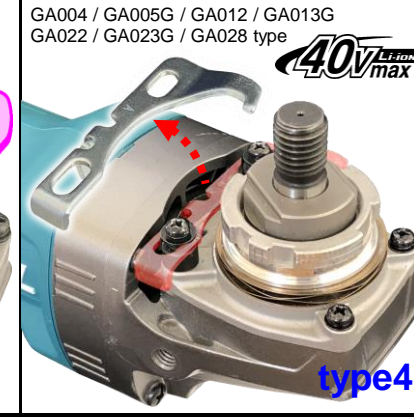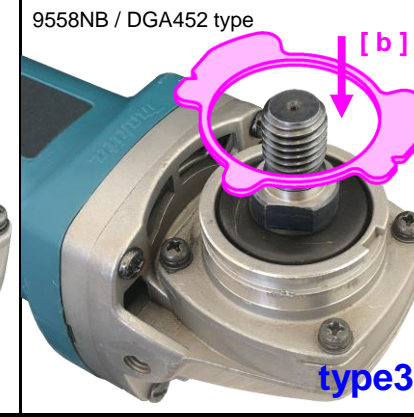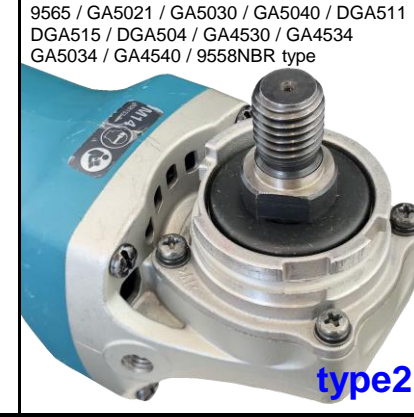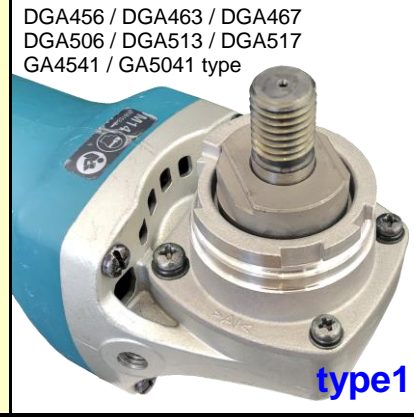

Set [g/h/i] Spacer, [f] Flange, Grinding Cup, then tighten [e] Lock-Nut with Wrench.

※In the case of h21mm Grinding Cup.

  4

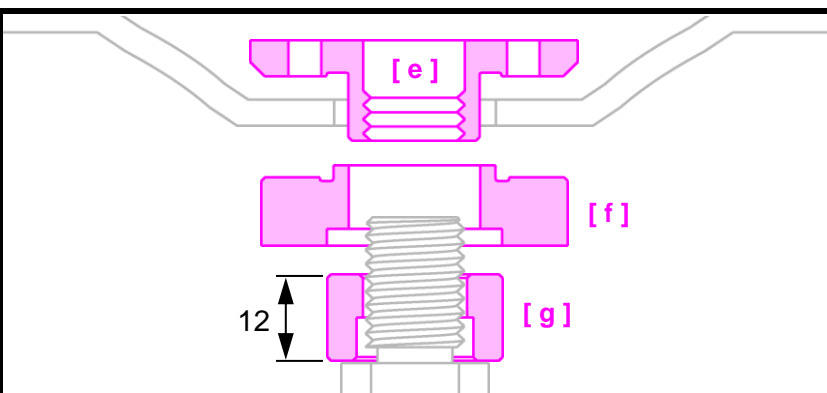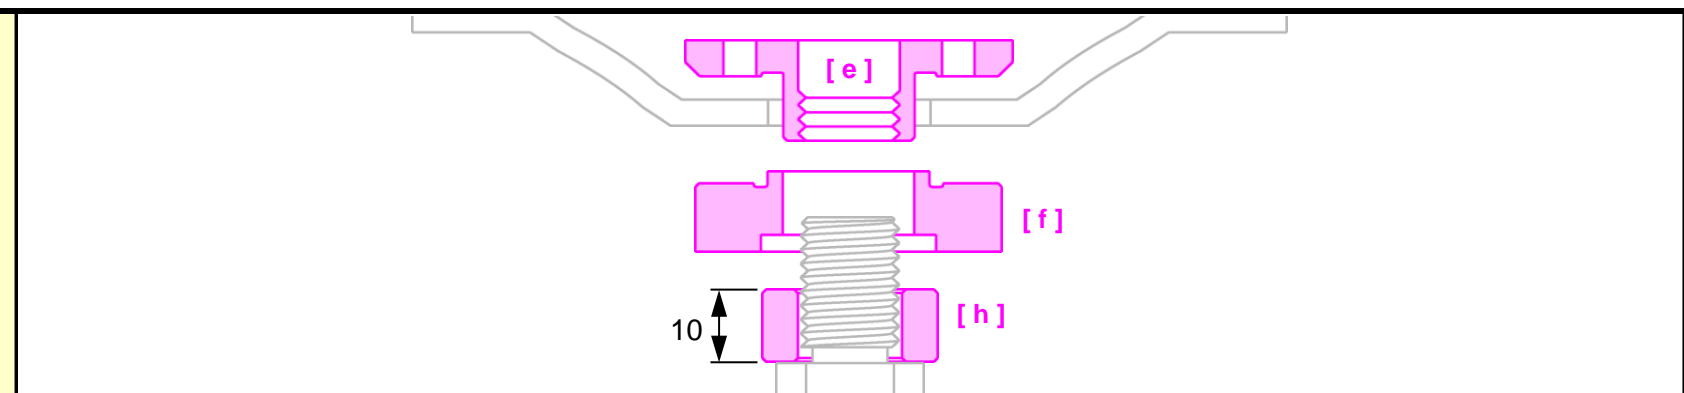


Hold the Inner Plate of [a] and tighten the Bolt with [d] Wrench securely.

Inner Plate


Bolt

 3

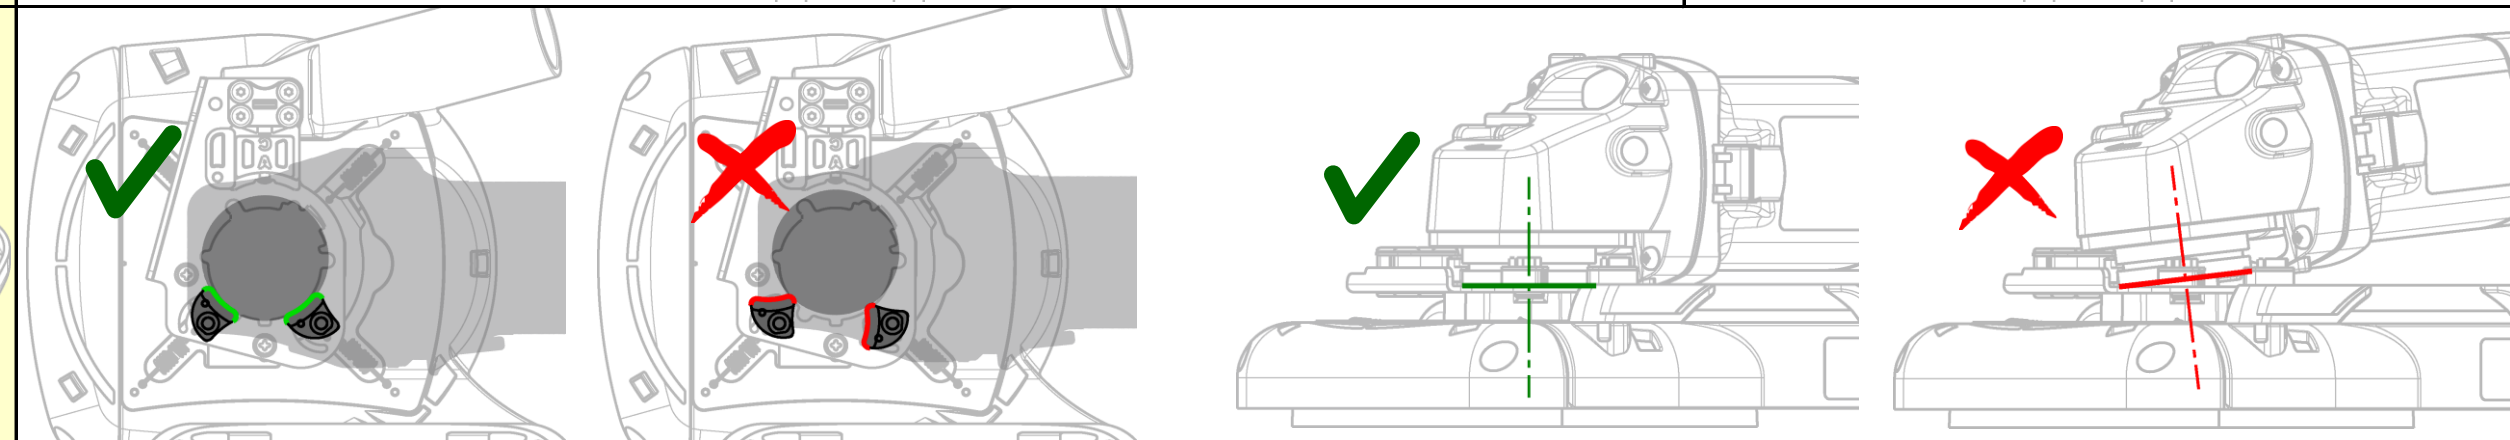

Place [a] on the gearcase of the Grinder.

 2

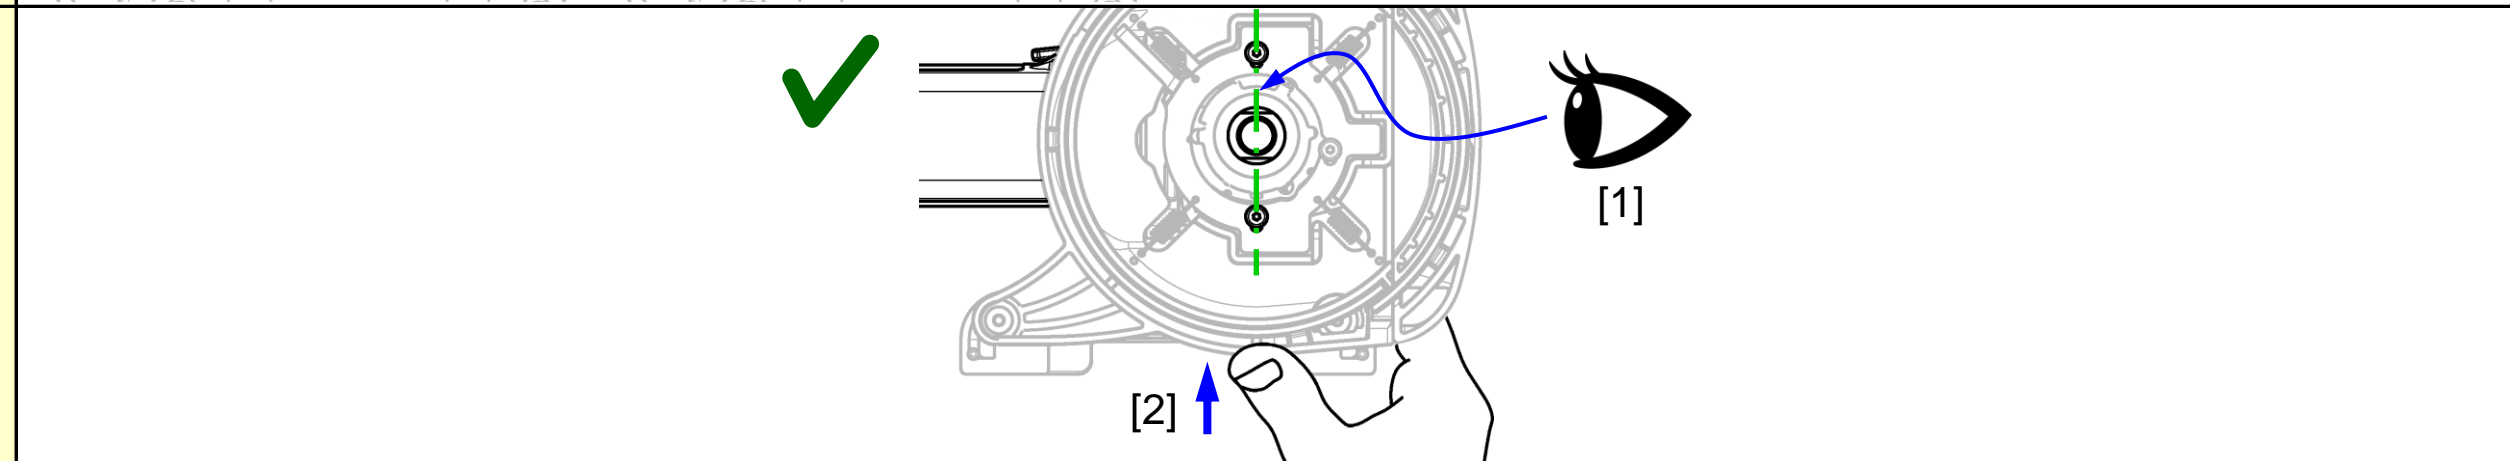


Set Upper / Lower Brackets at [a] Main Unit.

Upper Bracket

Lower Brackets

[a]


 
1

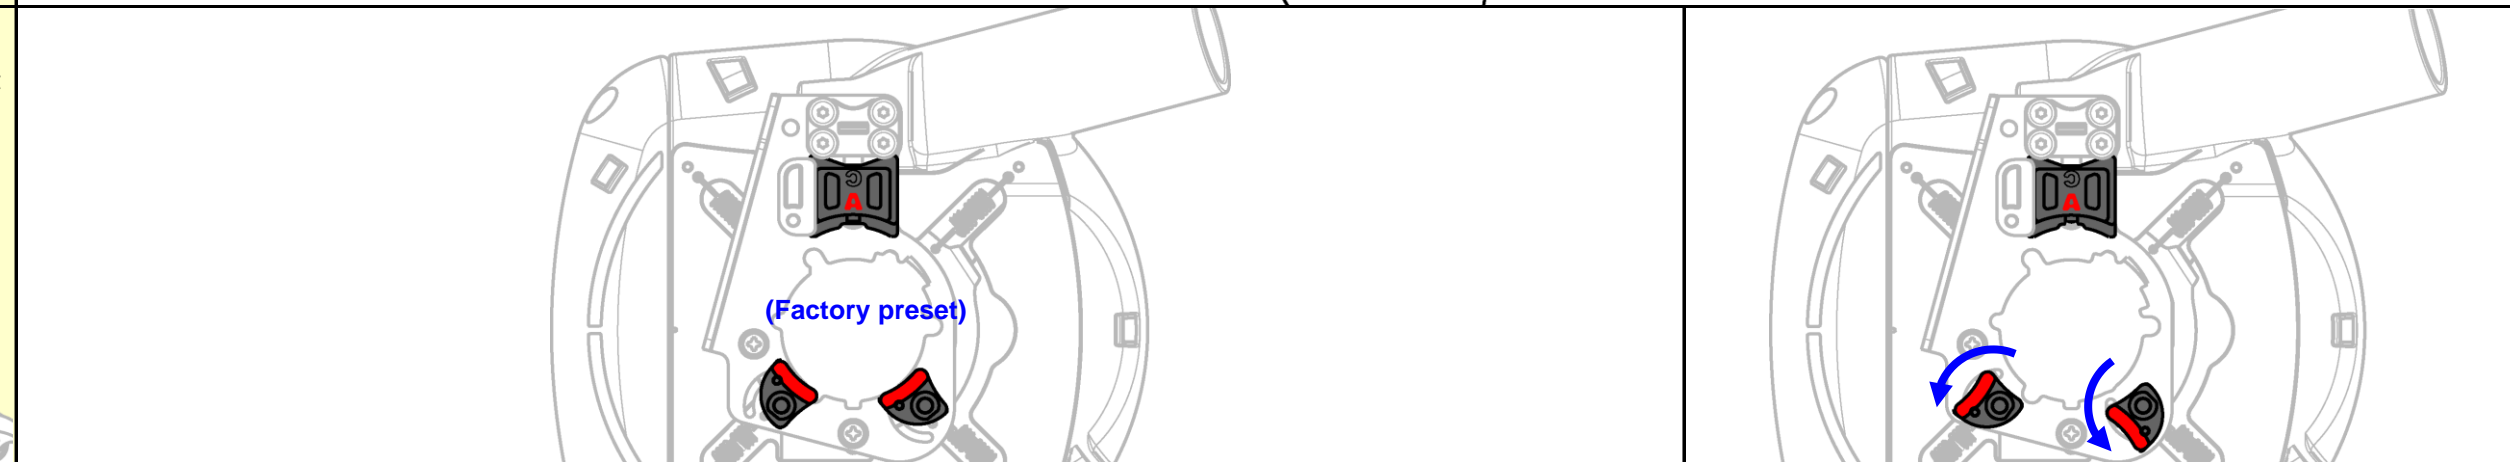

**BOSCH**

⚠ XLOCK model can't be fitted.


 
 
※Based on the web information as of 2022 Jan.

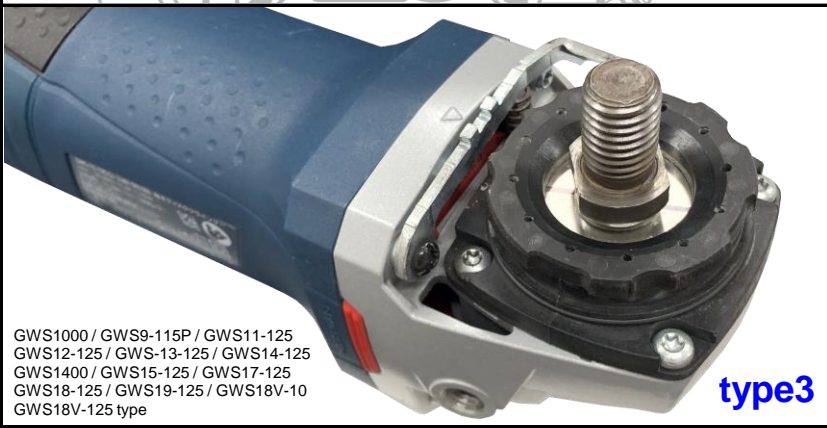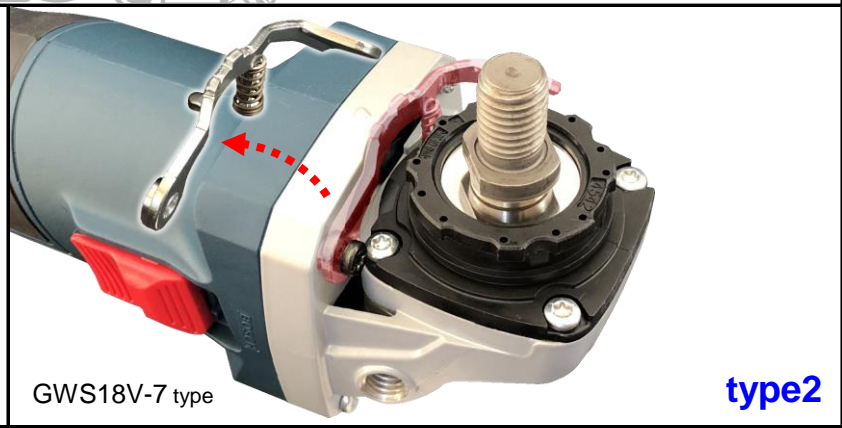

Set [g/h/i] Spacer, [f] Flange, Grinding Cup, then tighten [e] Lock-Nut with Wrench.

※In the case of h21mm Grinding Cup.

   4

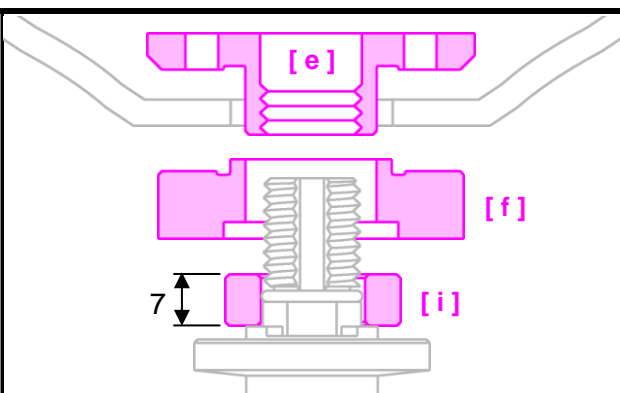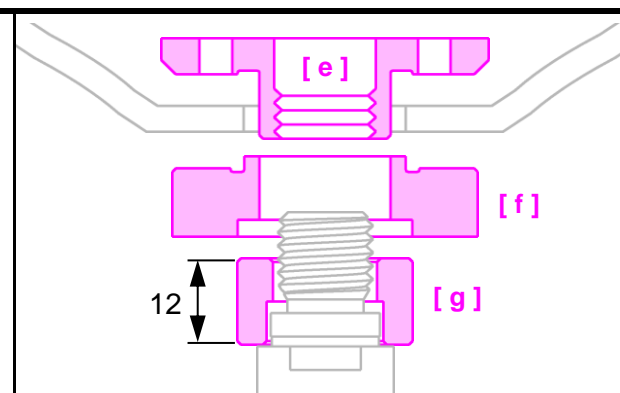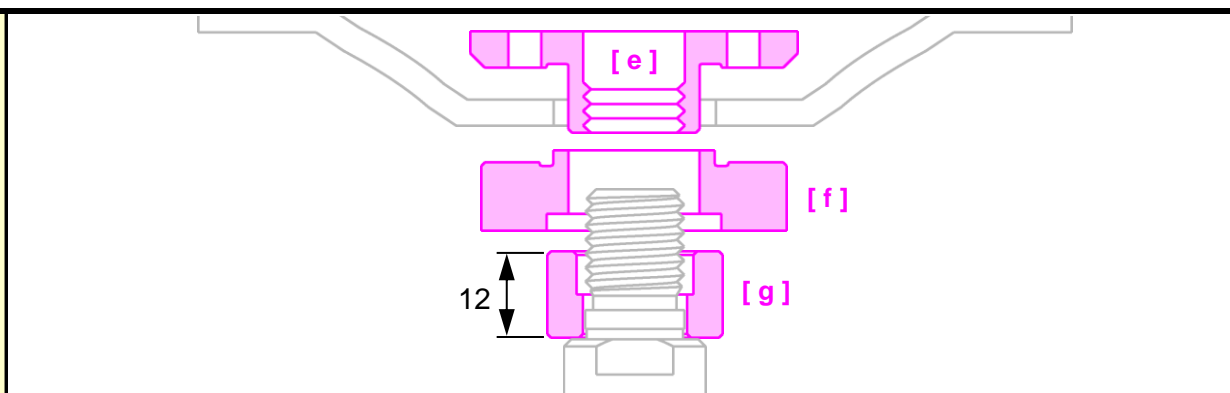


Hold the Inner Plate of [a] and tighten the Bolt with [d] Wrench securely.

Inner Plate

Bolt

 
3

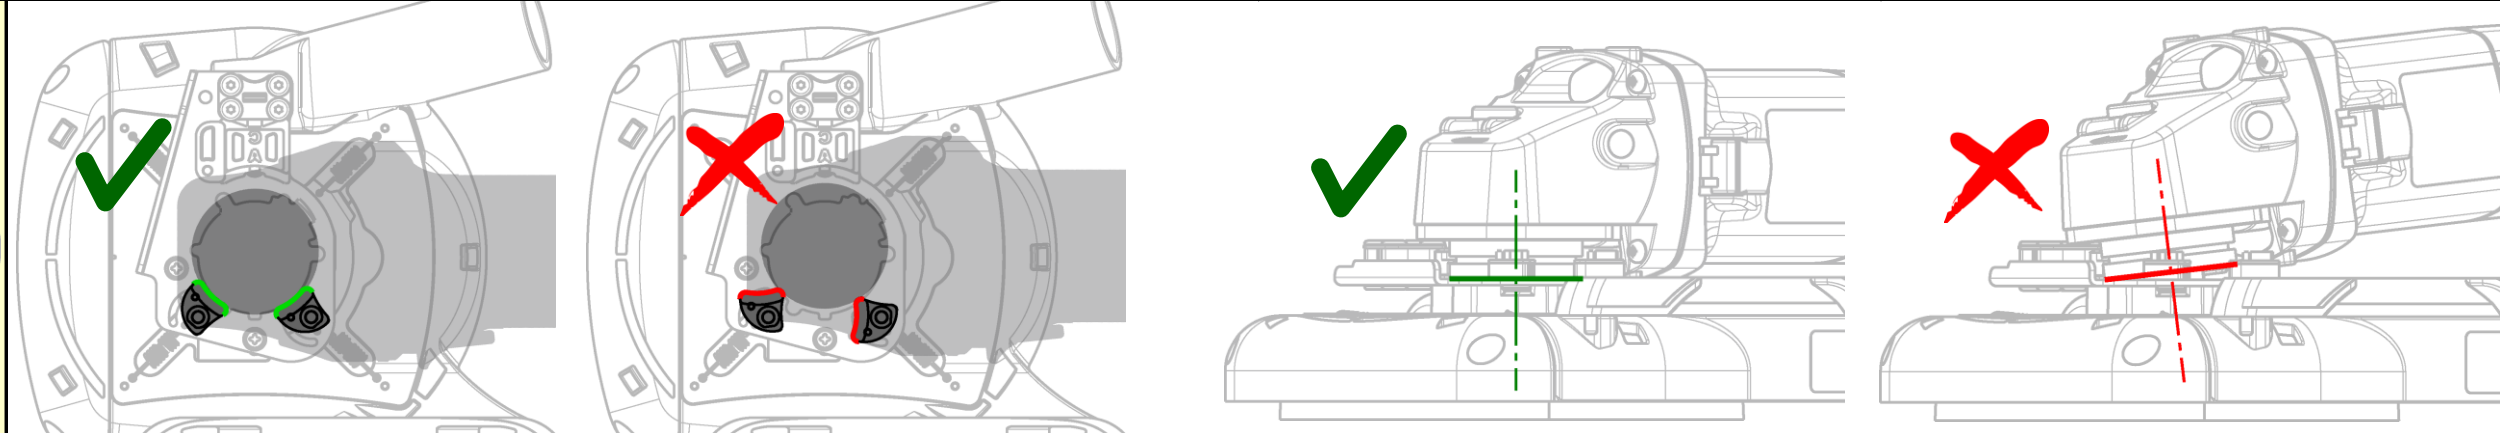

Place [a] on the gearcase of the Grinder.

Some models ONLY.

 2

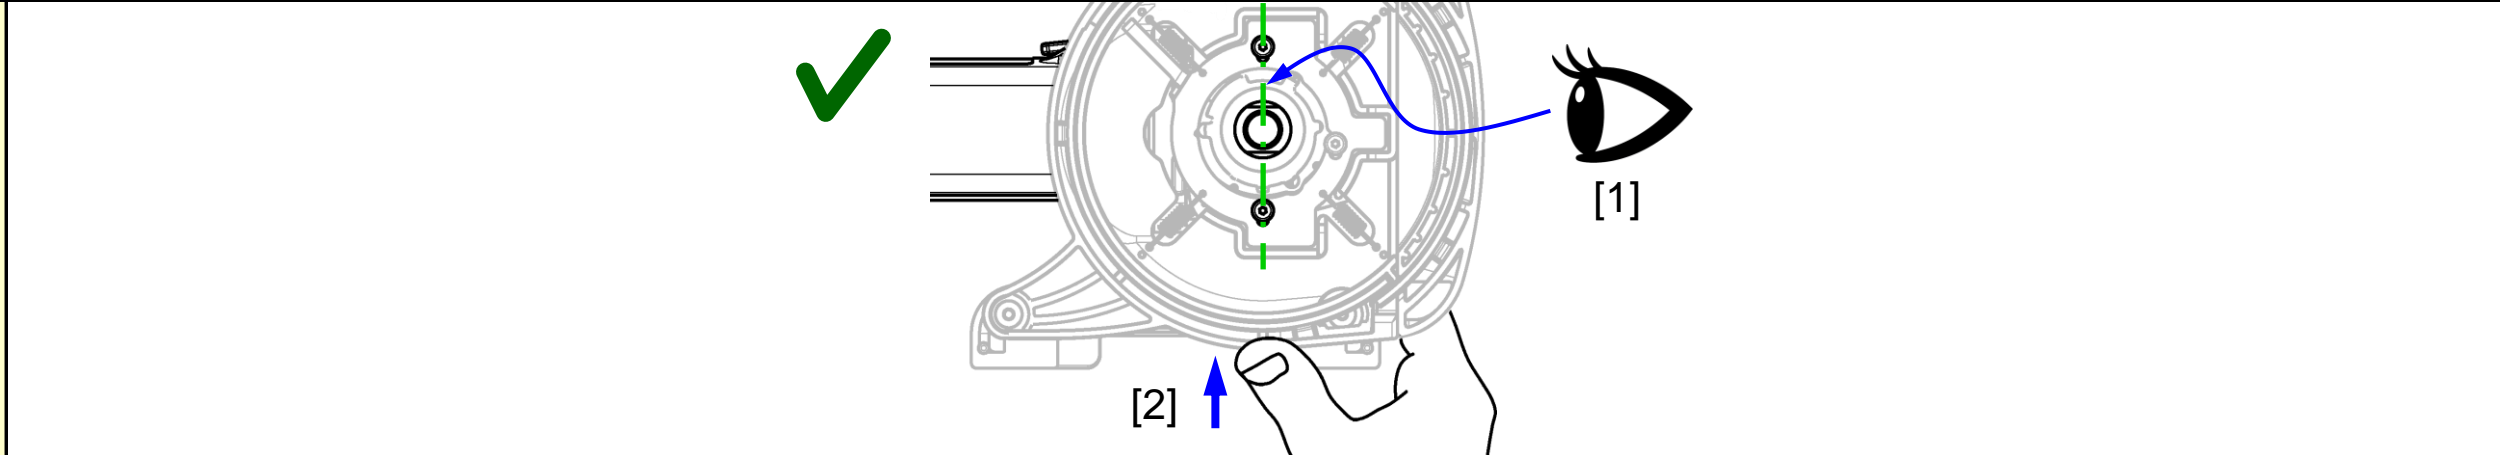


Set Upper / Lower Brackets at [a] Main Unit.

Upper Bracket



Lower Brackets

 1

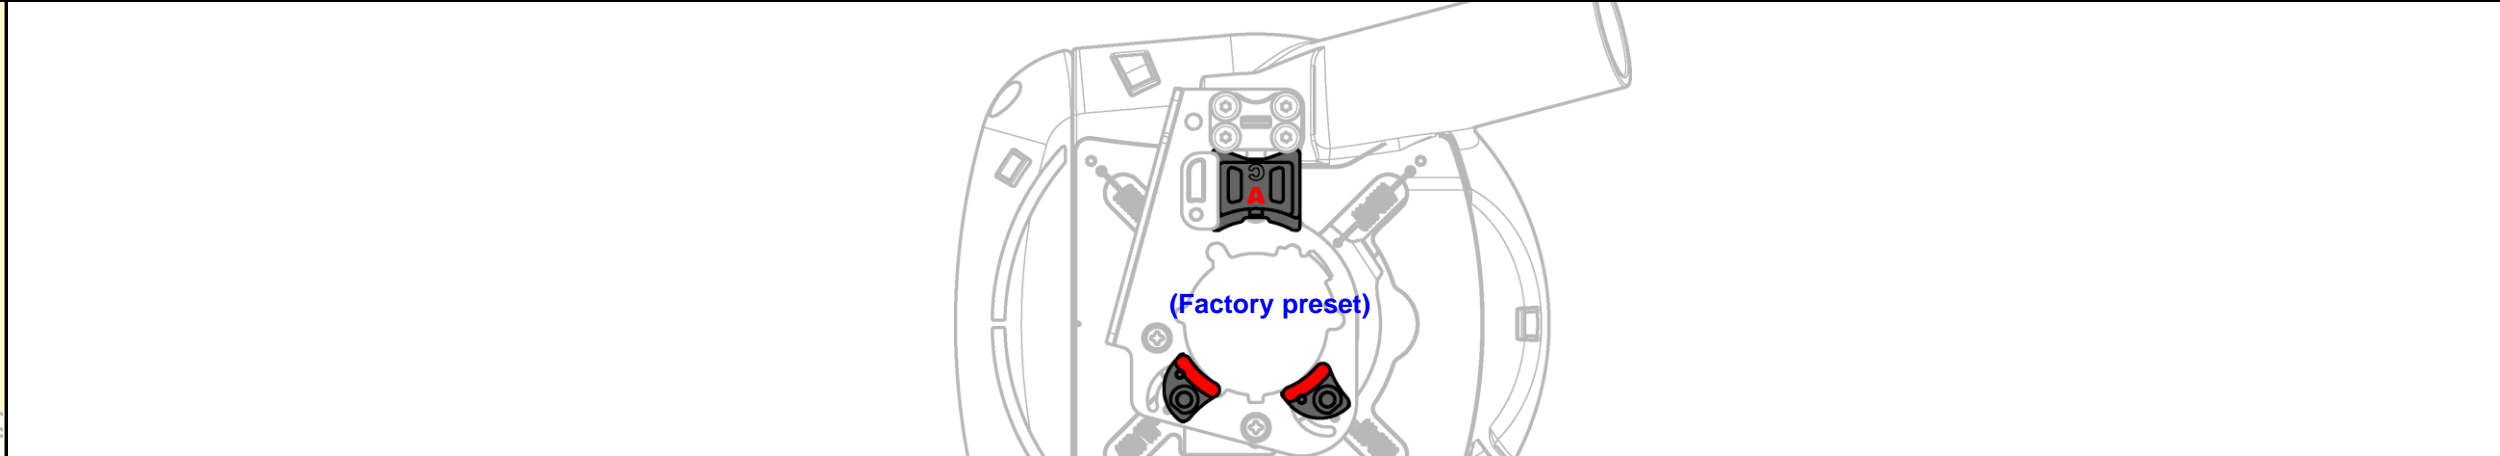

⚠ D28137 / DCG405FN can't be fitted.

 
 
※Based on the web information as of 2022 Jan.

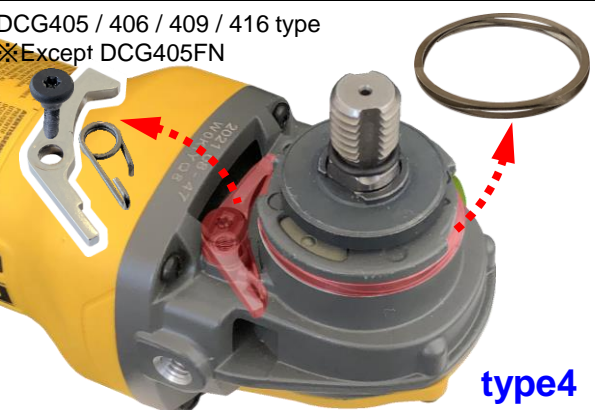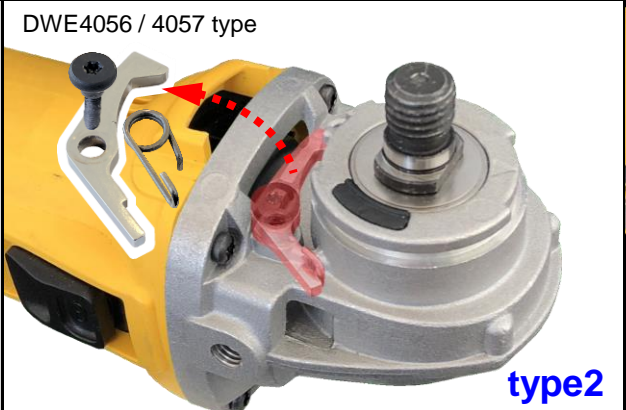

Set [g/h/i] Spacer, [f] Flange, Grinding Cup, then tighten [e] Lock-Nut with Wrench.

※In the case of h21mm Grinding Cup.

  4

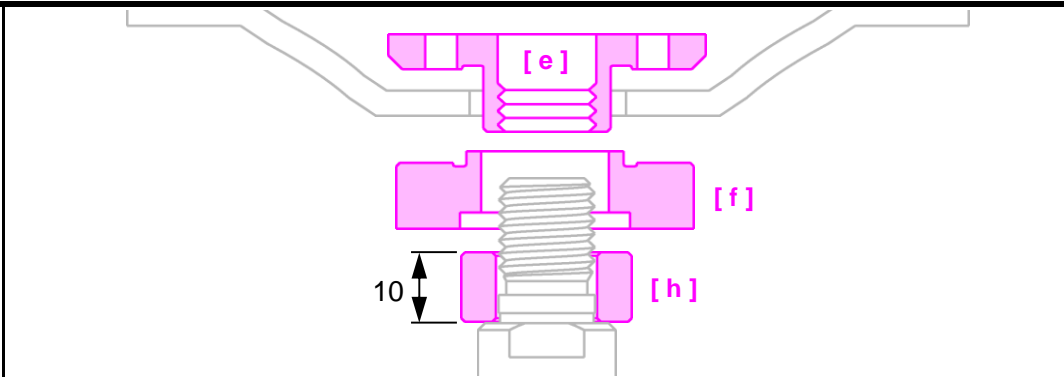
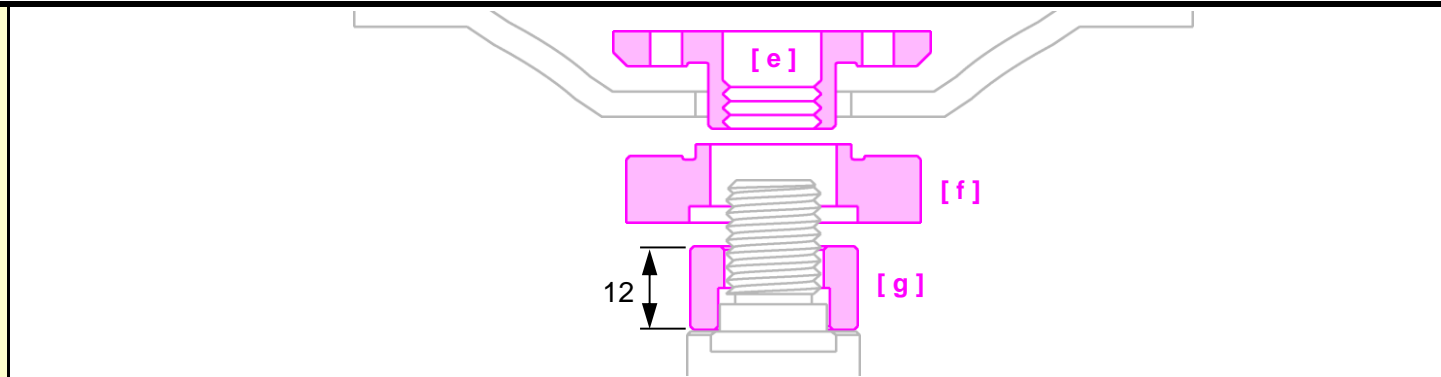


Hold the Inner Plate of [a] and tighten the Bolt with [d] Wrench securely.

Inner Plate [a]

Bolt


 
 
3

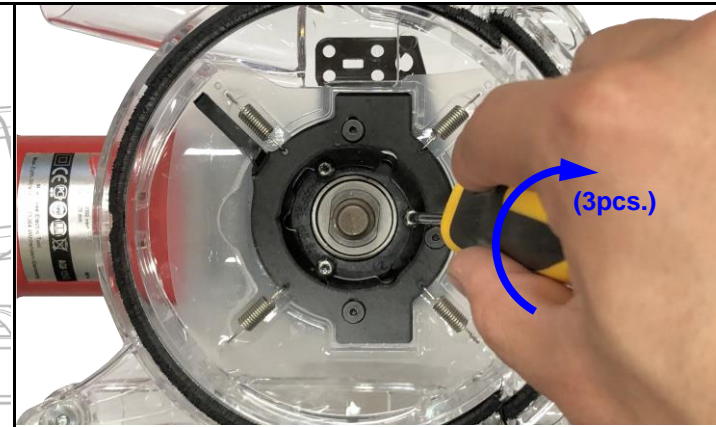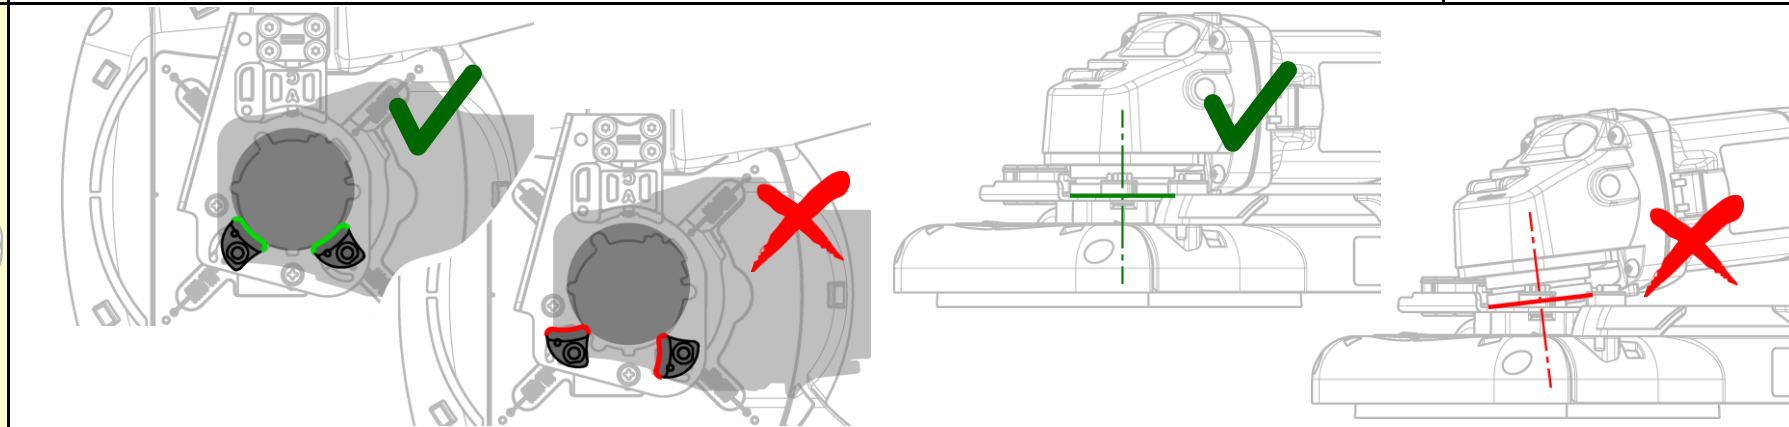

Place [a] on the gearcase of the Grinder.

[b/c] (Some models ONLY.)

   2

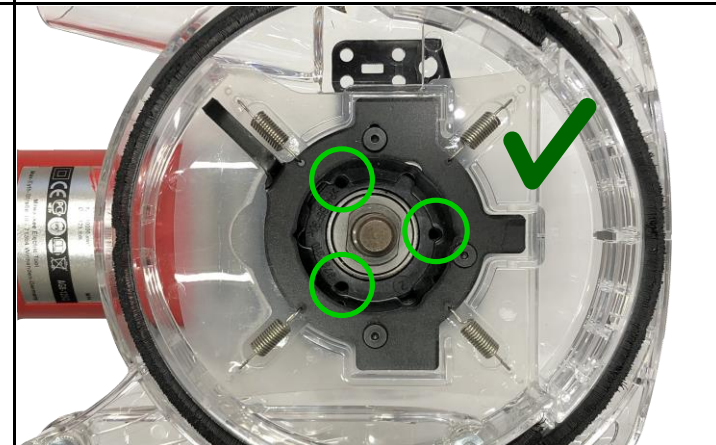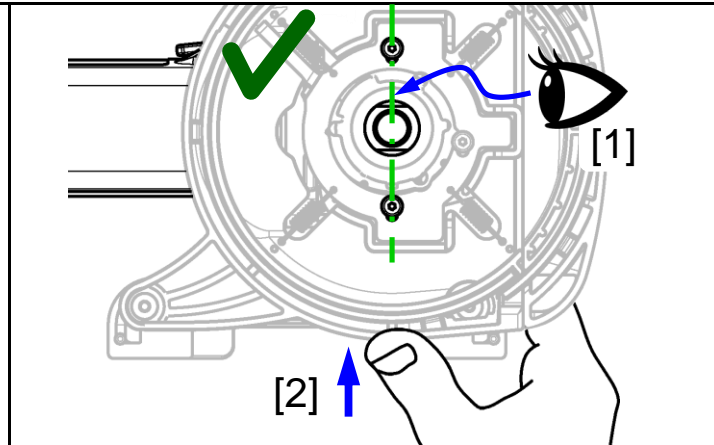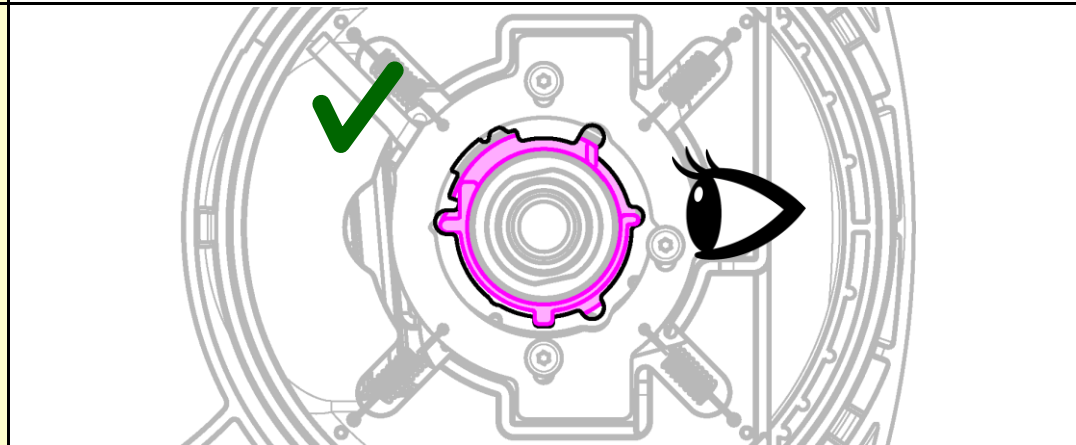





Set Upper / Lower Brackets at [a] Main Unit.

Upper Bracket

Lower Brackets






[a]

    1

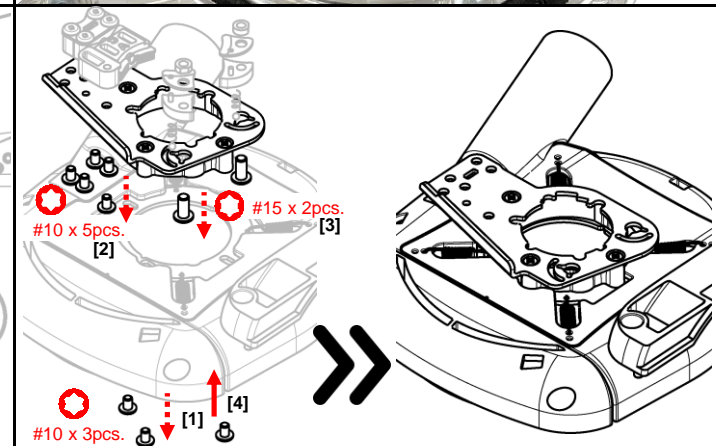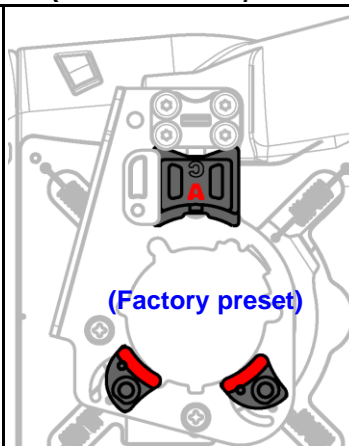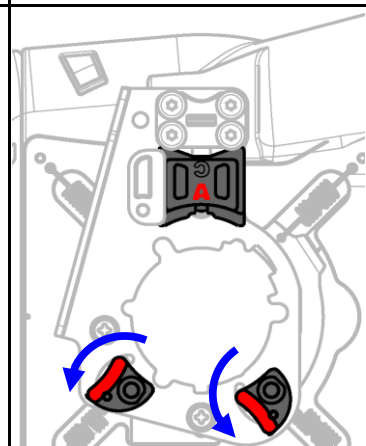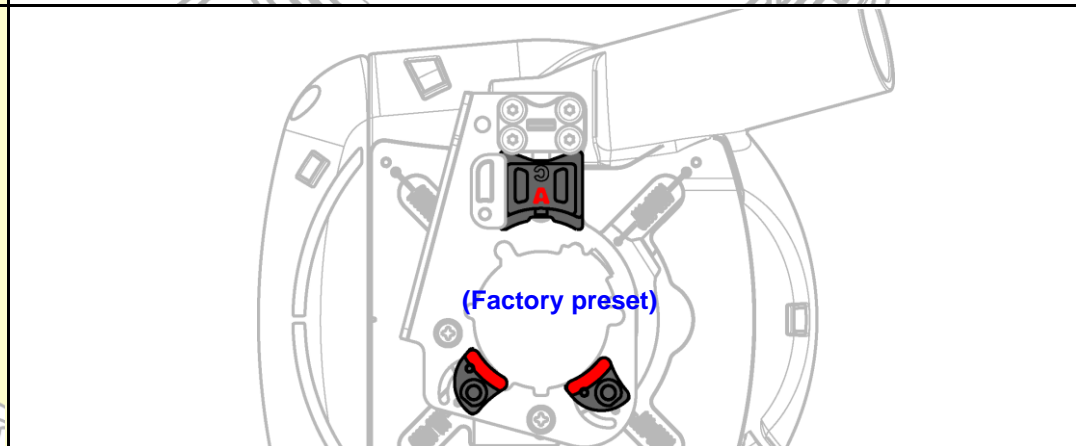

AGV10-125EK, AG10-125EK, AG800-125EK type can't be fitted.

    
 
※Based on the web information as of 2022 Jan.

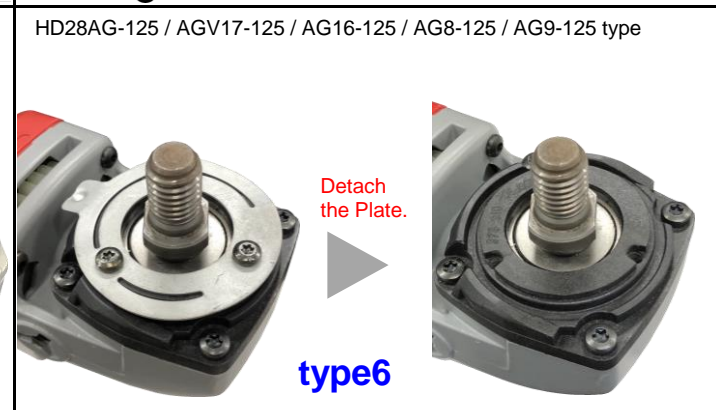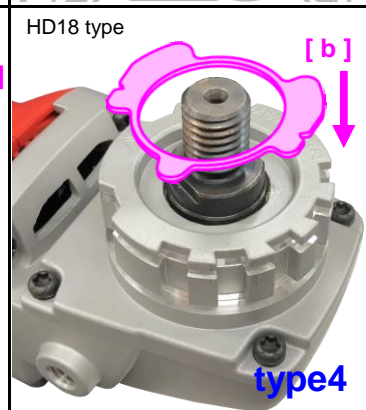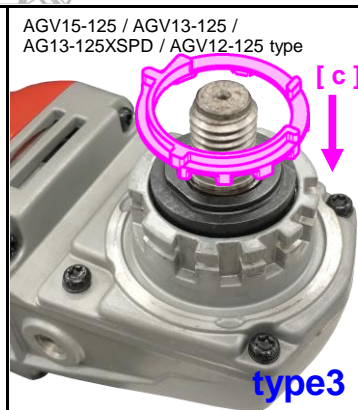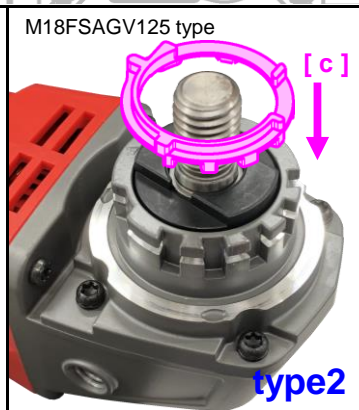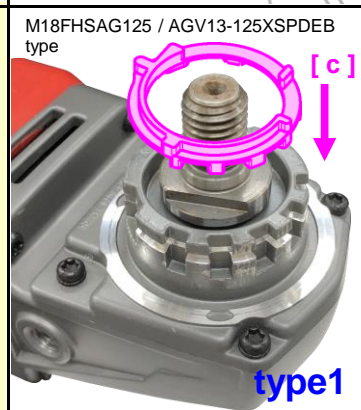

Set [g/h/i] Spacer, [f] Flange, Grinding Cup, then tighten [e] Lock-Nut with Wrench.

※In the case of h21mm Grinding Cup.

  4

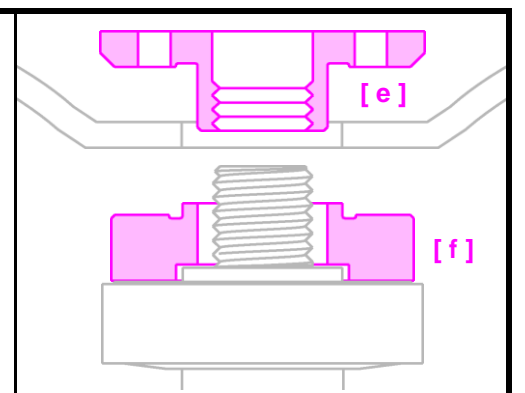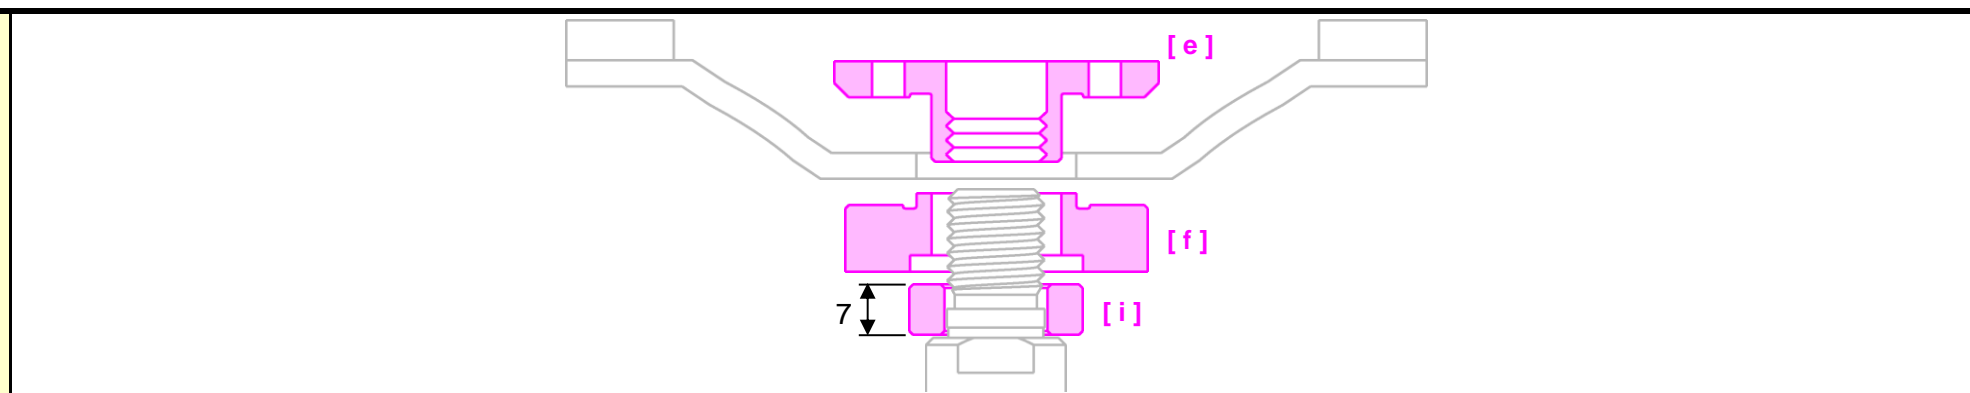


Hold the Inner Plate of [a] and tighten the Bolt with [d] Wrench securely.

Inner Plate [a]



Bolt

 3

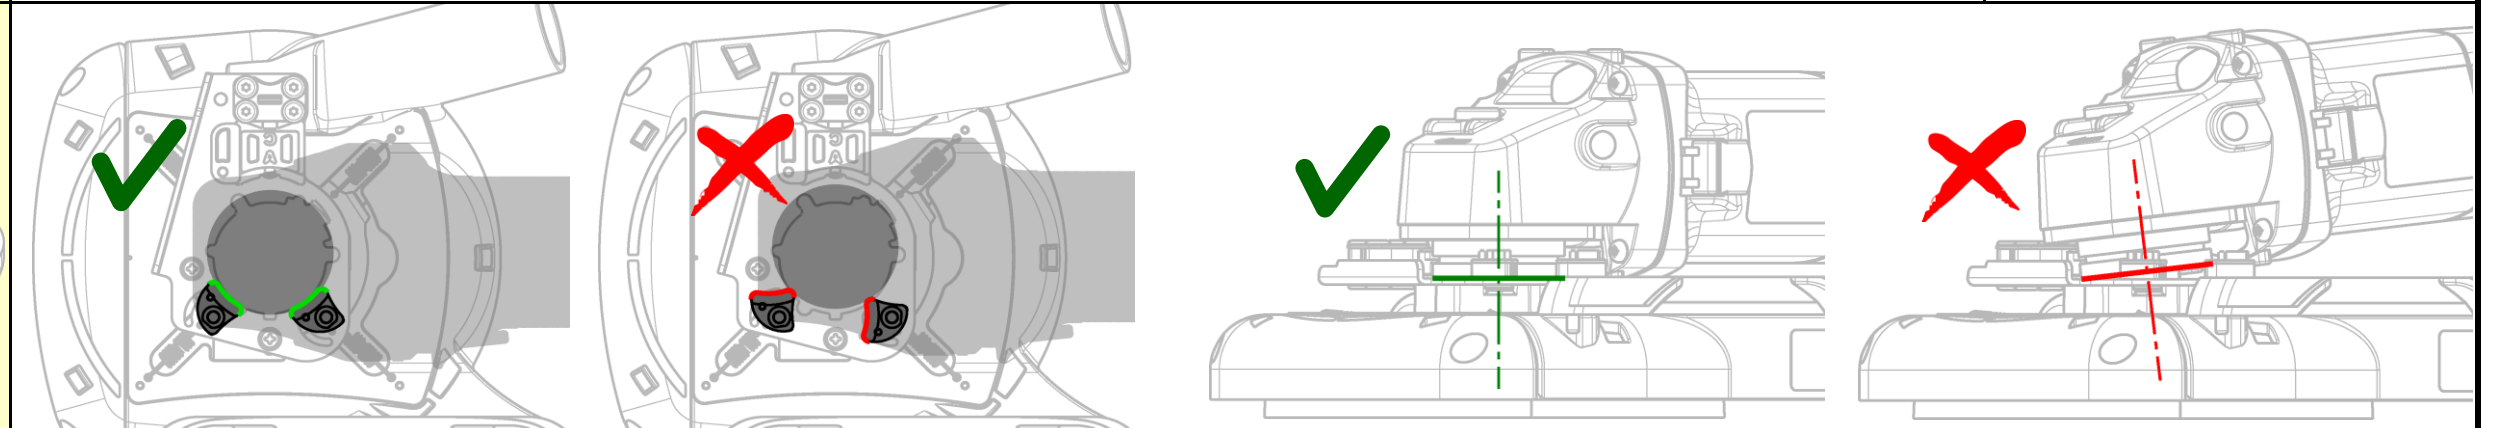

Place [a] on the gearcase of the Grinder.

  2

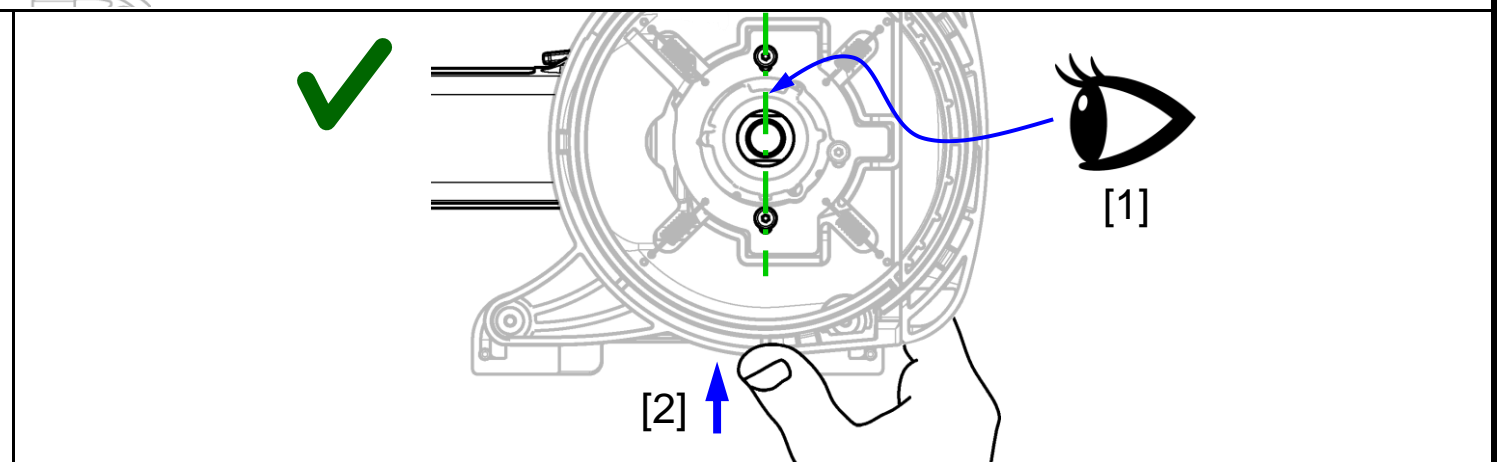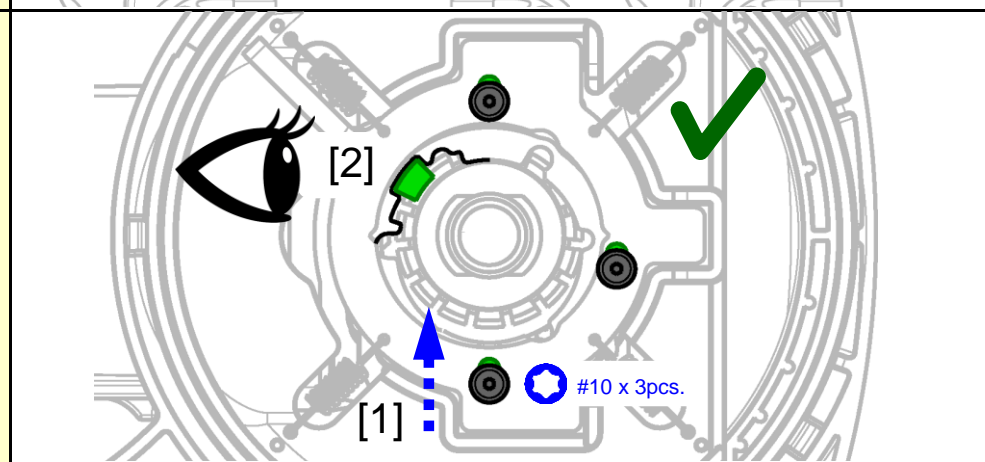


Set Upper / Lower Brackets at [a] Main Unit.

Upper Bracket

Lower Brackets






[a]

 1

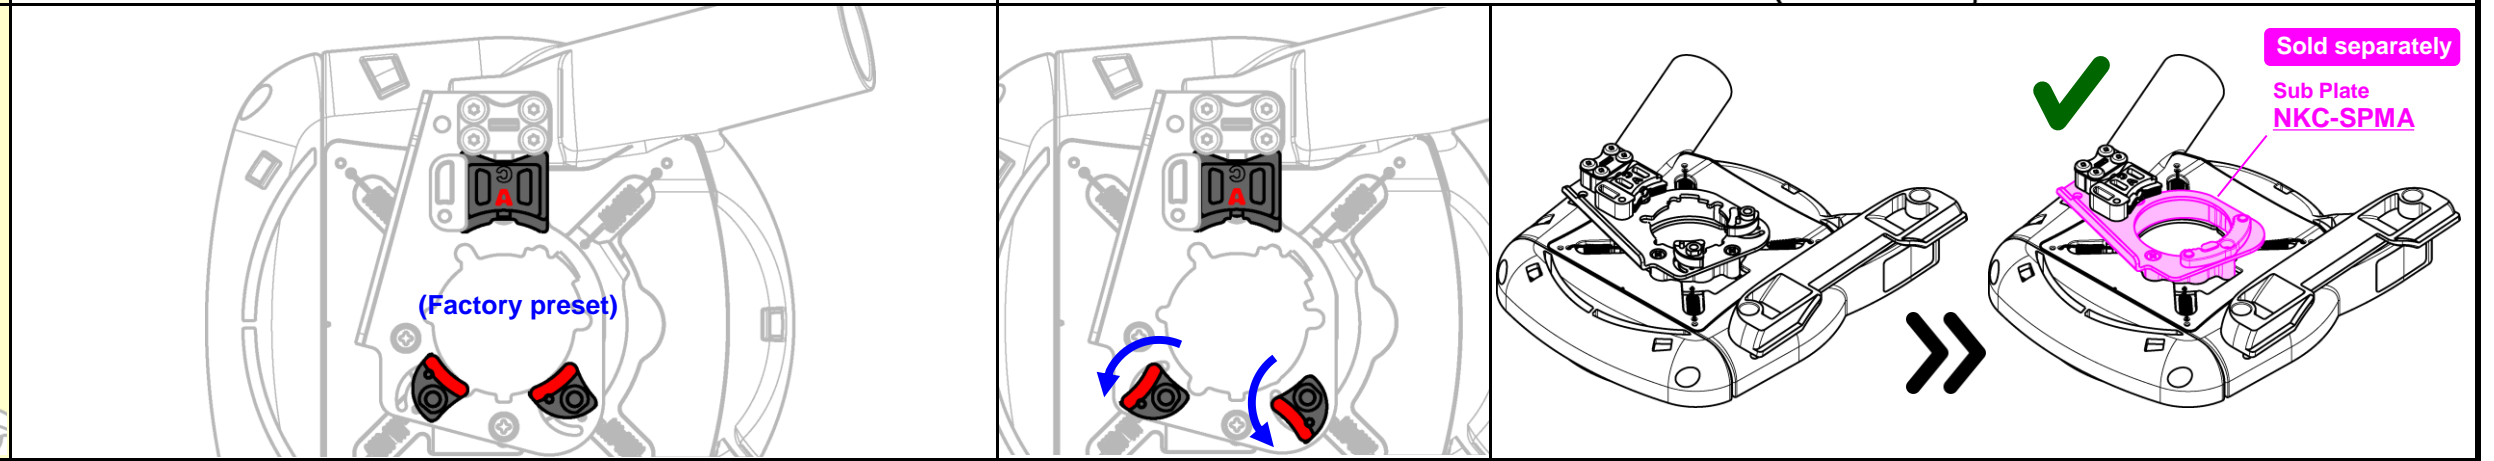

metabo®

    
 
※Based on the web information as of 2022 Jan.

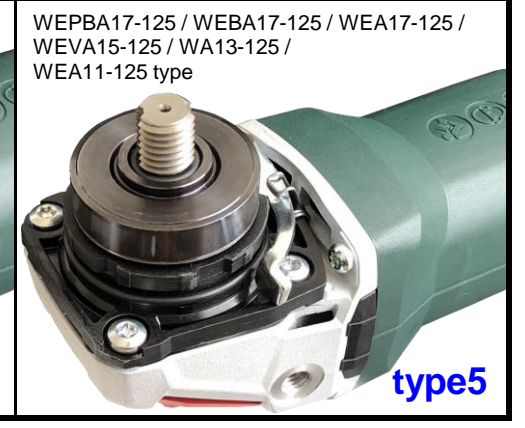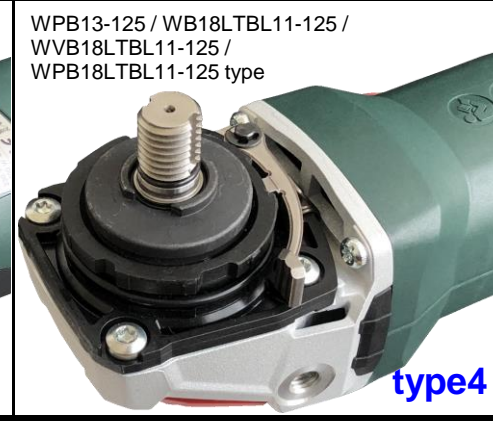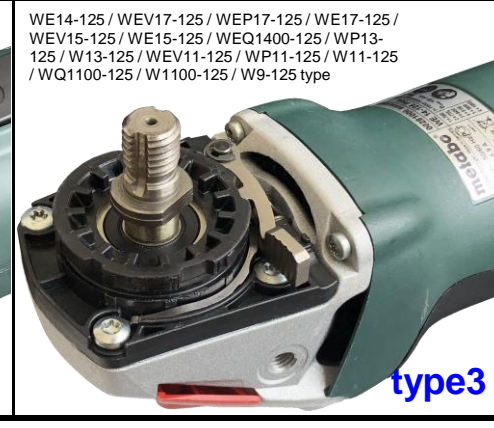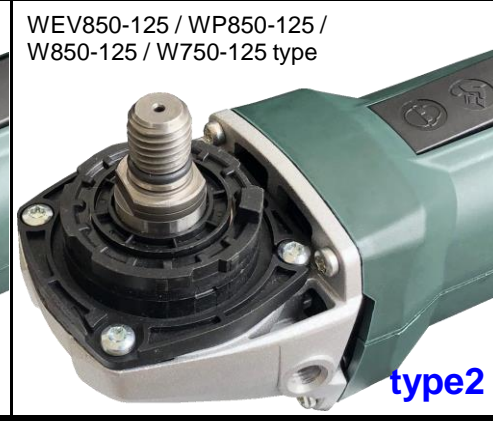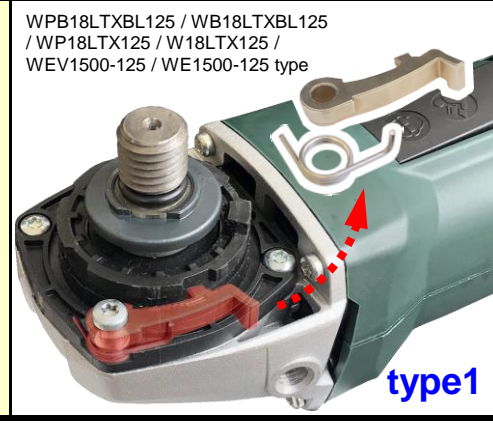

Set [g/h/i] Spacer, [f] Flange, Grinding Cup, then tighten [e] Lock-Nut with Wrench.

※In the case of h21mm Grinding Cup.

  4

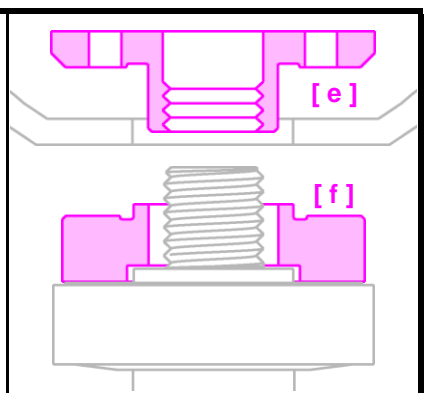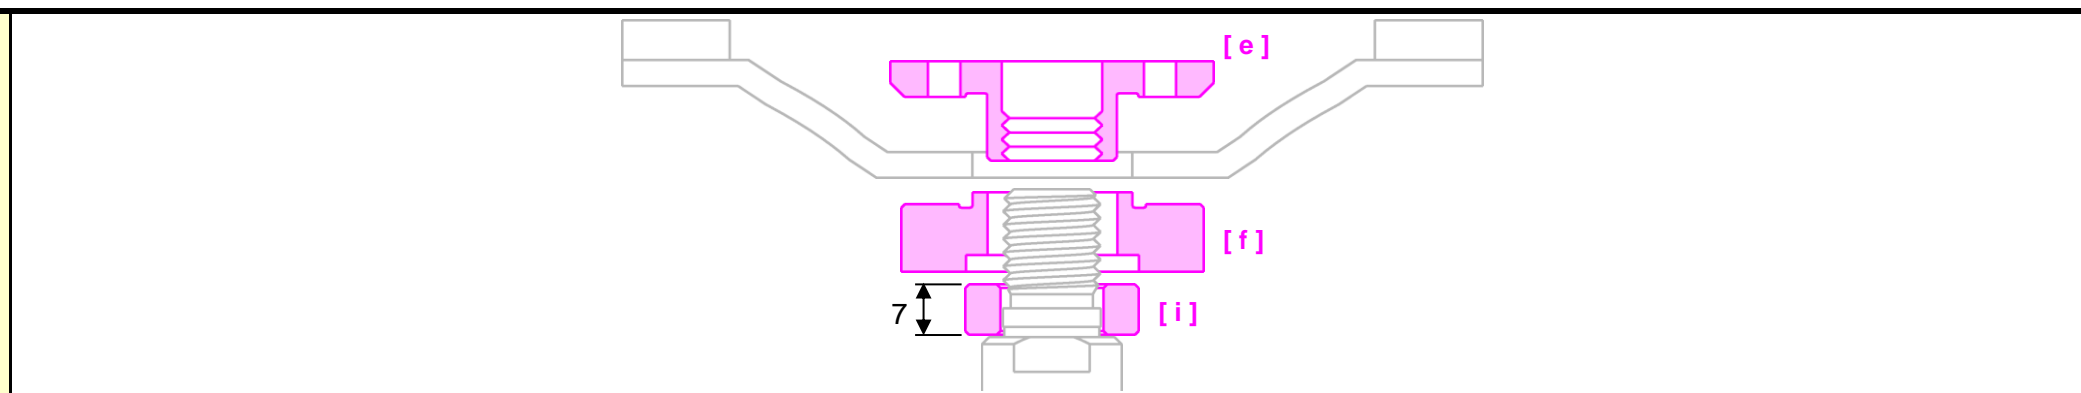


Hold the Inner Plate of [a] and tighten the Bolt with [d] Wrench securely.

Inner Plate


Bolt

 3

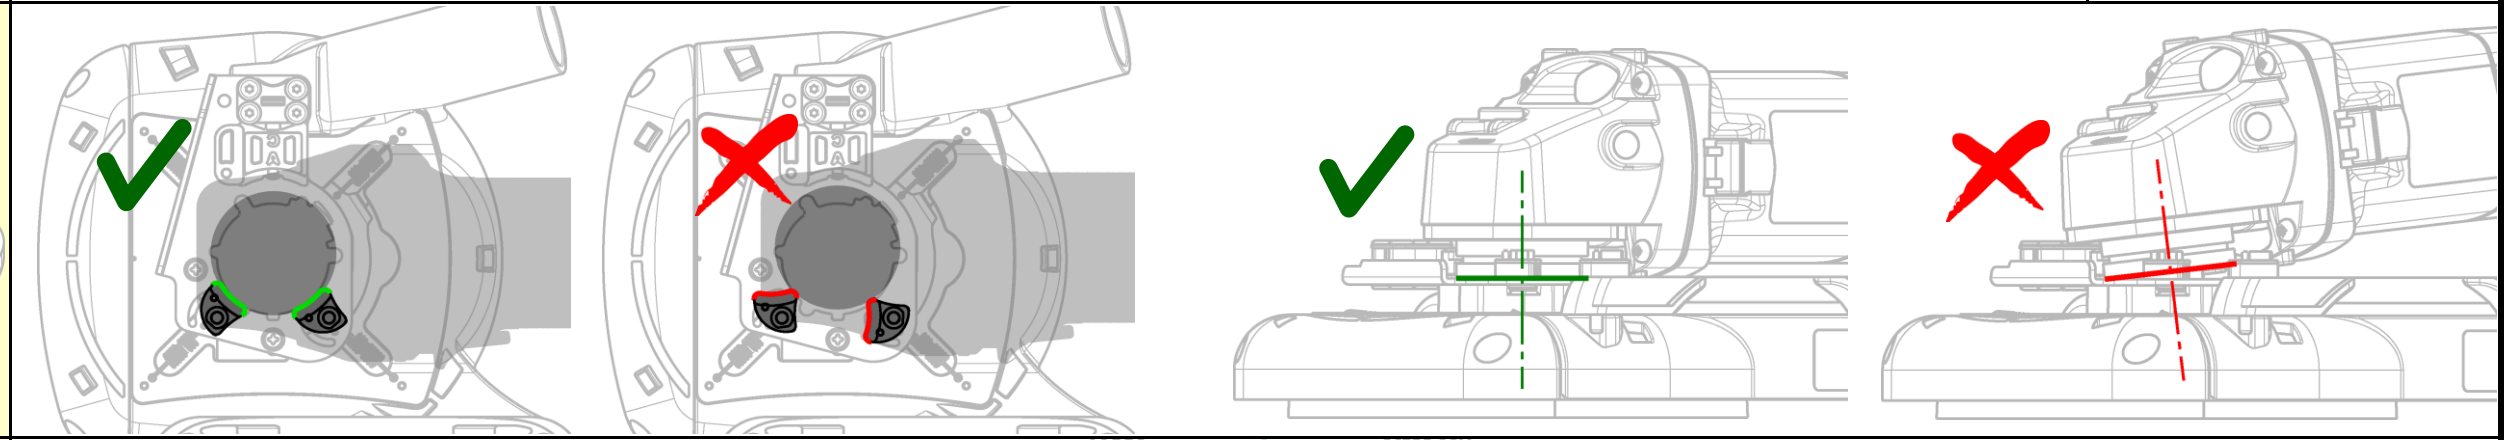

Place [a] on the gearcase of the Grinder.

 2

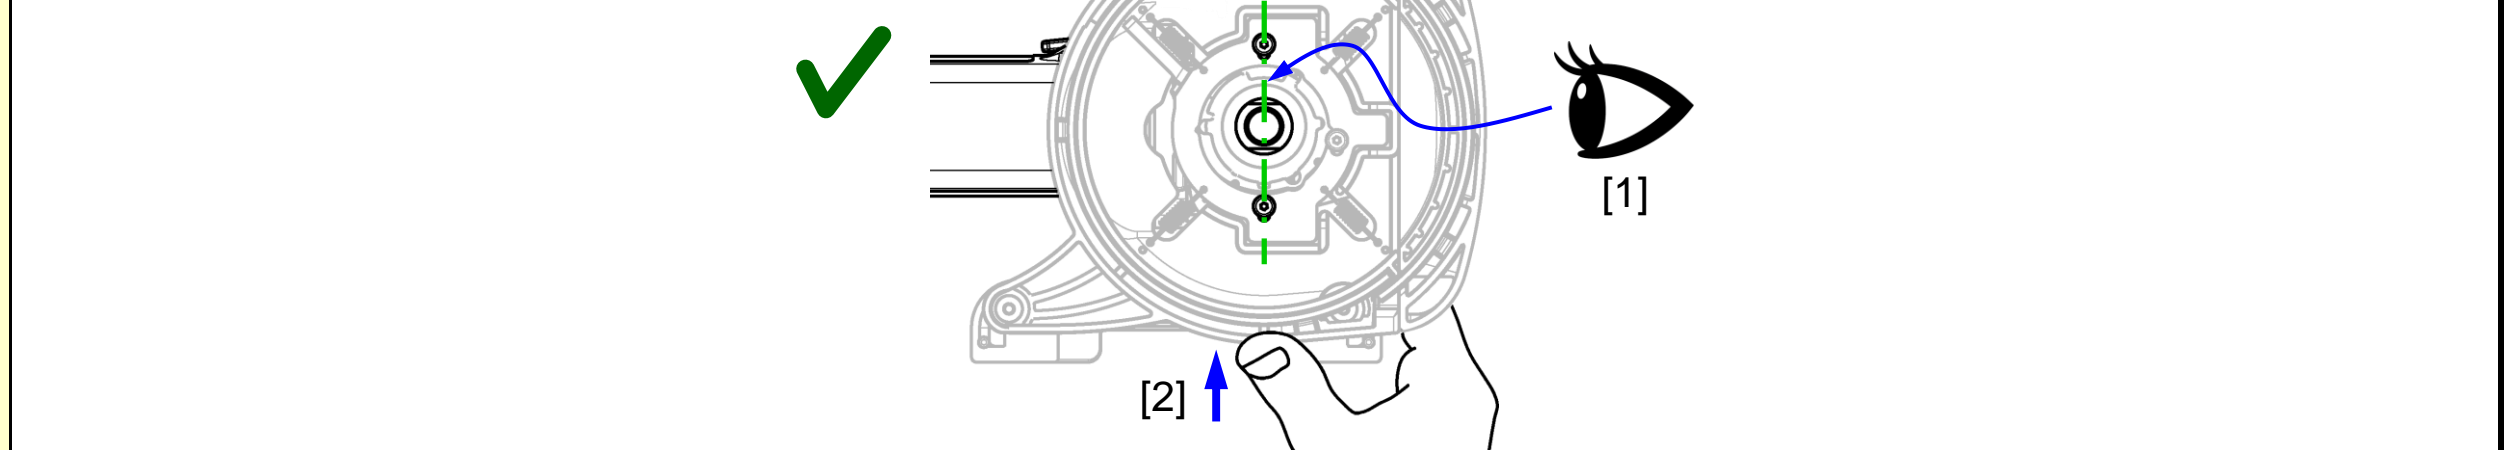


Set Upper / Lower Brackets at [a] Main Unit.

Upper Bracket

Lower Brackets







[a]

 1

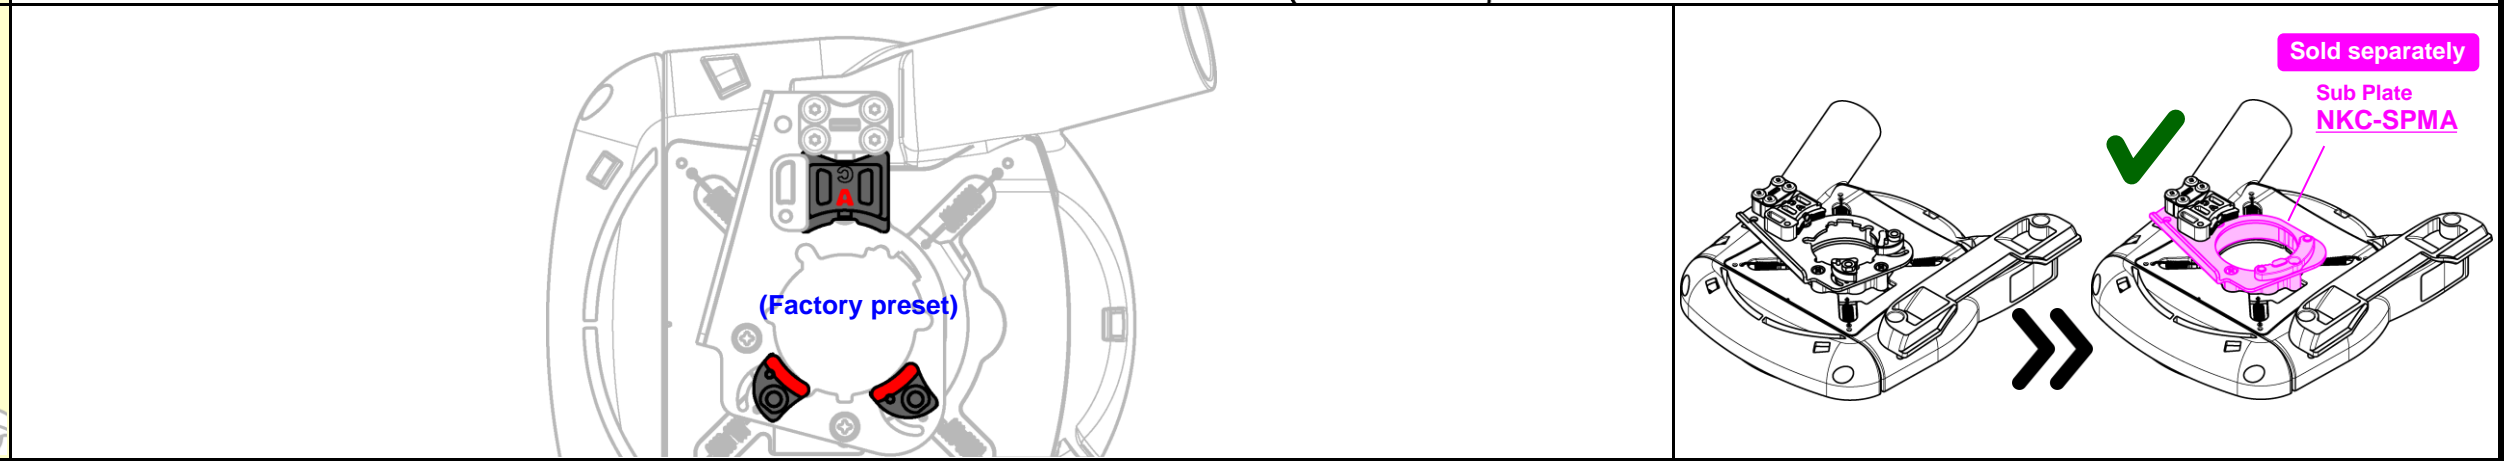

**HIKOKI**

 
 
 
 
 
 
※Based on the web information as of 2022 Jan.

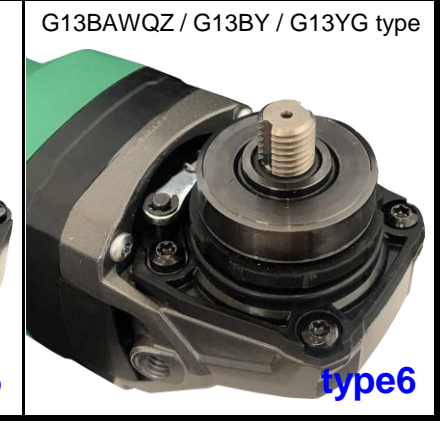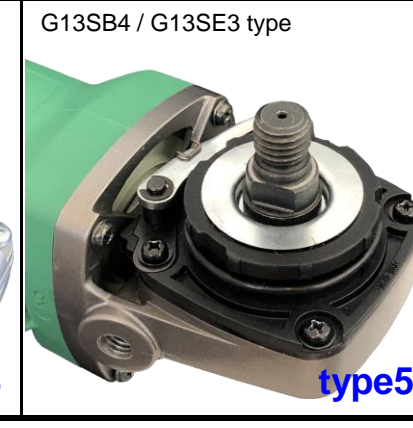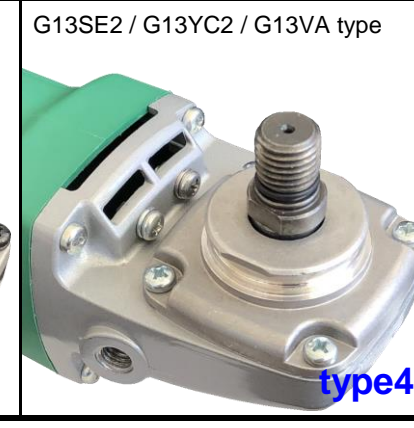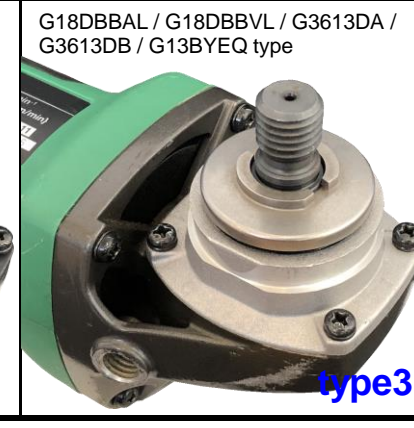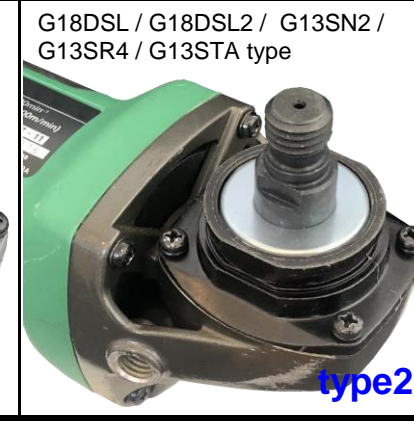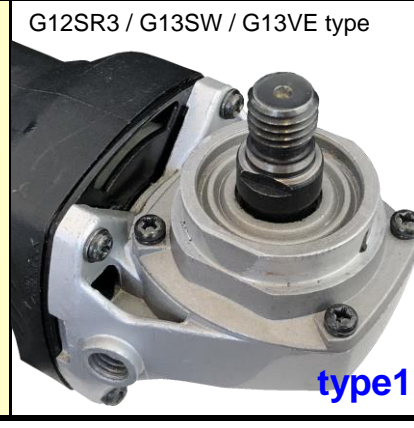

Set [g/h/i] Spacer, [f] Flange, Grinding Cup, then tighten [e] Lock-Nut with Wrench.

※In the case of h21mm Grinding Cup.

      4

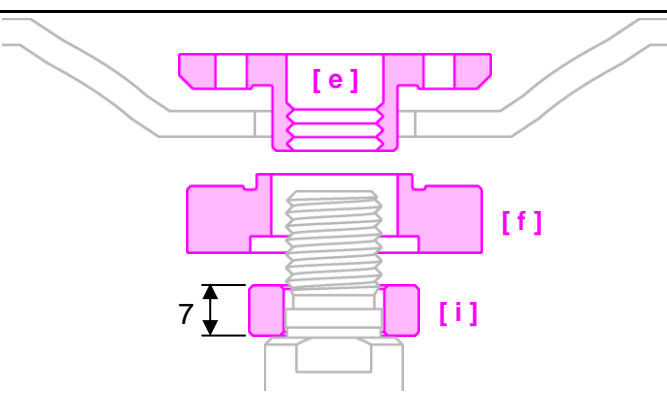
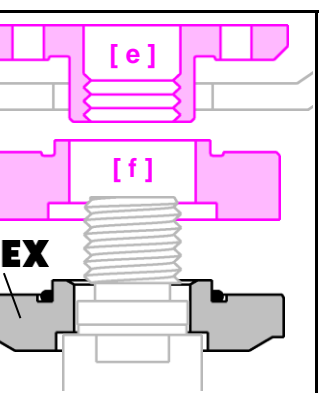
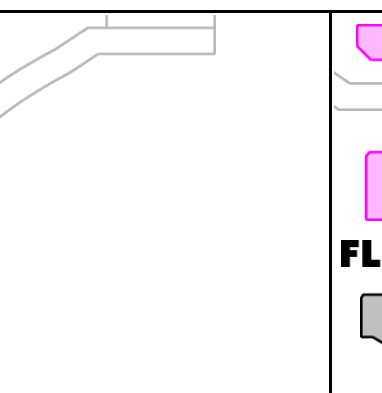
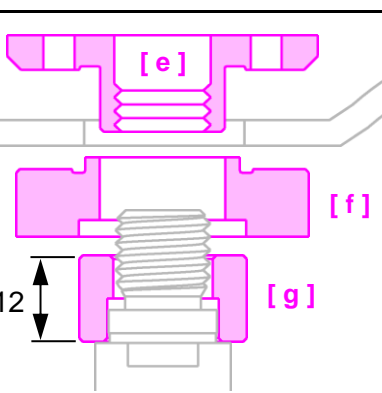
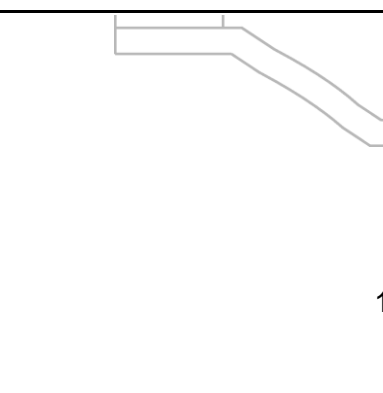
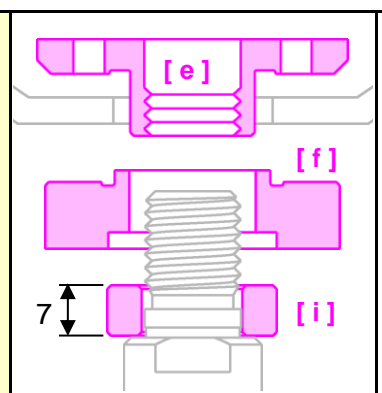


Hold the Inner Plate of [a] and tighten the Bolt with [d] Wrench securely.

Inner Plate [a]

Bolt

      3

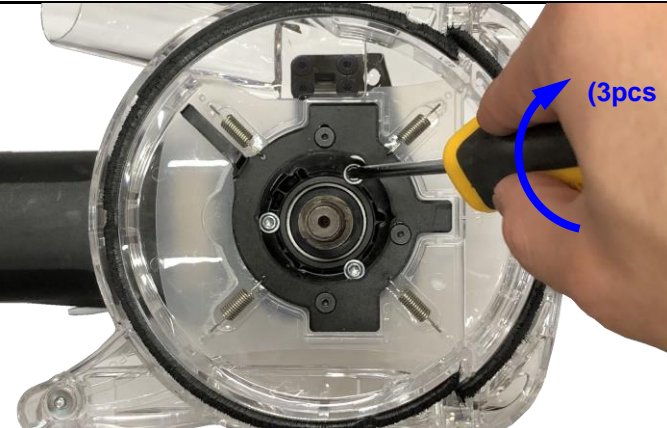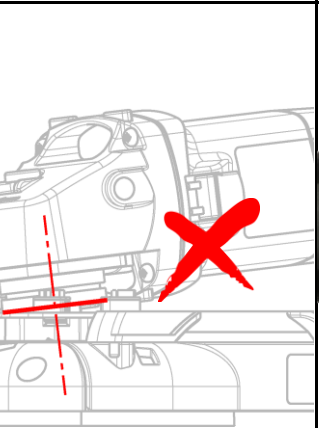
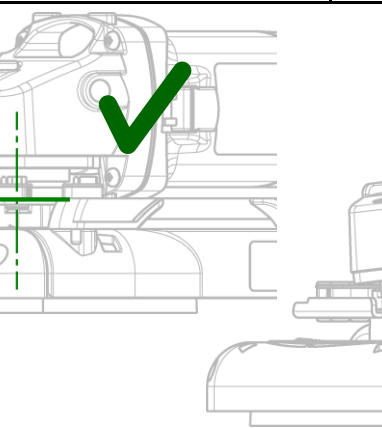
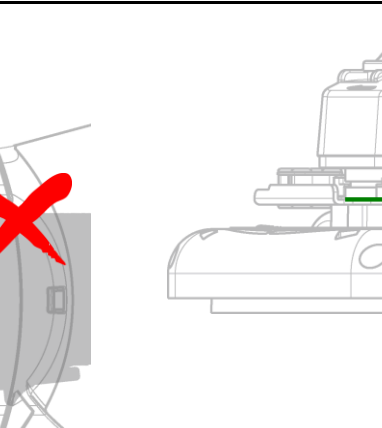
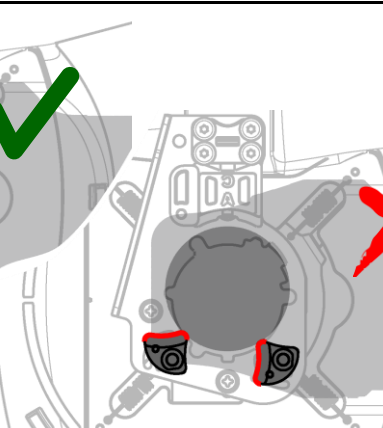
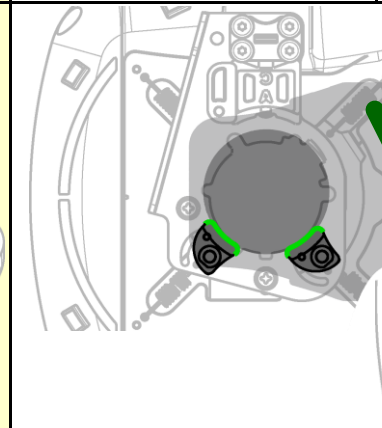


Place [a] on the gearcase of the Grinder.

[b]

Some models ONLY.

     2

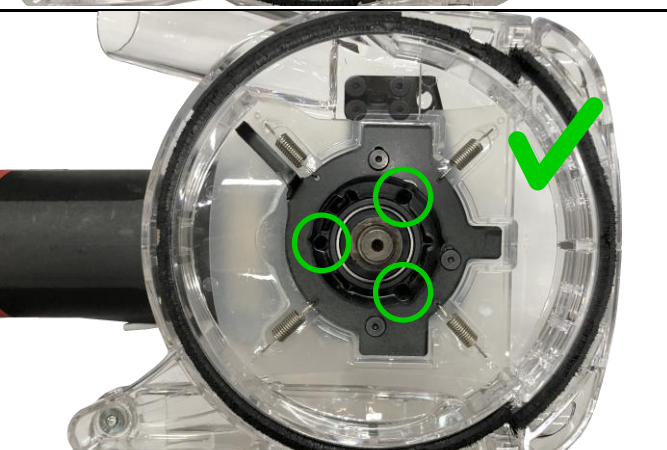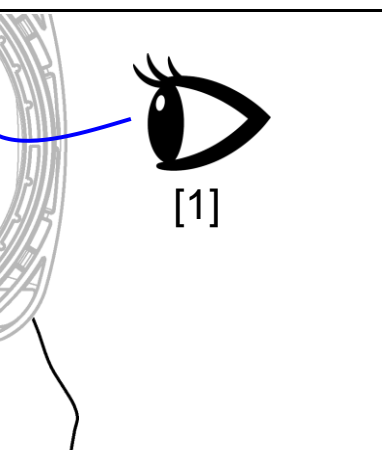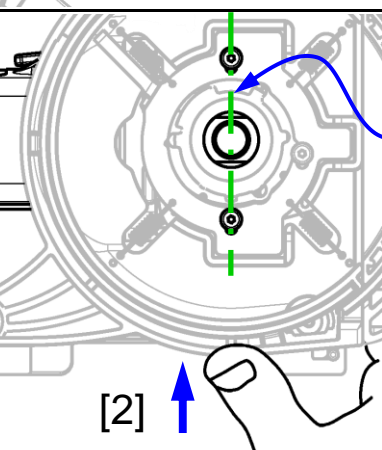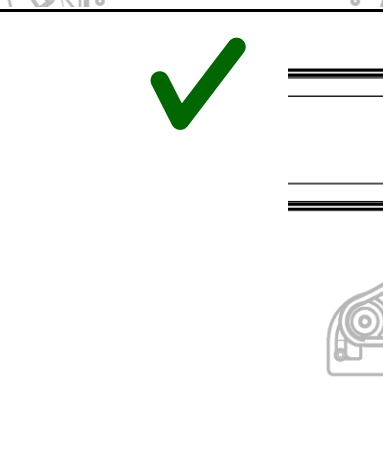







Set Upper / Lower Brackets at [a] Main Unit.

Upper Bracket

Lower Brackets




[a]

      
1

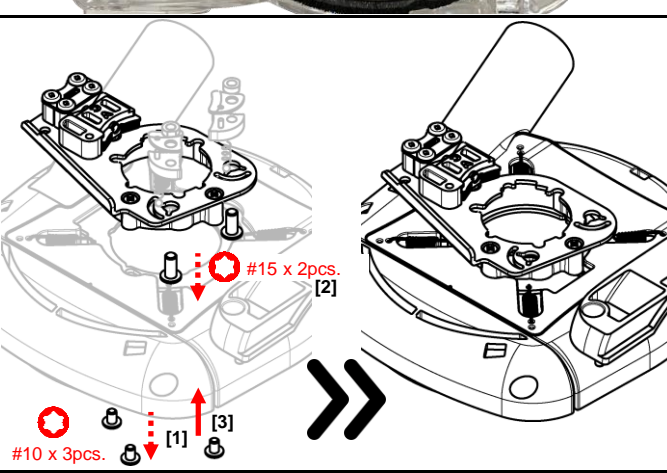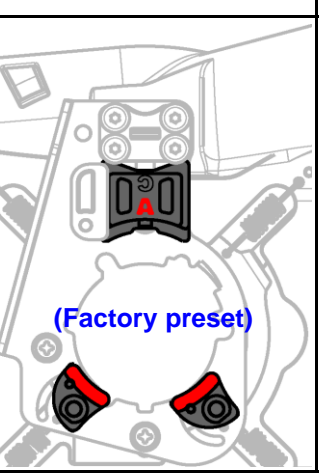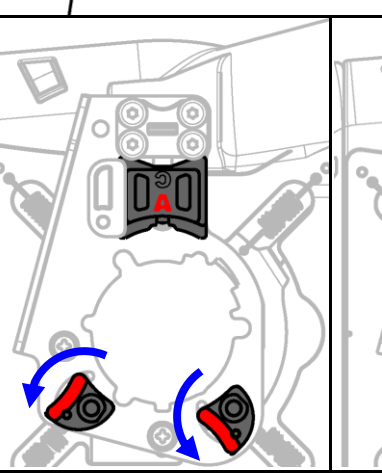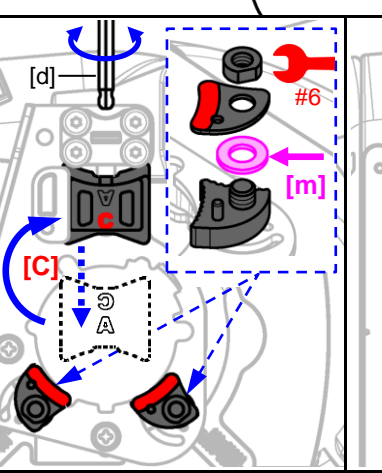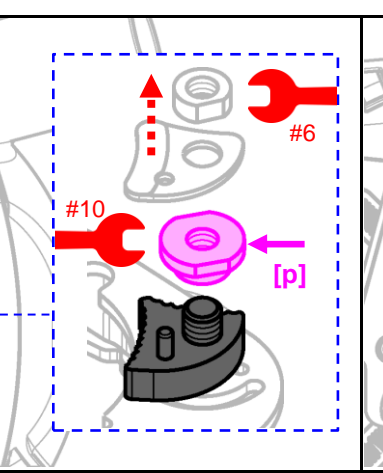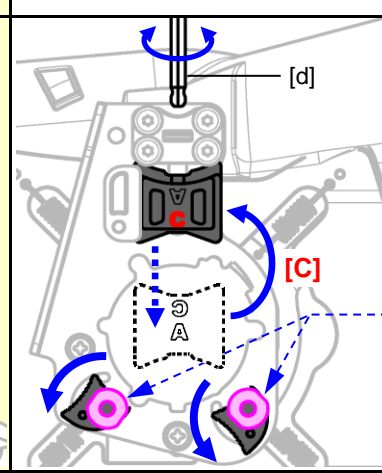

**FLEX**

    ※Based on the web information as of 2022 Jan.

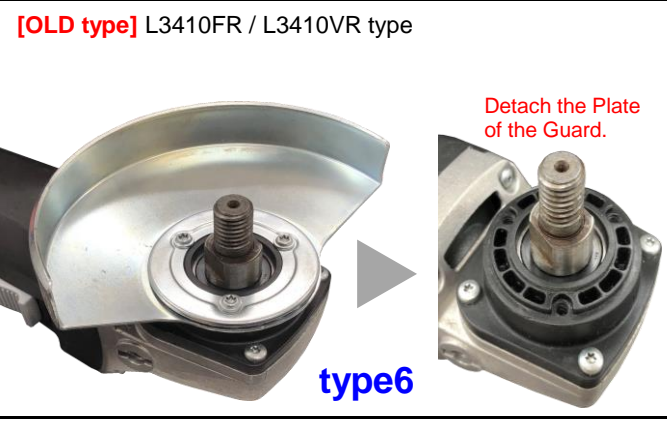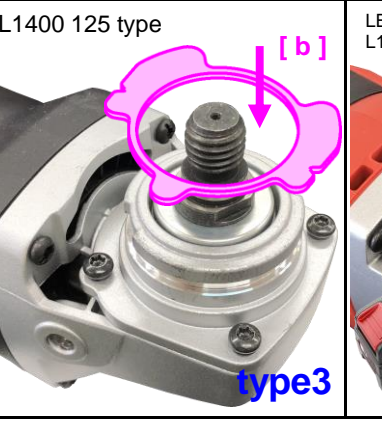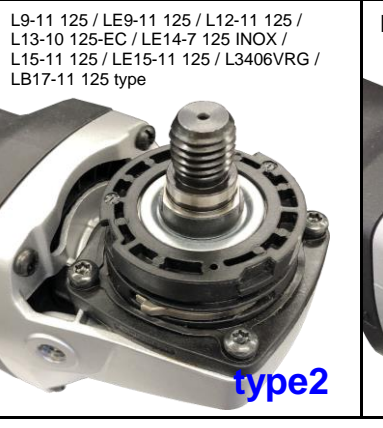

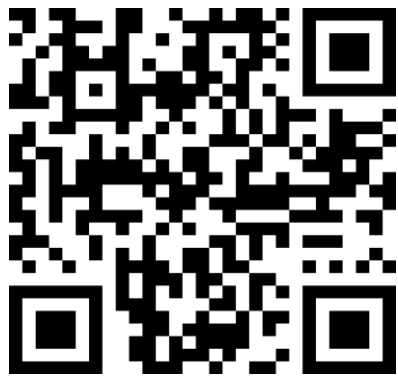

Check the  
instruction  
video.

