

Set [g/h/i] Spacer, [f] Flange, Grinding Cup, then tighten [e] Lock-Nut with Wrench.

4

※In the case of h21mm Grinding Cup.

Hold the Inner Plate of [a] and tighten the Bolt with [d] Wrench securely.

3

Place [a] on the gearcase of the Grinder.

2

Some models ONLY.

 
 
 
 
 
 
Set Upper / Lower Brackets at [a] Main Unit.

1

makita

⚠ XLOCK model can't be fitted.

※Based on the web information as of 2022 Jan.

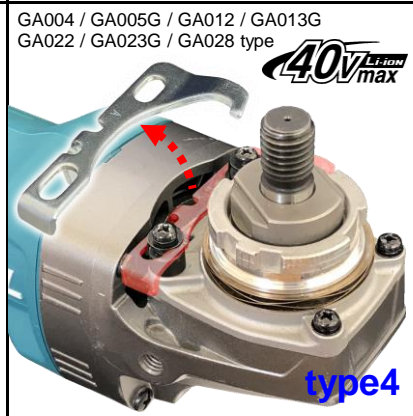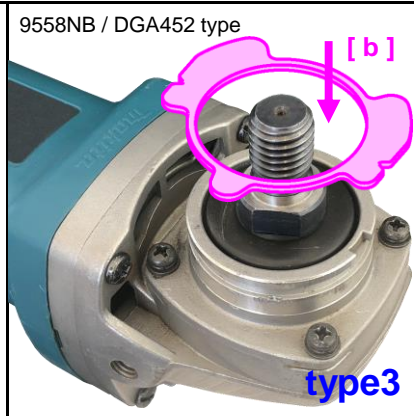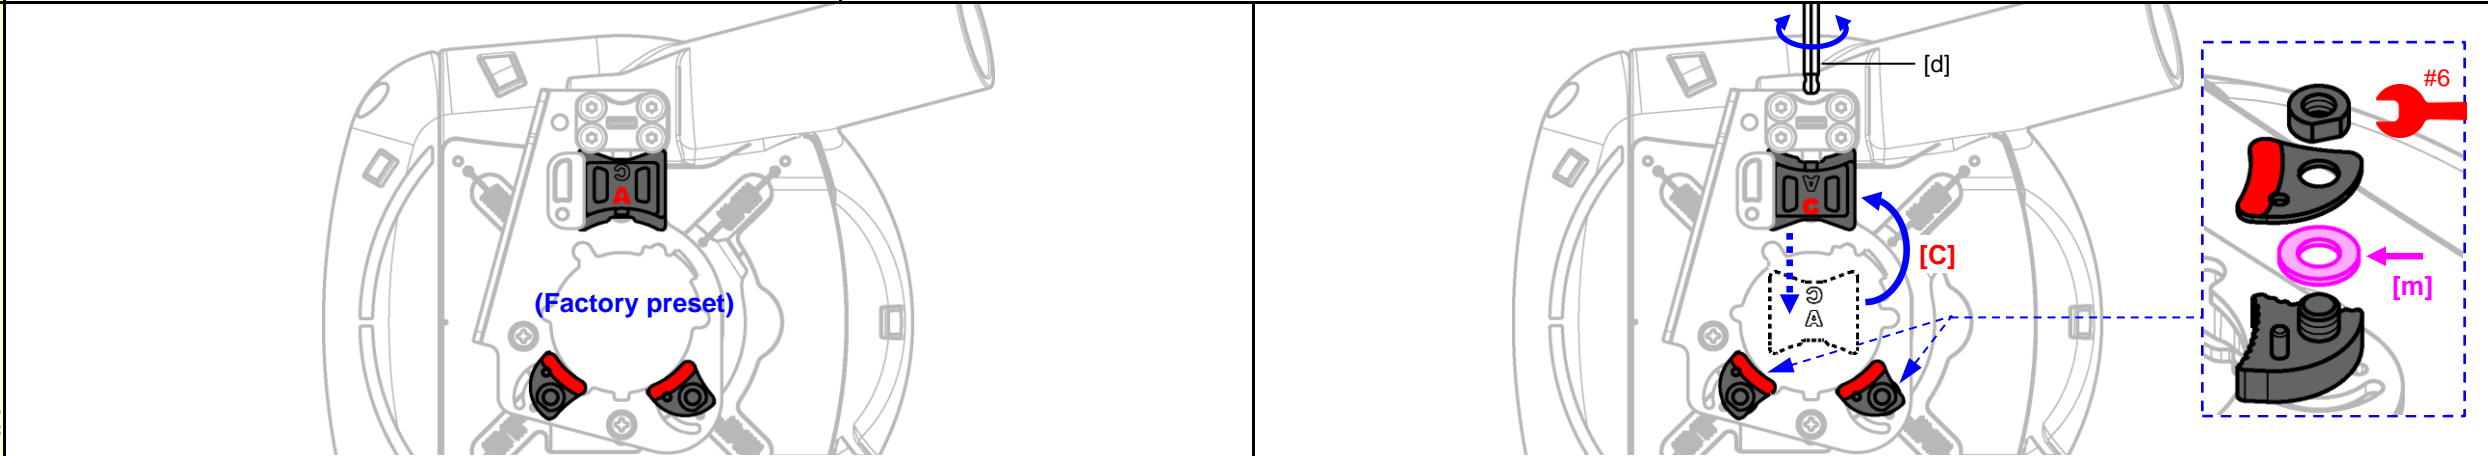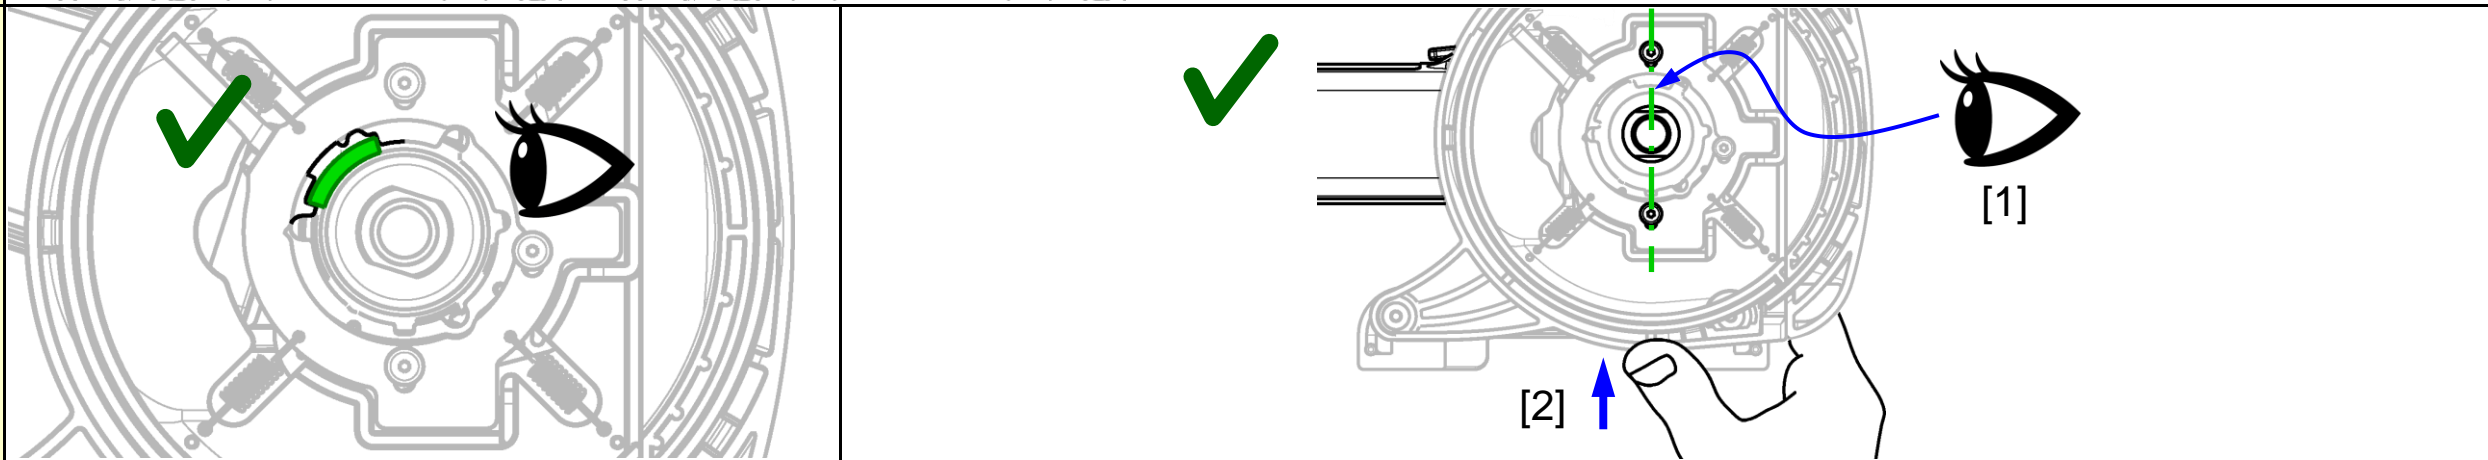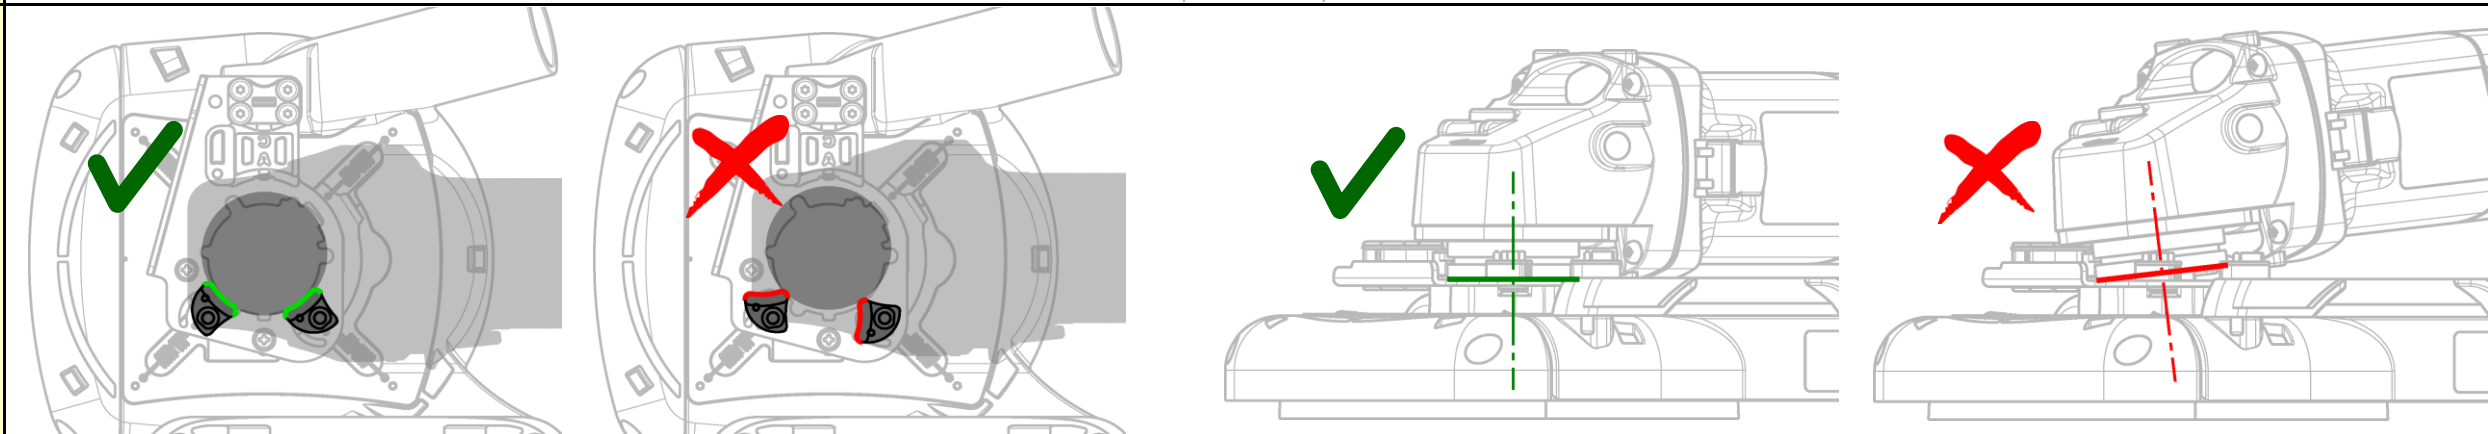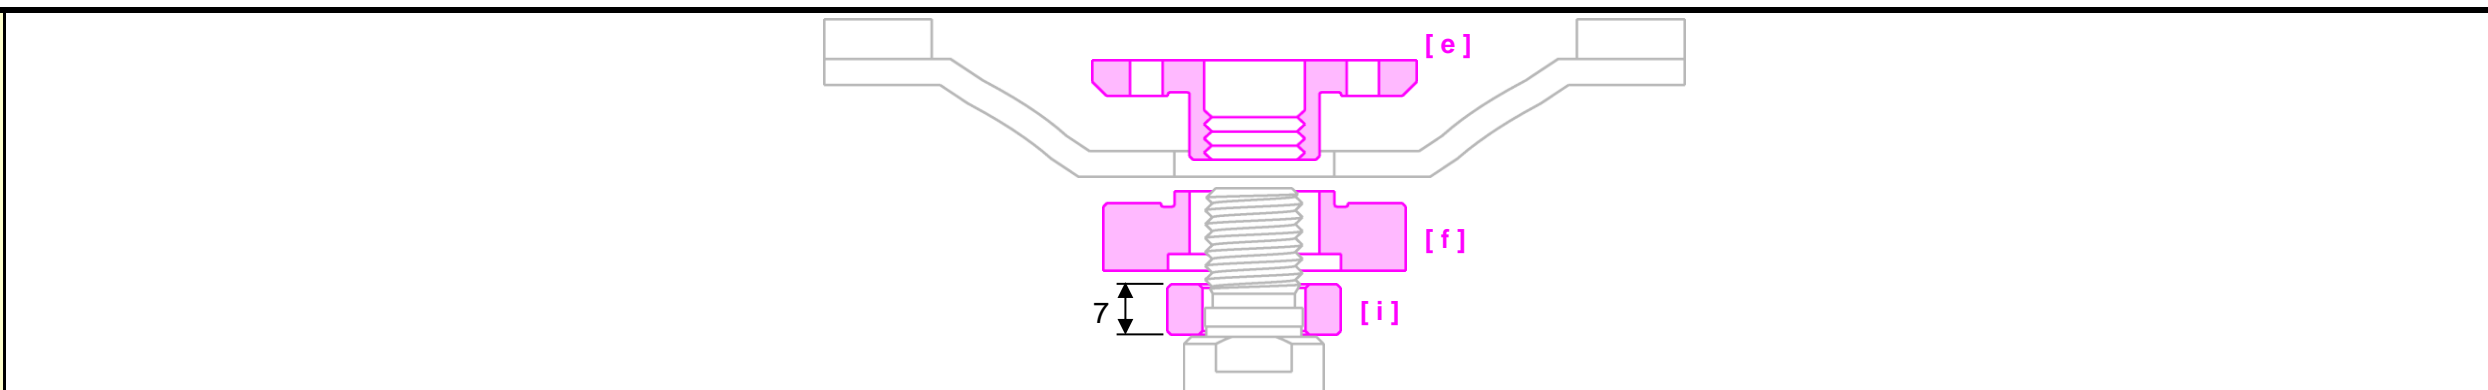

Set [g/h/i] Spacer, [f] Flange, Grinding Cup, then tighten [e] Lock-Nut with Wrench.

4

※In the case of h21mm Grinding Cup.

Hold the Inner Plate of [a] and tighten the Bolt with [d] Wrench securely.

3

Inner Plate

Bolt

[d]

Place [a] on the gearcase of the Grinder.

2

Set Upper / Lower Brackets at [a] Main Unit.

1

Upper Bracket

 
 
 
 
 
 
 
 
 
Lower Brackets

[a]

BOSCH

⚠ **XLOCK** model can't be fitted.

※Based on the web information as of 2022 Jan.

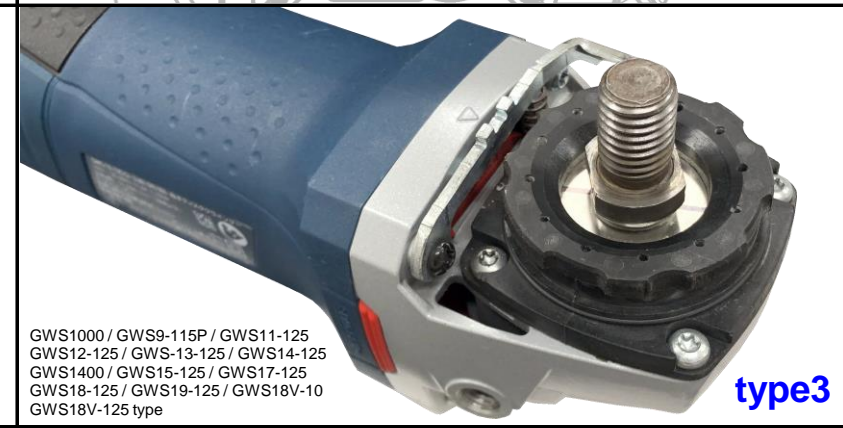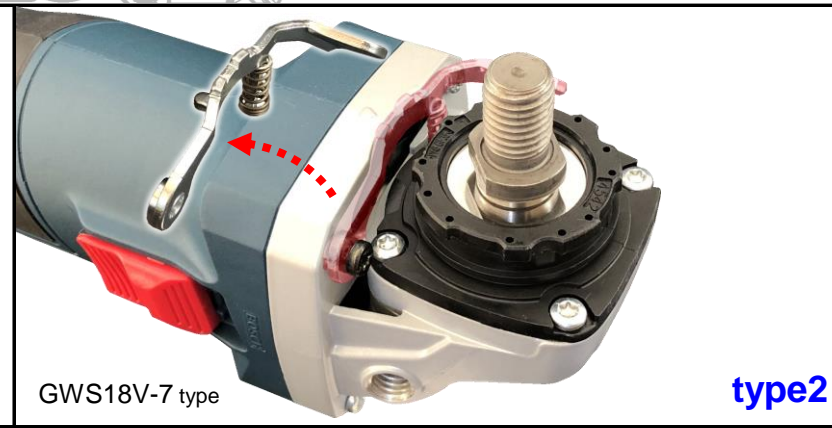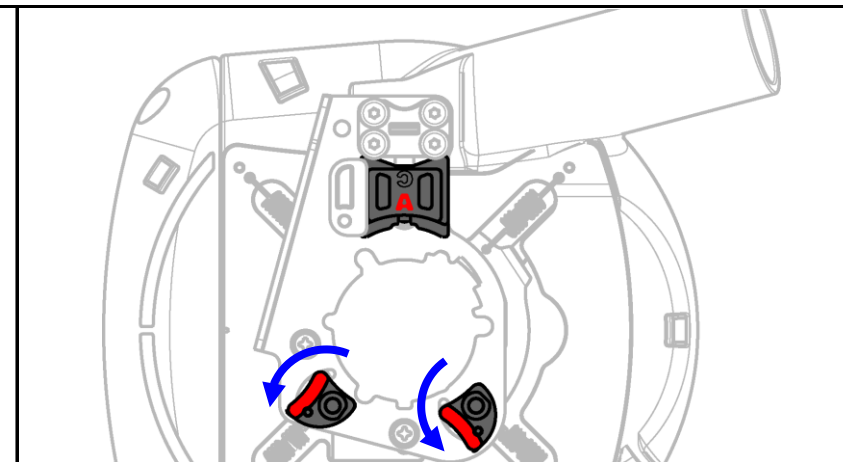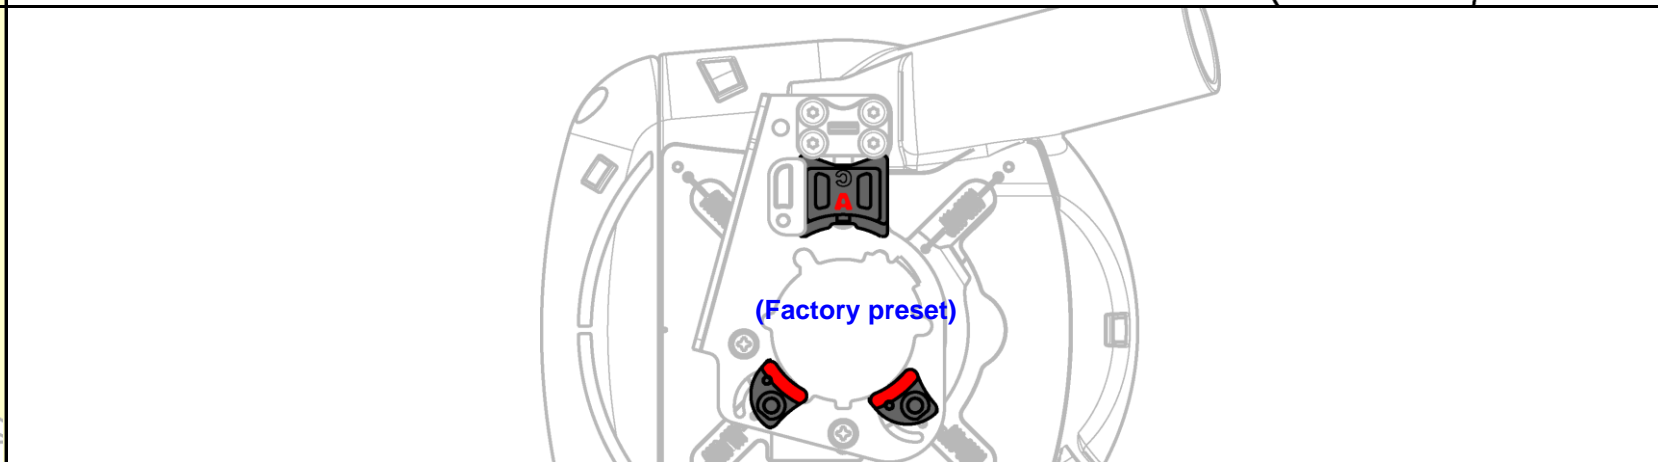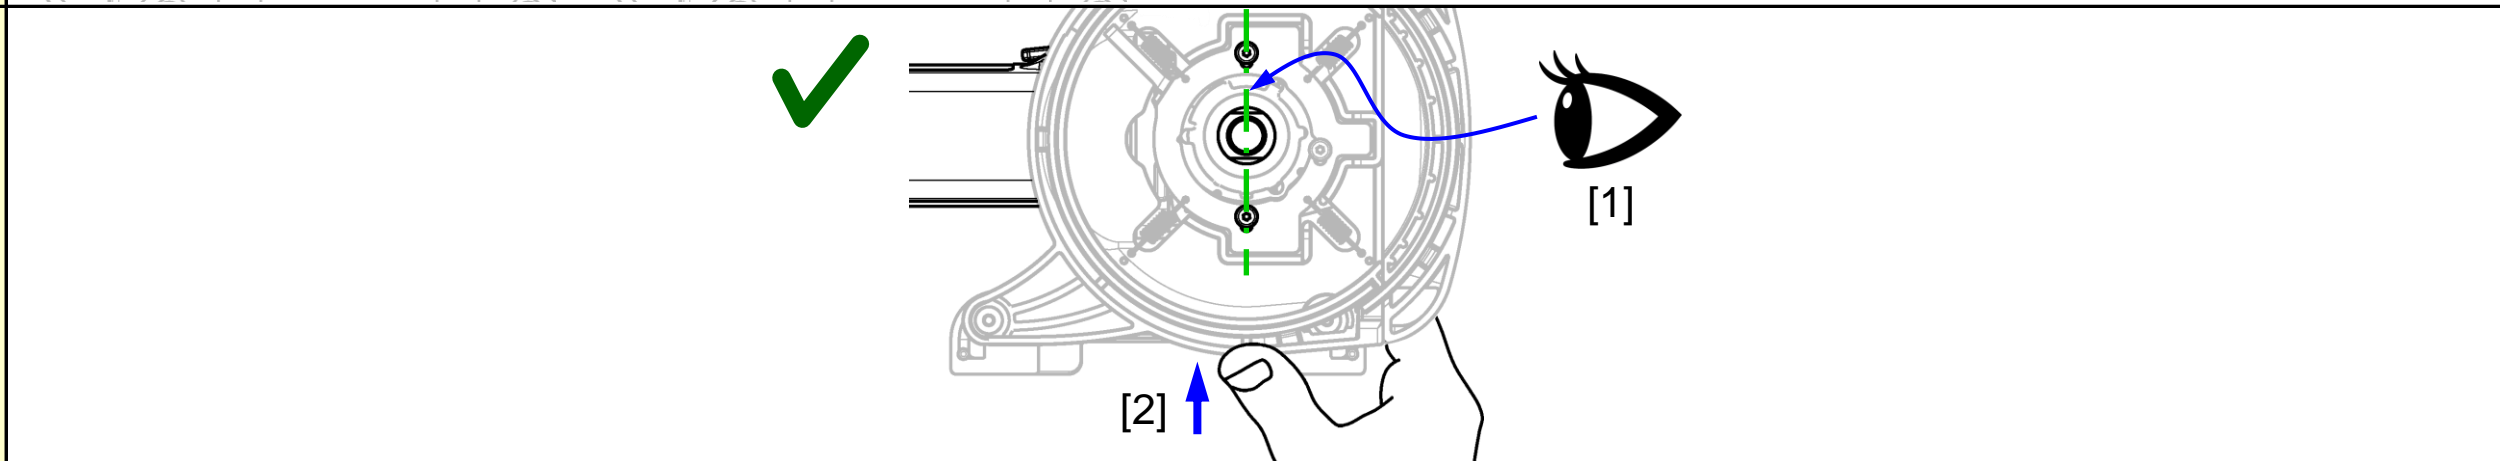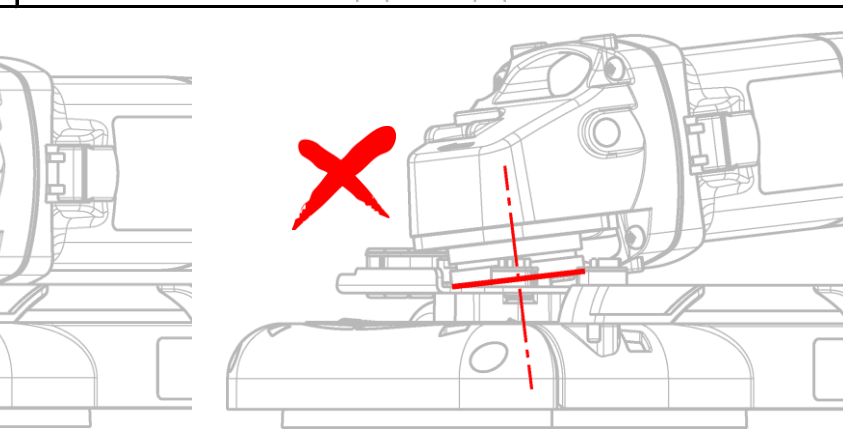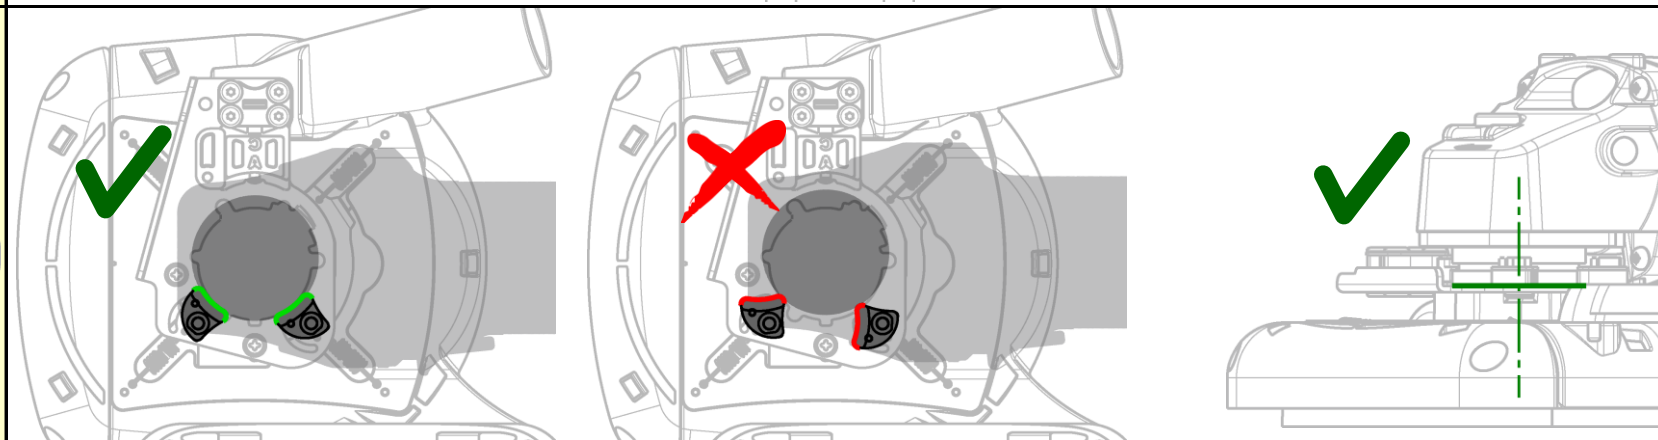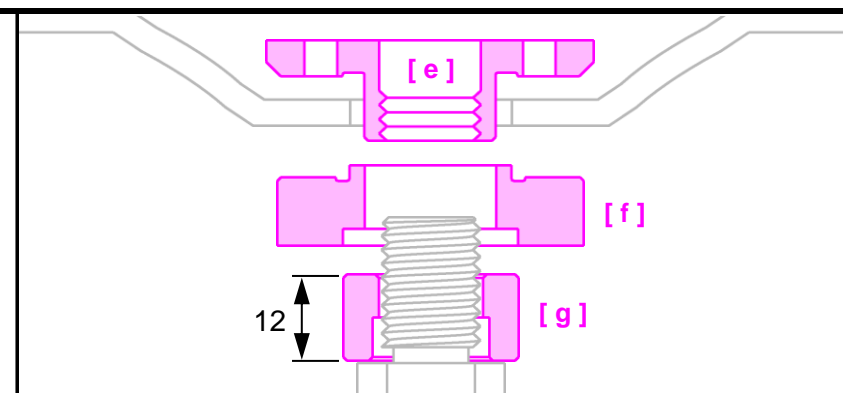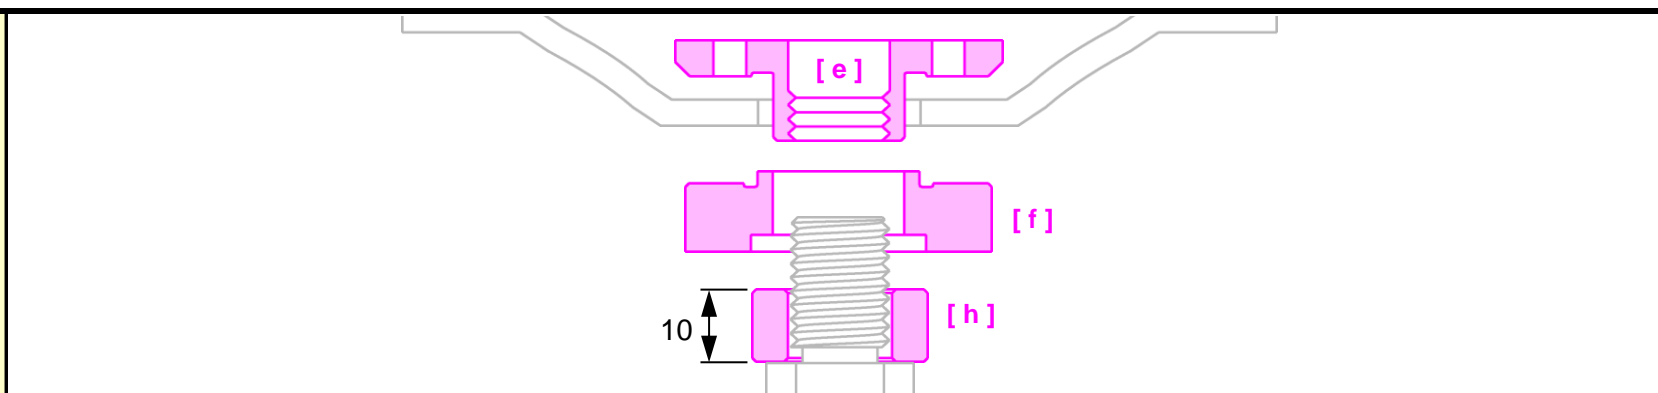

GWS7-115 / GWS7-125
GWS9-115S / GWS9-125S
GWS750 / GWS880 type

GWS18V-7 type

GWS1000 / GWS9-115P / GWS11-125
GWS12-125 / GWS13-125 / GWS14-125
GWS1400 / GWS15-125 / GWS17-125
GWS18-125 / GWS19-125 / GWS18V-10
GWS18V-125 type

Set [g/h/i] Spacer, [f] Flange, Grinding Cup, then tighten [e] Lock-Nut with Wrench.

4

※In the case of h21mm Grinding Cup.

Hold the Inner Plate of [a] and tighten the Bolt with [d] Wrench securely.

3

Inner Plate

Bolt

[d]

Place [a] on the gearcase of the Grinder.

2

Some models ONLY.

[b]

Set Upper / Lower Brackets at [a] Main Unit.

1

Upper Bracket

 
 
 
 
 
 
 
 
 
 
 
 
Lower Brackets

[a]

DEWALT

⚠ D28137 / DCG405FN can't be fitted.

※Based on the web information as of 2022 Jan.

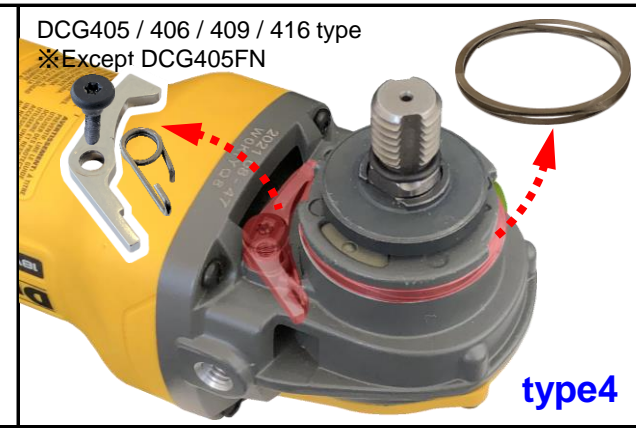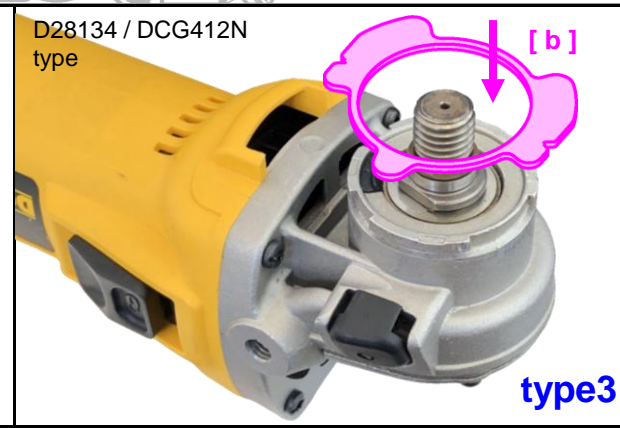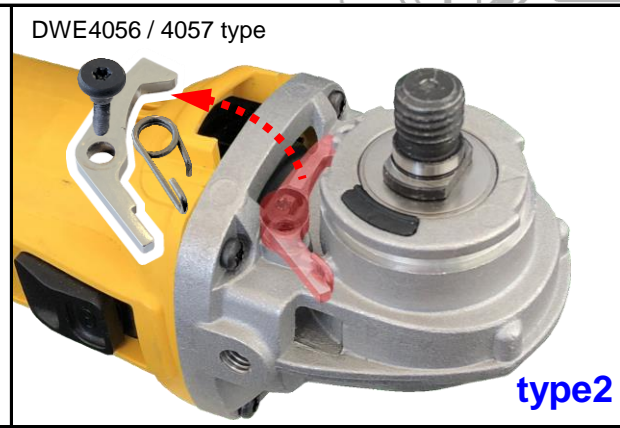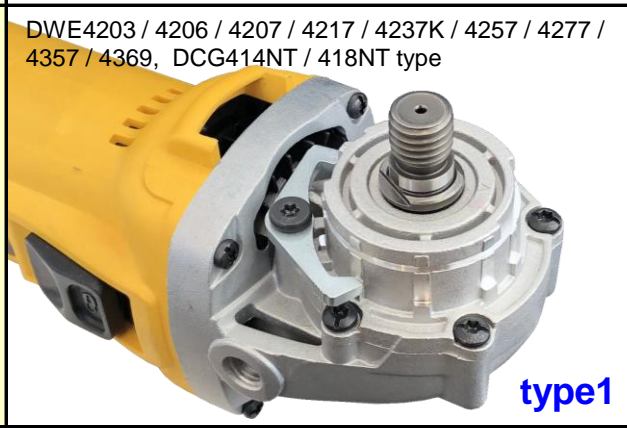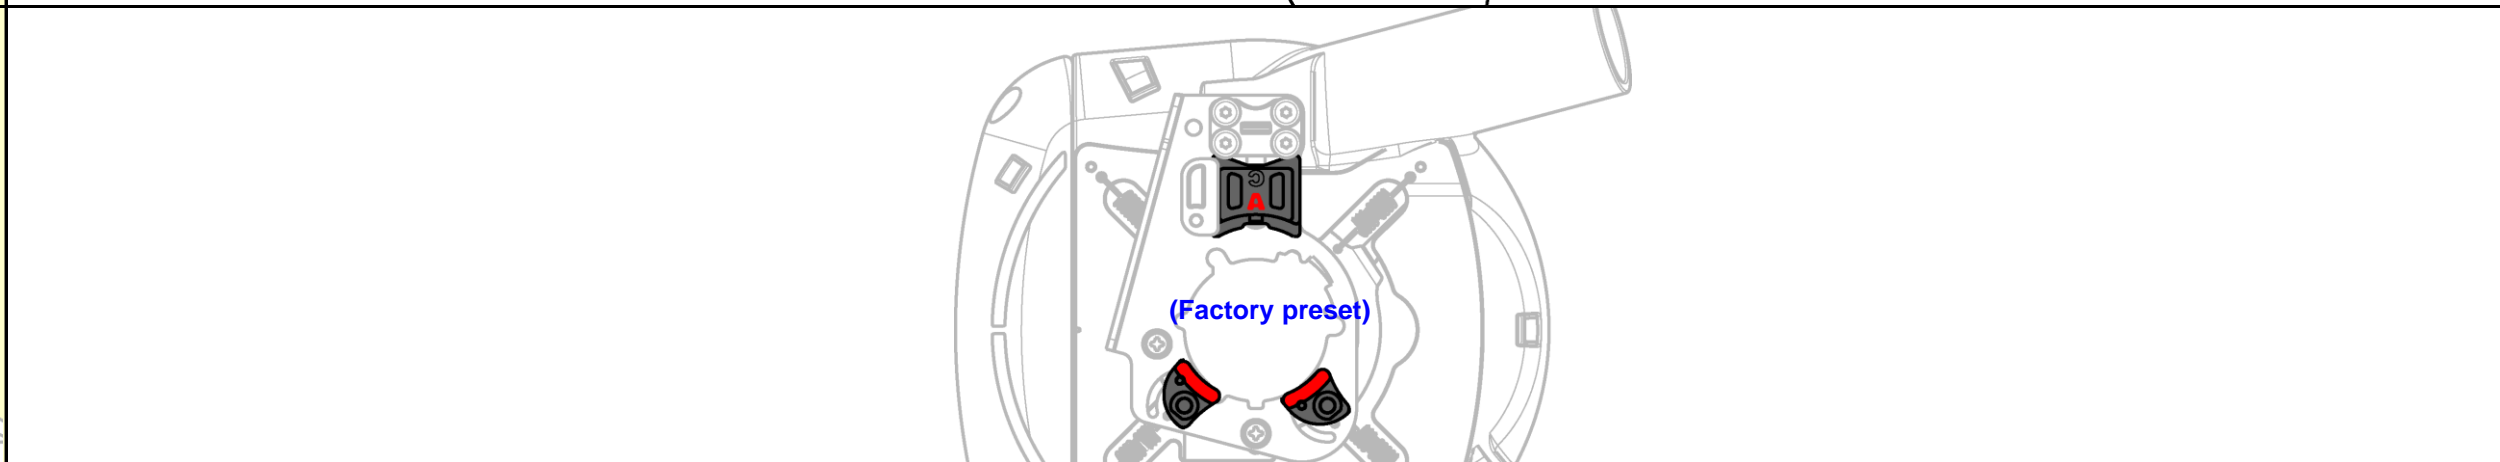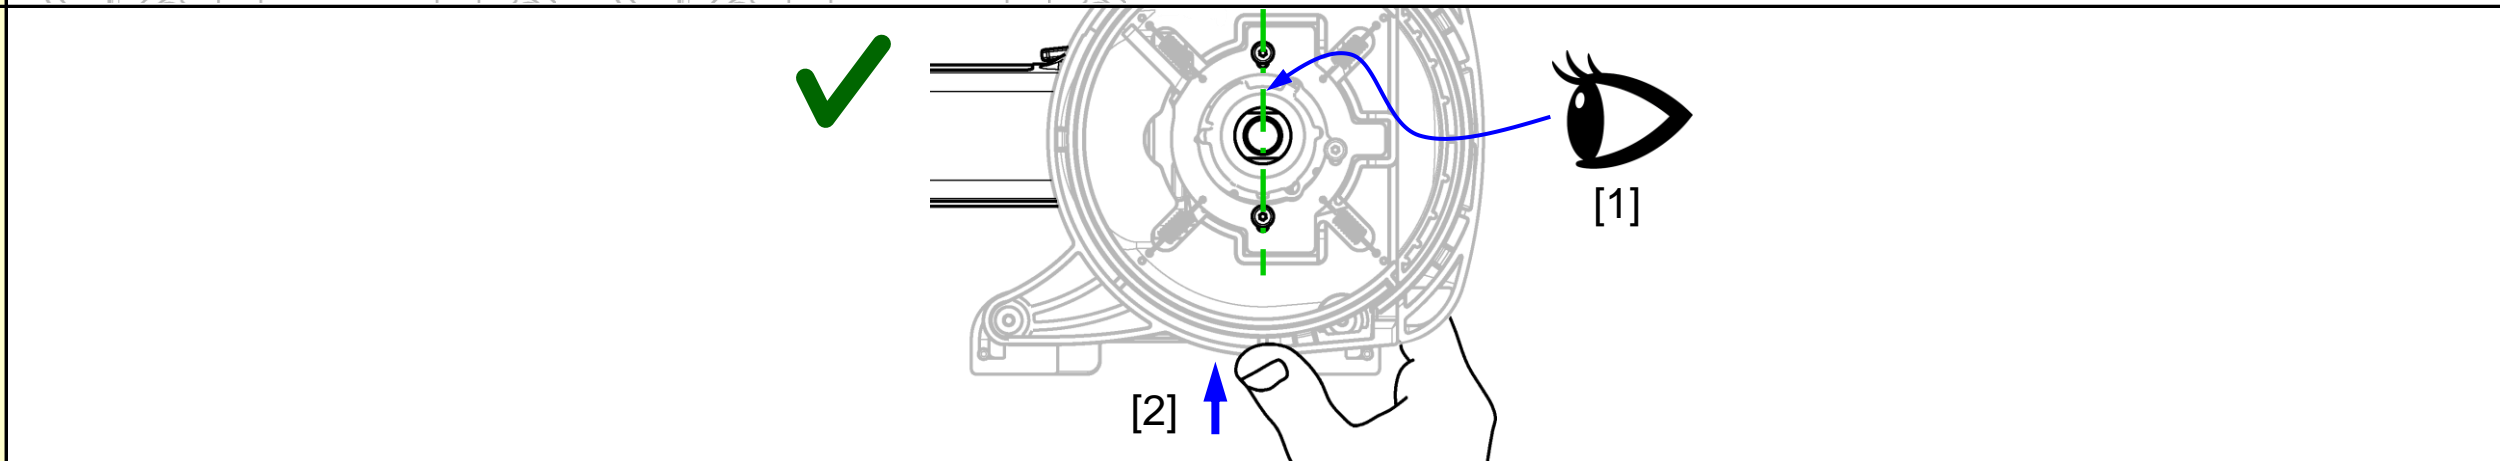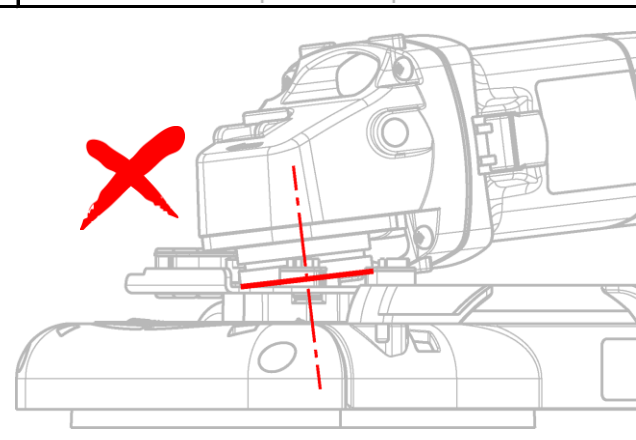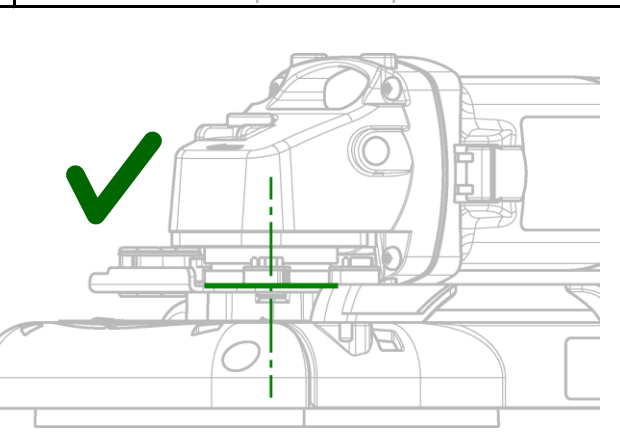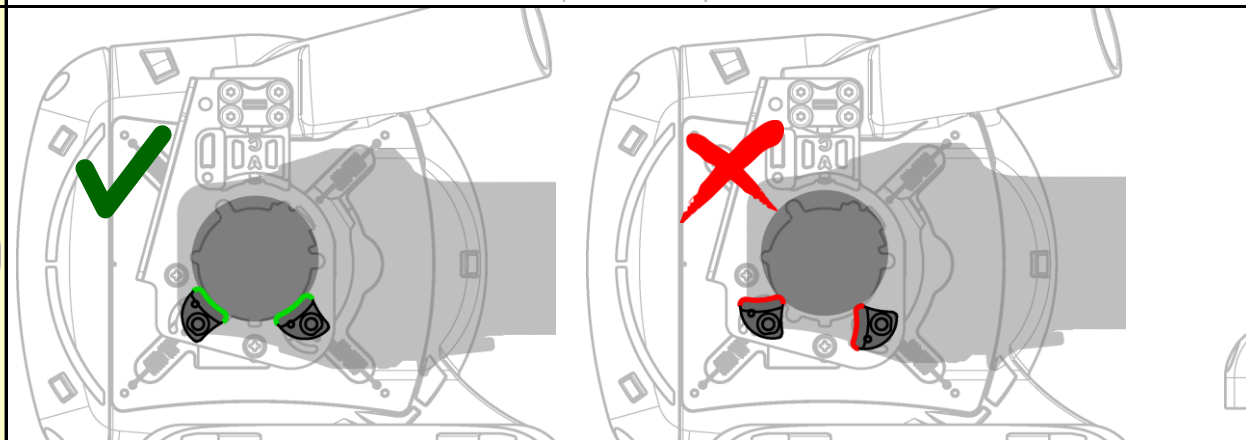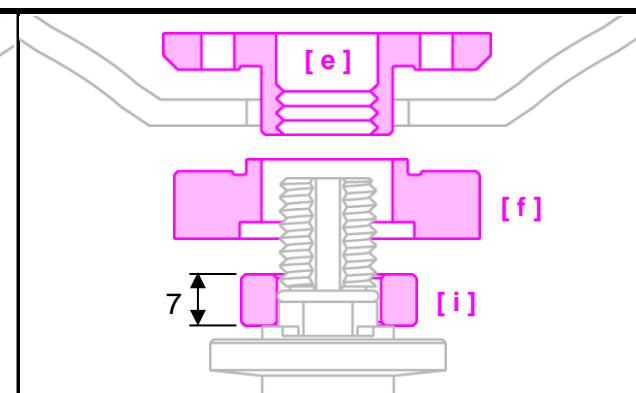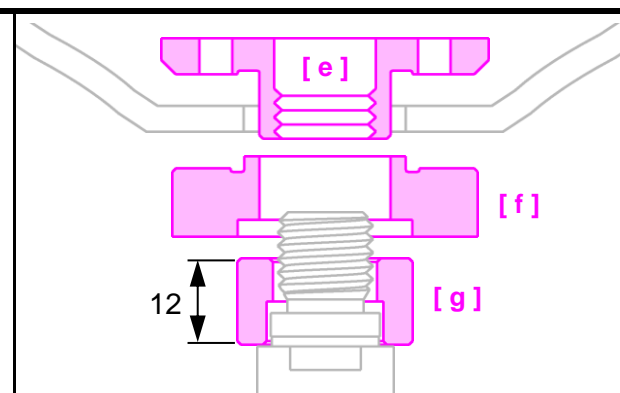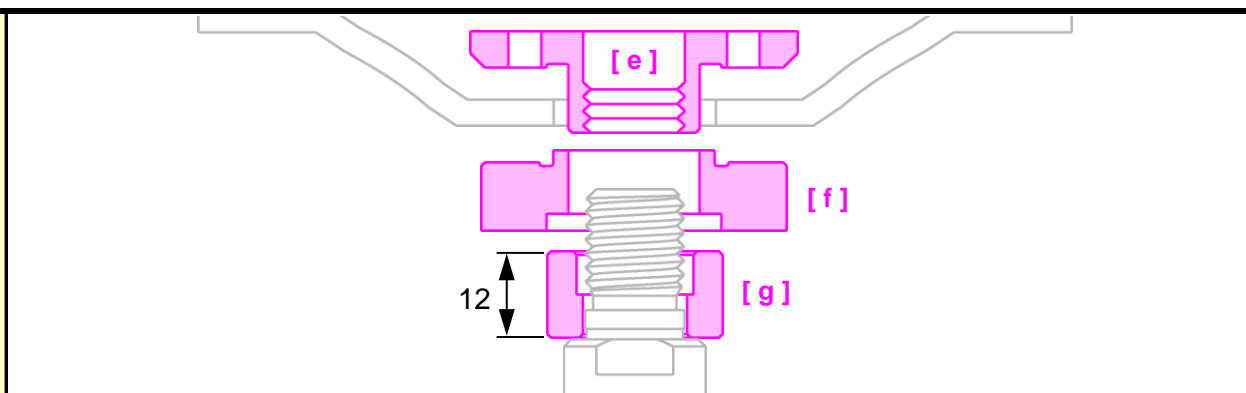

Set [g/h/i] Spacer, [f] Flange, Grinding Cup, then tighten [e] Lock-Nut with Wrench.

4

※In the case of h21mm Grinding Cup.

Hold the Inner Plate of [a] and tighten the Bolt with [d] Wrench securely.

3

Inner Plate

Bolt

[d]

Place [a] on the gearcase of the Grinder.

2

[b/c]

Some models ONLY.

 
 
 
 
 
 
 
 
 
 
 
Set Upper / Lower Brackets at [a] Main Unit.

1

Upper Bracket

Lower Brackets

 
 
 
 
[a]

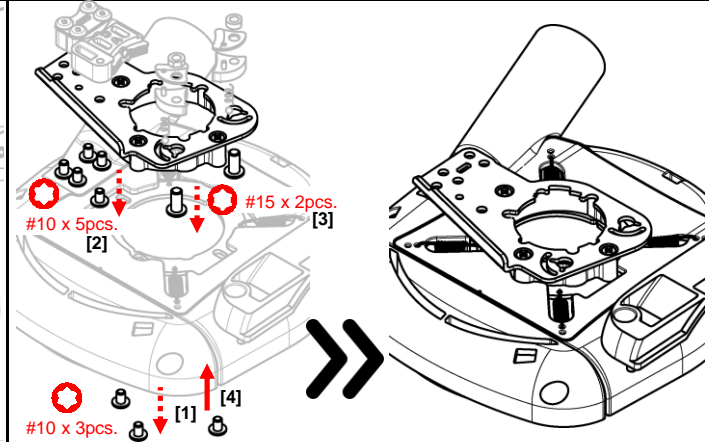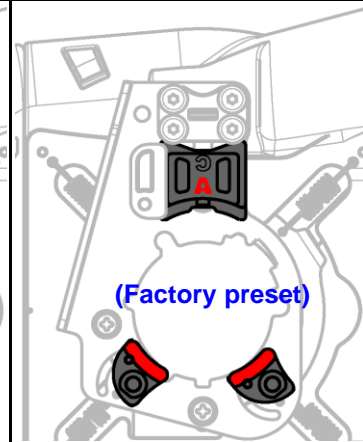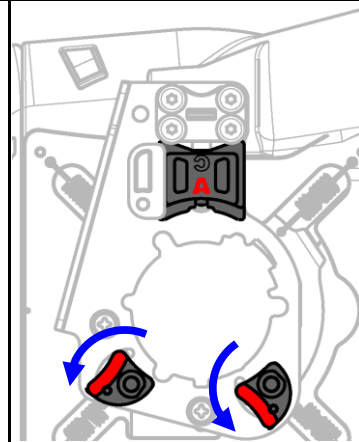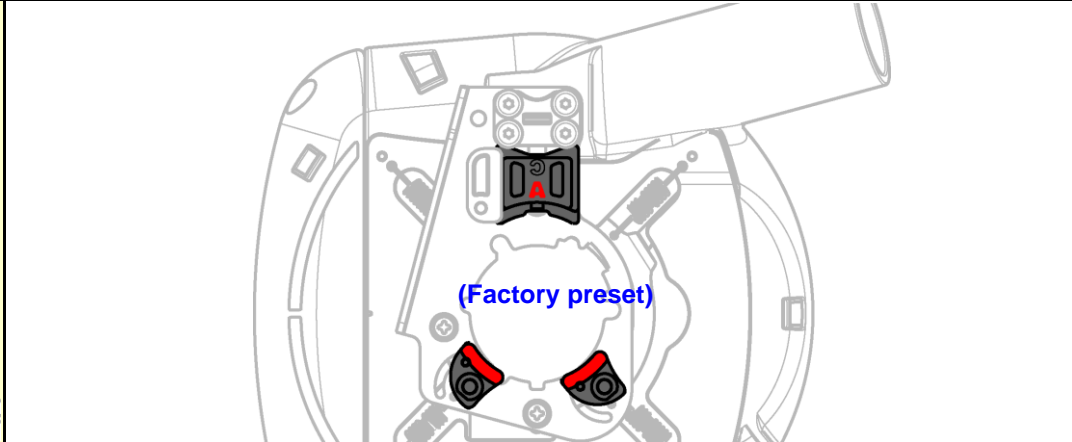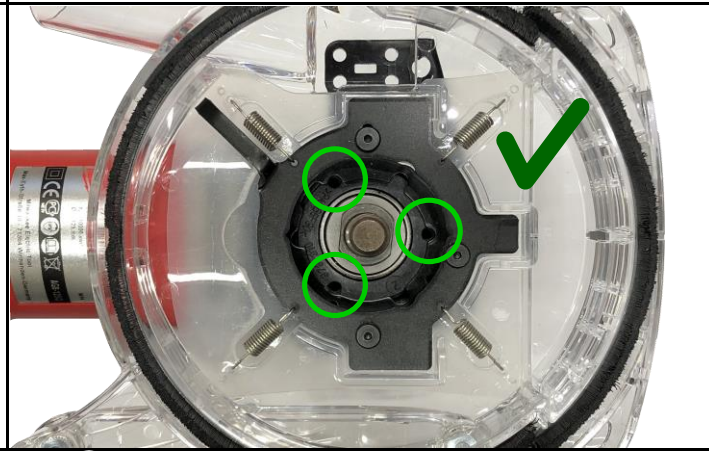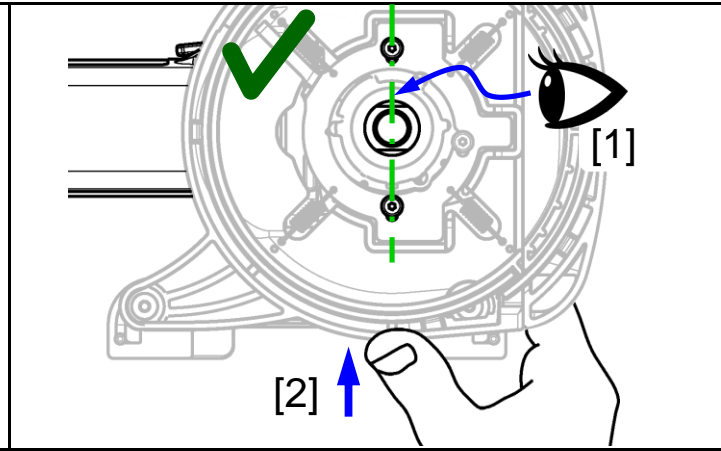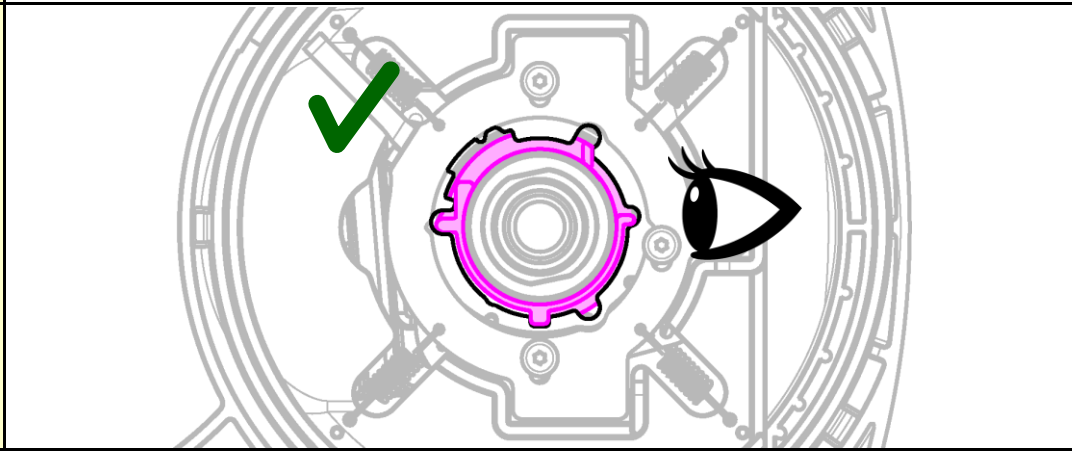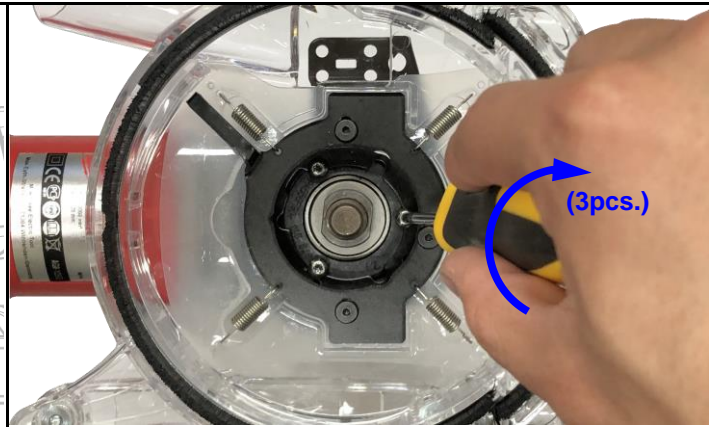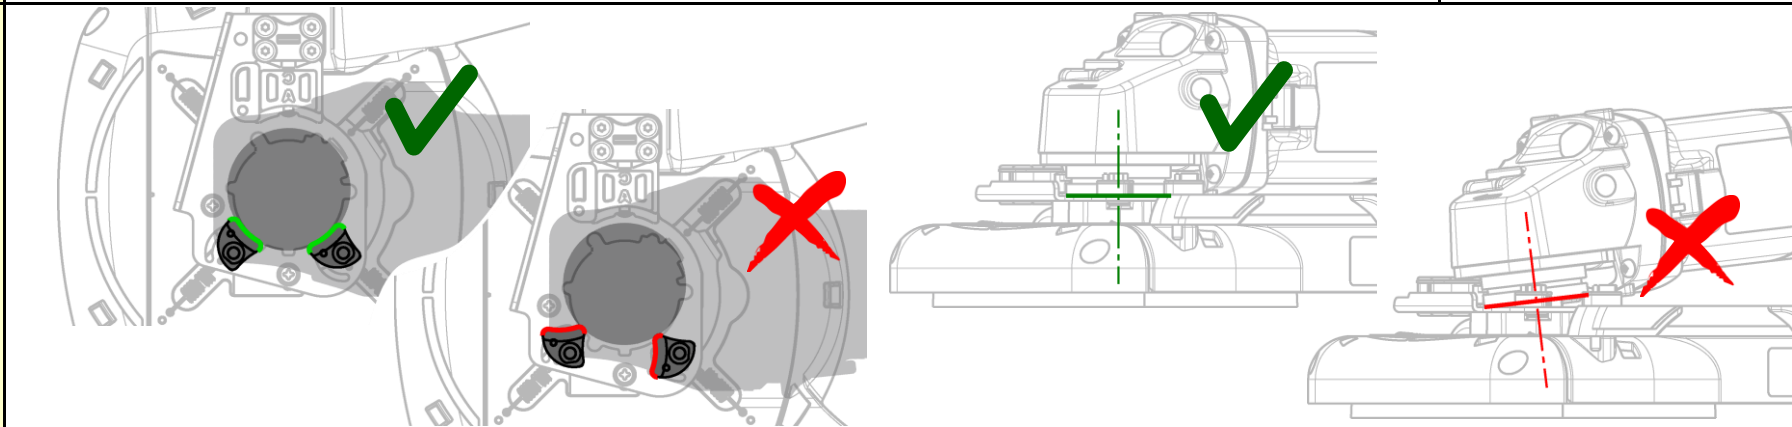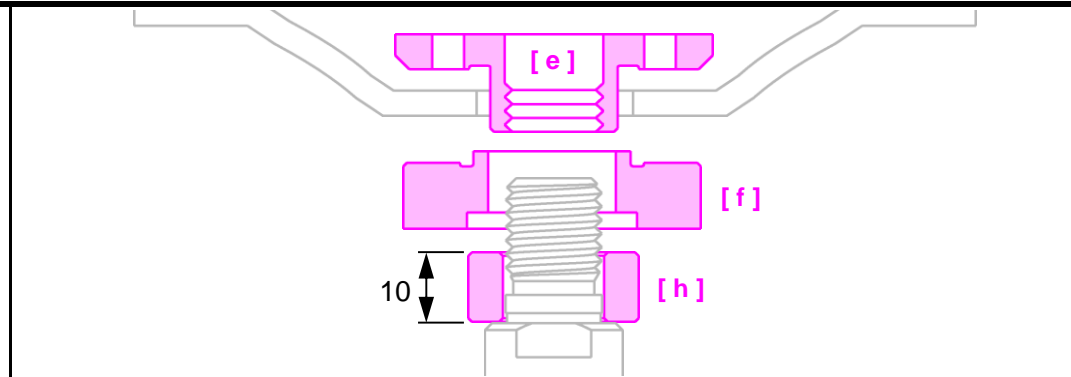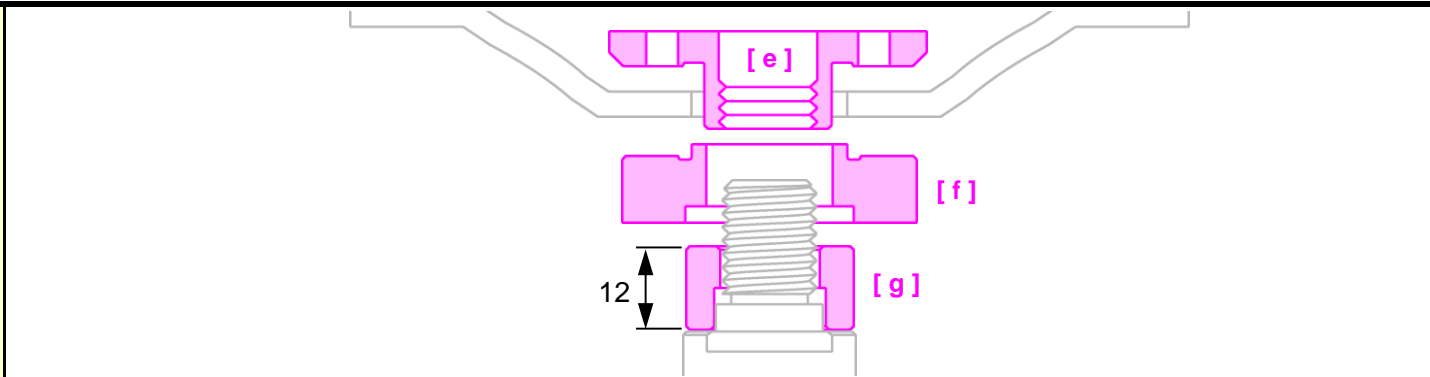

 
 
 
 
 
 
 
 
 
 
 
 
 
 





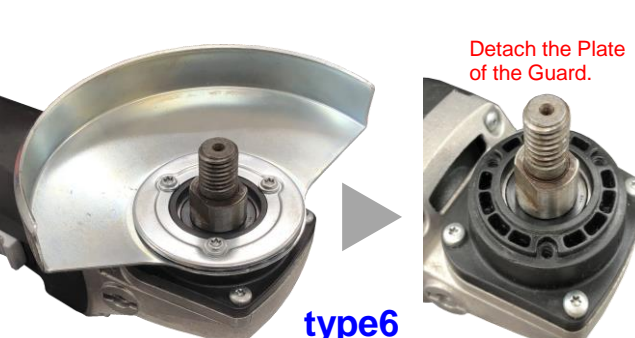 
Milwaukee

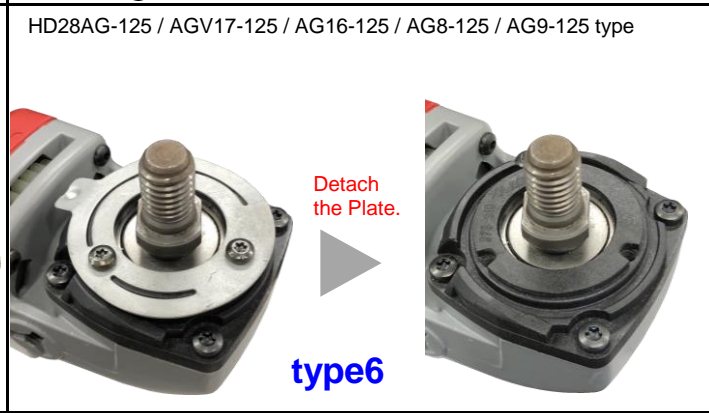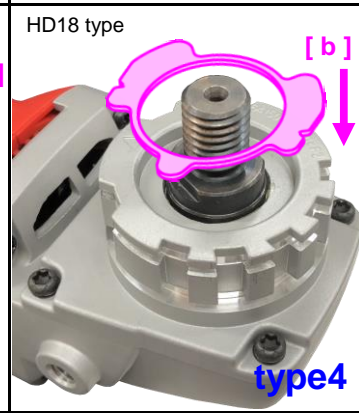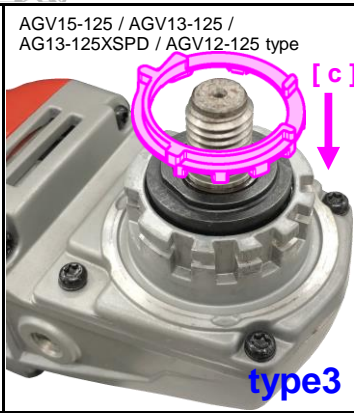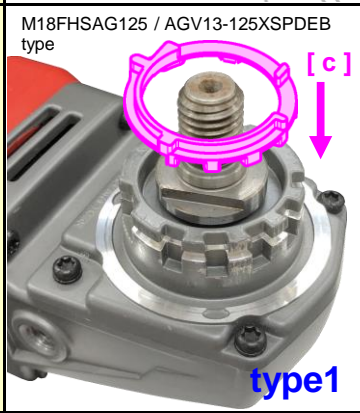AGV10-125EK, AG10-125EK, AG800-125EK type can't be fitted.

※Based on the web information as of 2022 Jan.

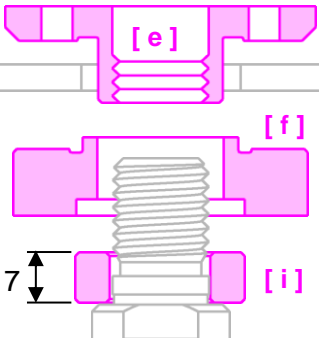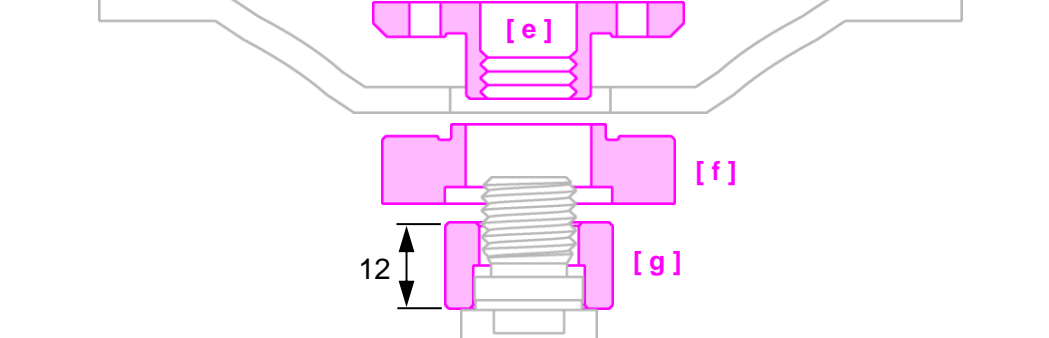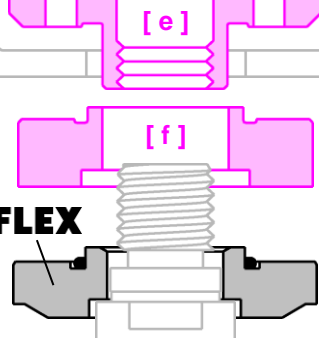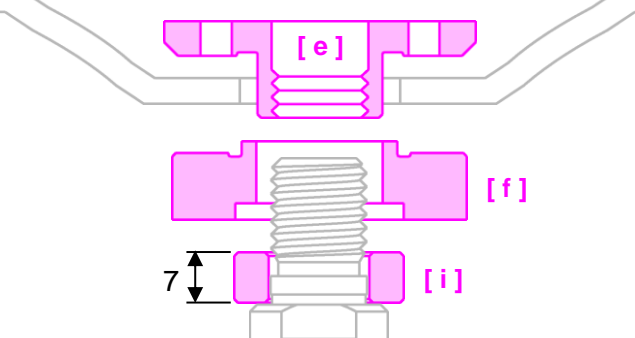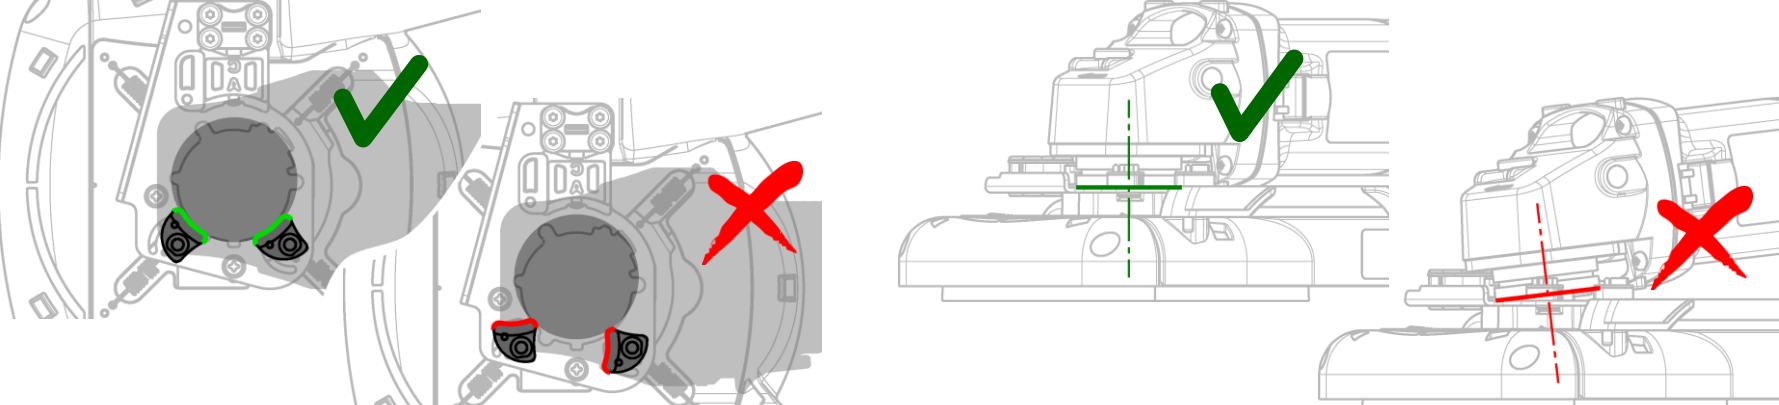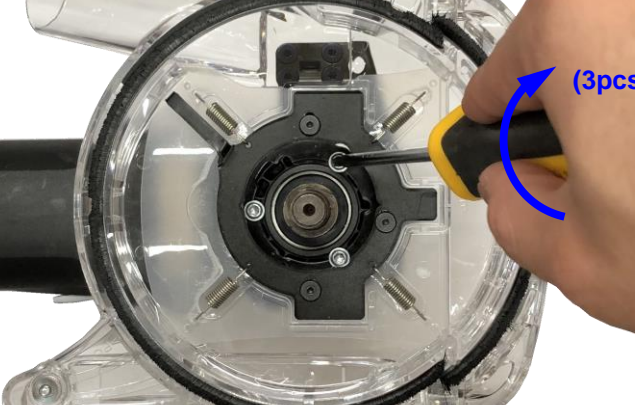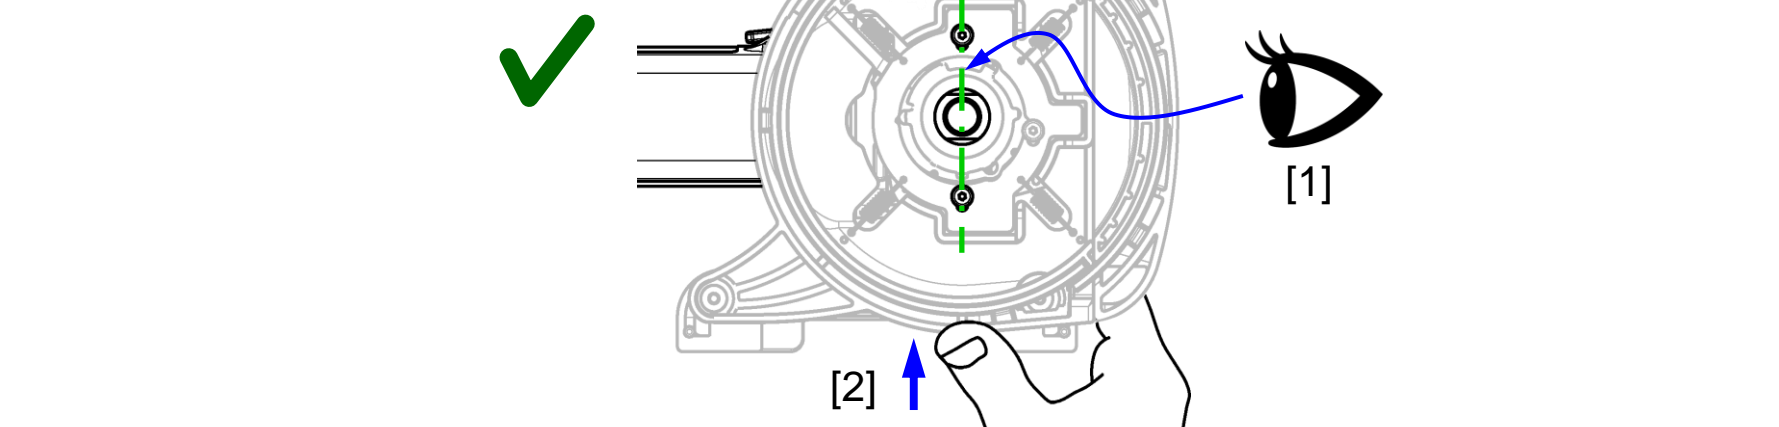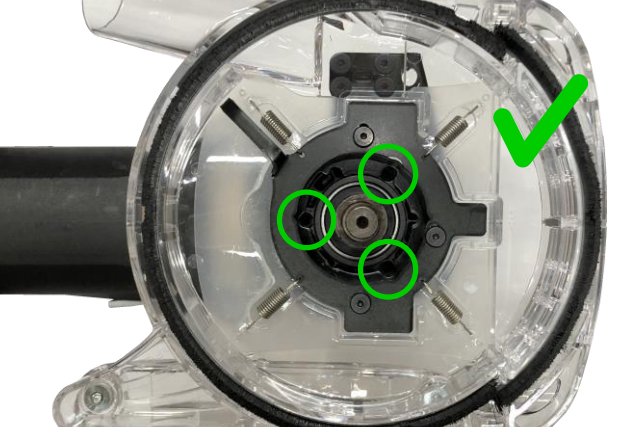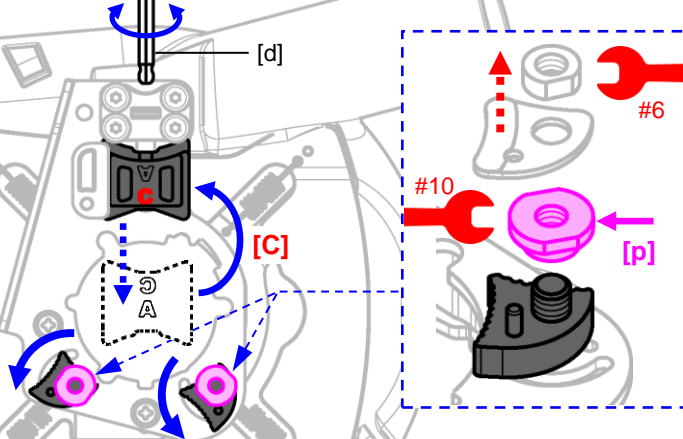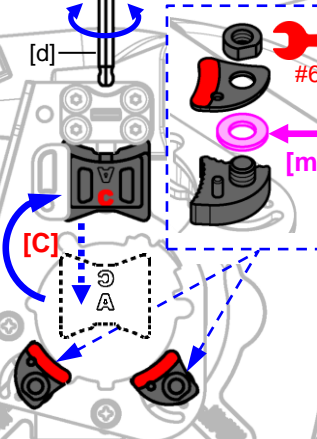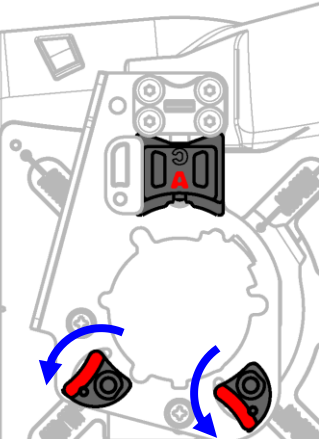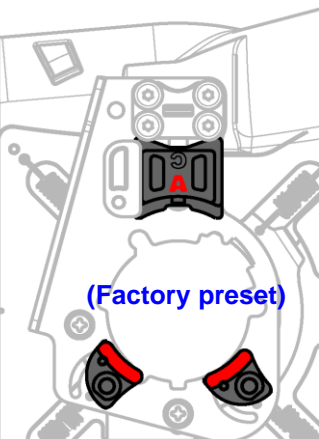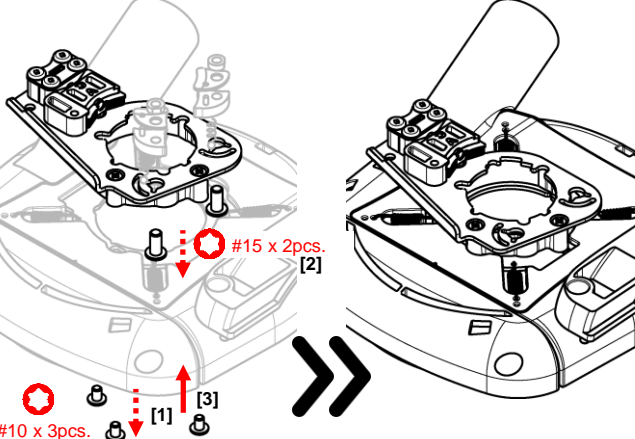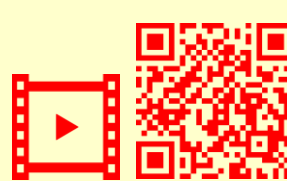

<p>Set [g/h/i] Spacer, [f] Flange, Grinding Cup, then tighten [e] Lock-Nut with Wrench.</p> <p>4</p> <p>※In the case of h21mm Grinding Cup.</p>					
<p>Hold the Inner Plate of [a] and tighten the Bolt with [d] Wrench securely.</p> <p>3</p>					
<p>Place [a] on the gearcase of the Grinder.</p> <p>2</p>					
<p>Set Upper / Lower Brackets at [a] Main Unit.</p> <p>1</p>					
<p>metabo®</p> <p>※Based on the web information as of 2022 Jan.</p>	<p>WPB18LTxBL125 / WB18LTxBL125 / WP18LTx125 / W18LTx125 / WEV1500-125 / WE1500-125 type</p> <p>type1</p>	<p>WEV850-125 / WP850-125 / W850-125 / W750-125 type</p> <p>type2</p>	<p>WE14-125 / WEV17-125 / WEP17-125 / WE17-125 / WEV15-125 / WE15-125 / WEQ1400-125 / WP13-125 / W13-125 / WEV11-125 / WP11-125 / W11-125 / WQ1100-125 / W1100-125 / W9-125 type</p> <p>type3</p>	<p>WPB13-125 / WB18LTBL11-125 / WVB18LTBL11-125 / WPB18LTBL11-125 type</p> <p>type4</p>	<p>WEPBA17-125 / WEBA17-125 / WEA17-125 / WEVA15-125 / WA13-125 / WEA11-125 type</p> <p>type5</p>

<p>Set [g/h/i] Spacer, [f] Flange, Grinding Cup, then tighten [e] Lock-Nut with Wrench.</p> <p>4</p> <p>※In the case of h21mm Grinding Cup.</p>						
<p>Hold the Inner Plate of [a] and tighten the Bolt with [d] Wrench securely.</p> <p>3</p> <p>Inner Plate</p> <p>Bolt</p>						
<p>Place [a] on the gearcase of the Grinder.</p> <p>2</p> <p>Some models ONLY.</p>						
<p>Set Upper / Lower Brackets at [a] Main Unit.</p> <p>1</p> <p>Upper Bracket</p> <p>Lower Brackets</p>						
<p>FLEX</p> <p>※Based on the web information as of 2022 Jan.</p> 	<p>L1506VR type</p>  <p>type1</p>	<p>L9-11 125 / LE9-11 125 / L12-11 125 / L13-10 125-EC / LE14-7 125 INOX / L15-11 125 / LE15-11 125 / L3406VRG / LB17-11 125 type</p>  <p>type2</p>	<p>L1400 125 type</p>  <p>type3</p>	<p>LBE125 18.0-EC / LB125 18.0-EC / L125 18.0-EC type</p>  <p>18.0V type4</p>	<p>L811 125 / L1001 125 type</p>  <p>type5</p>	<p>[OLD type] L3410FR / L3410VR type</p>  <p>type6</p> <p>Detach the Plate of the Guard.</p>

