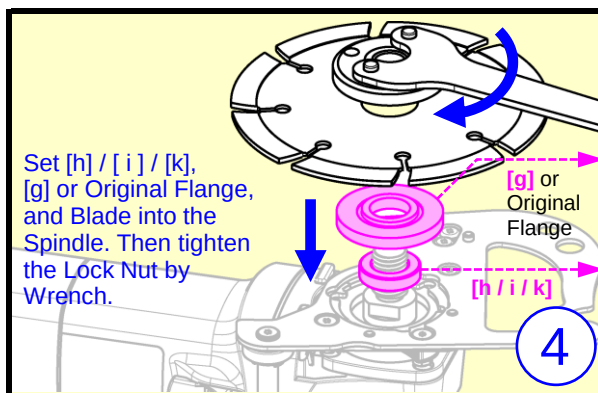
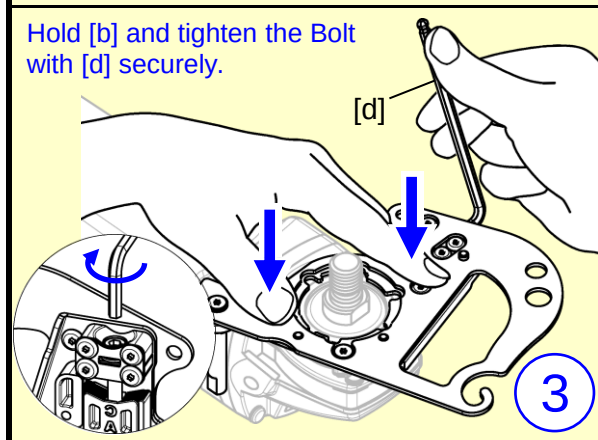
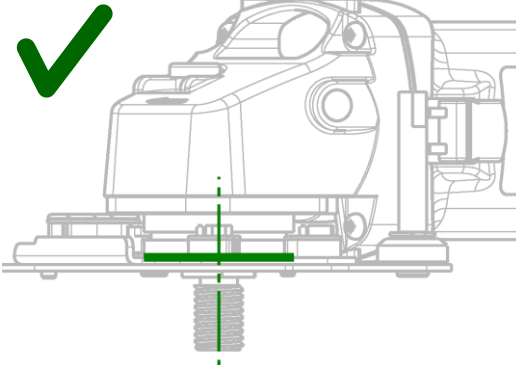
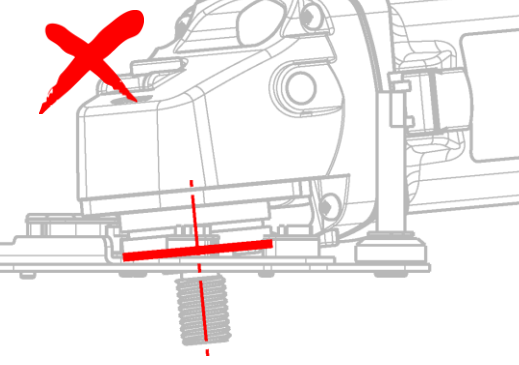
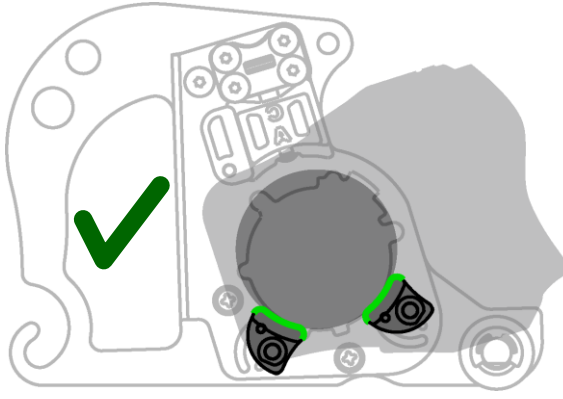
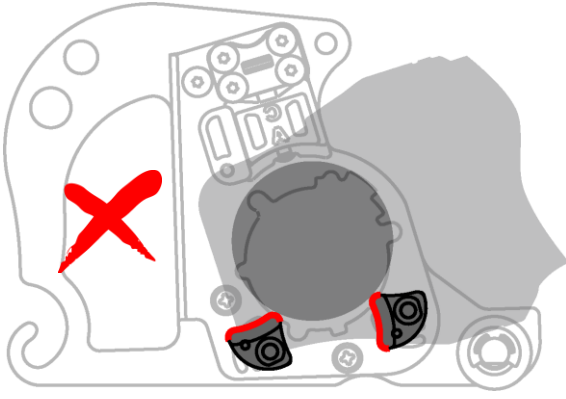
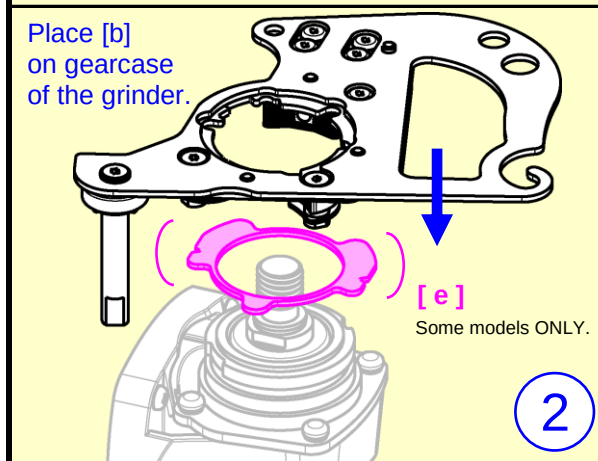
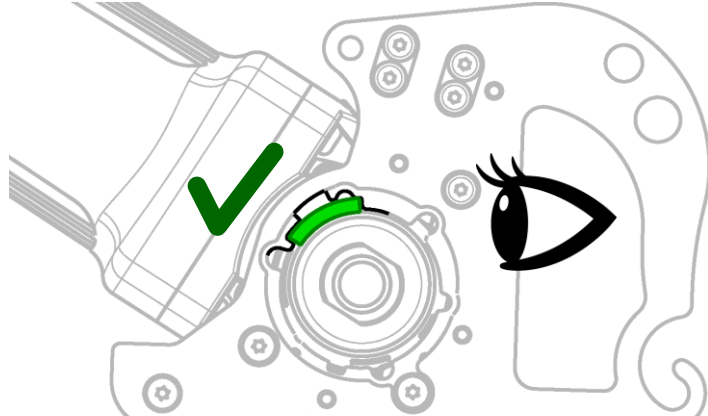
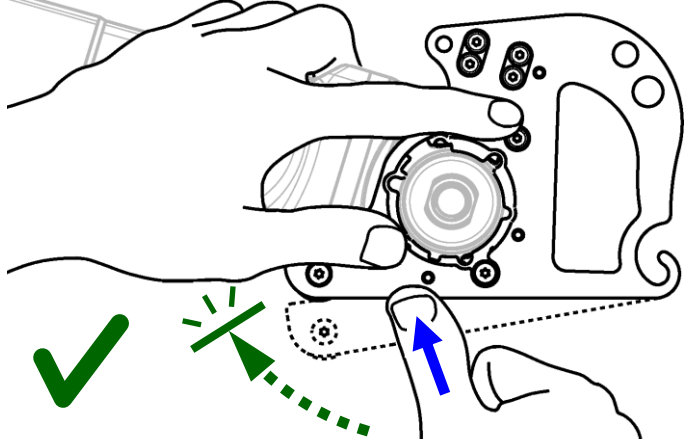
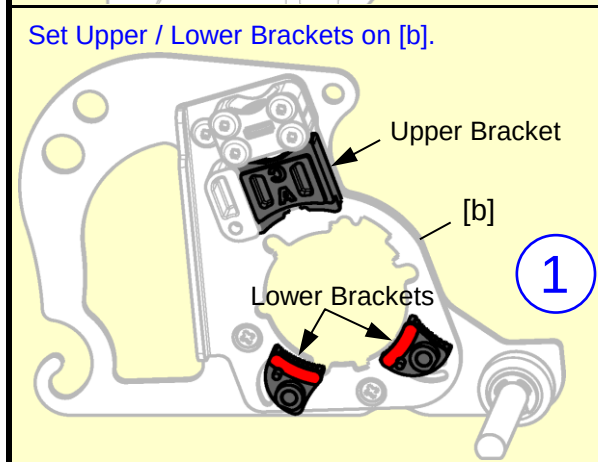
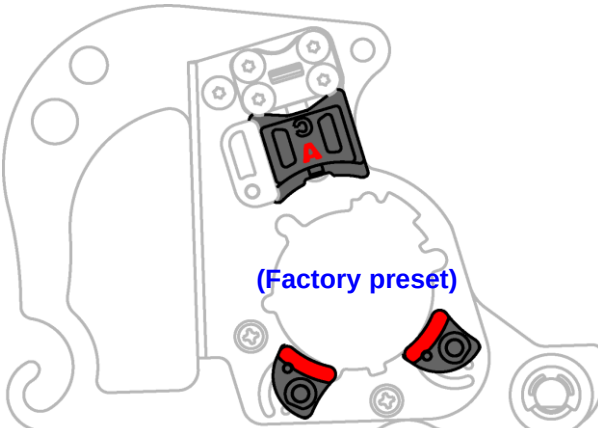
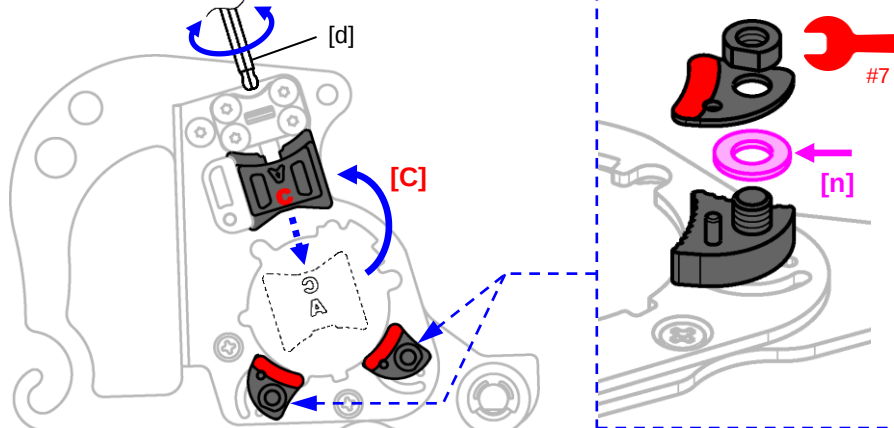
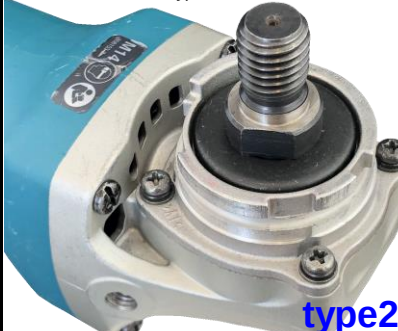
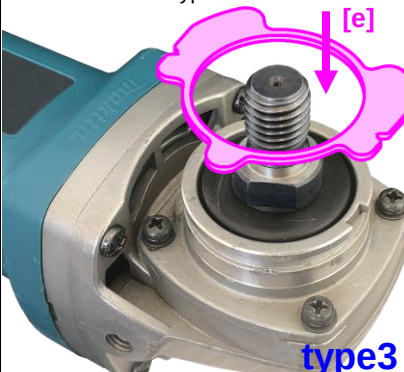
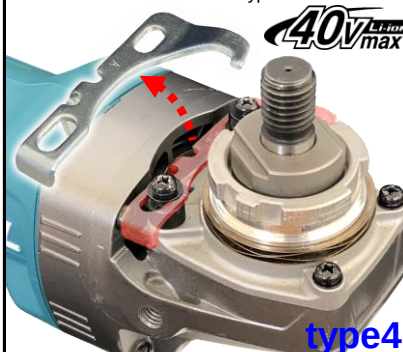
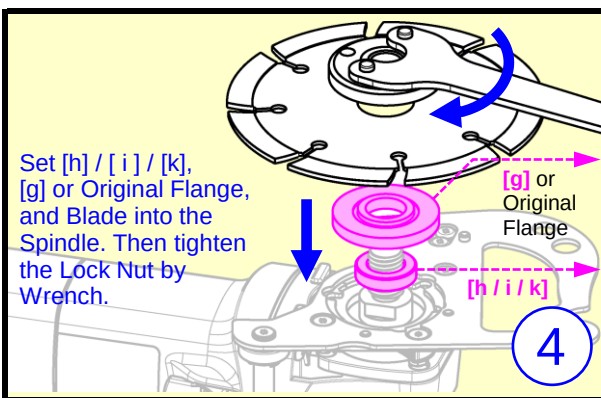
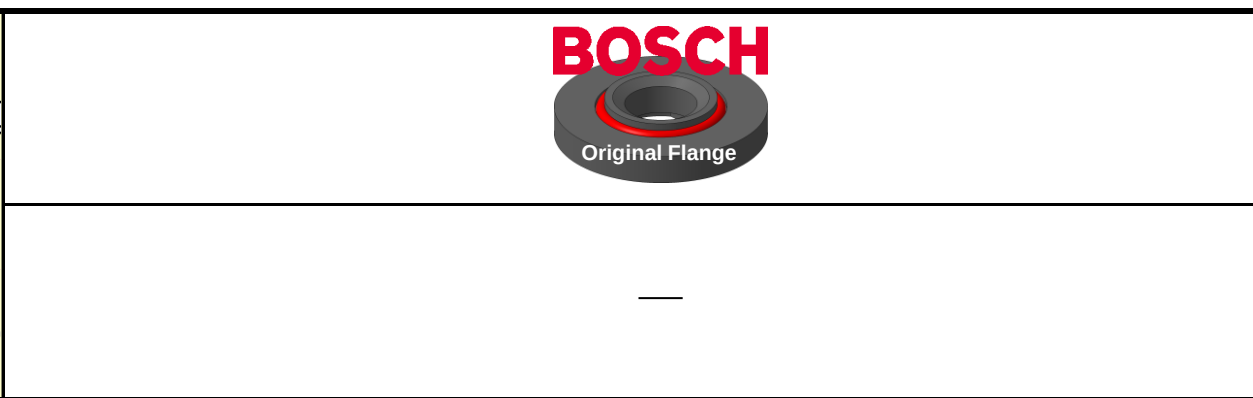
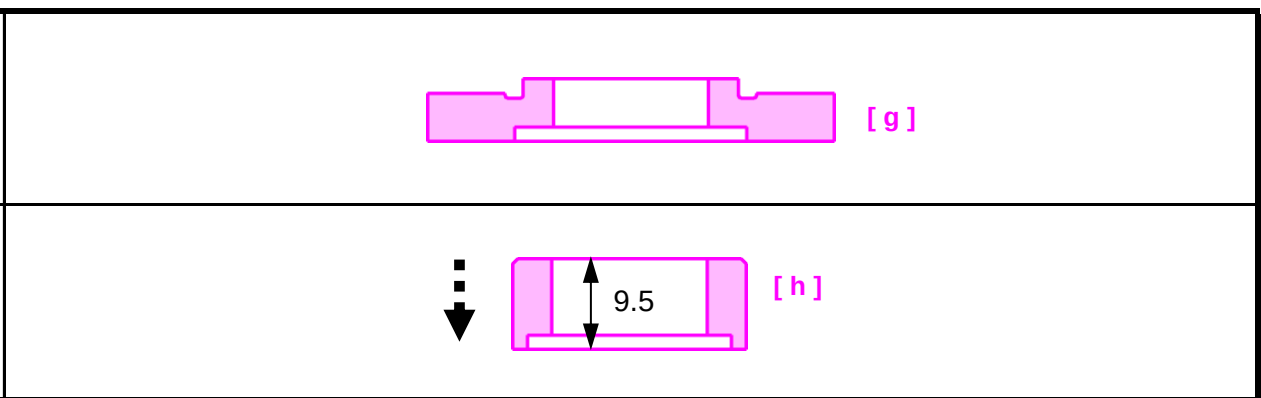
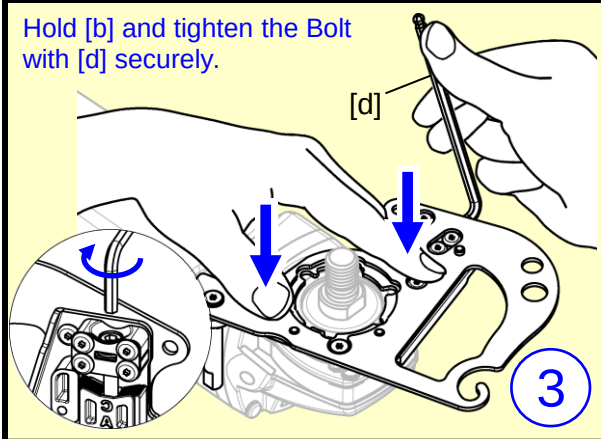
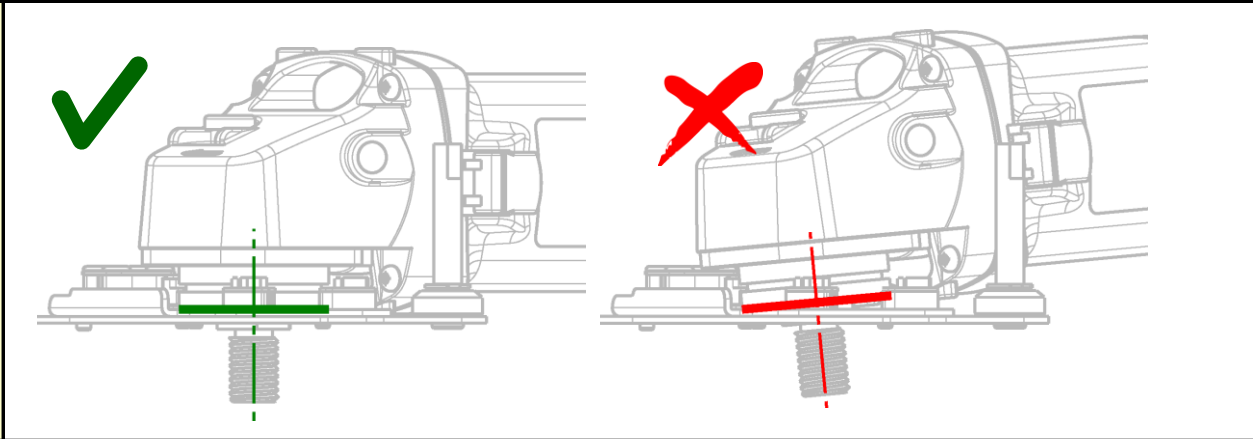
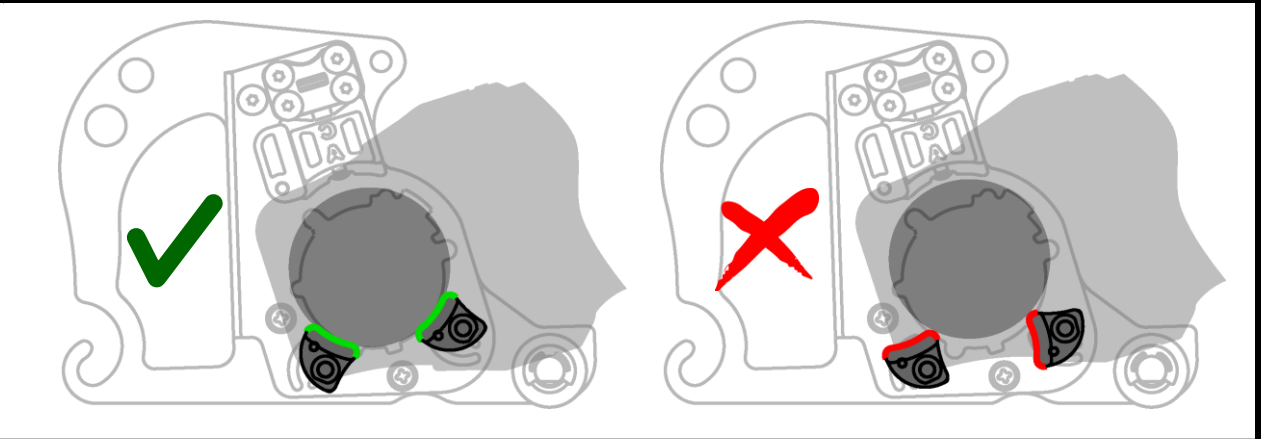
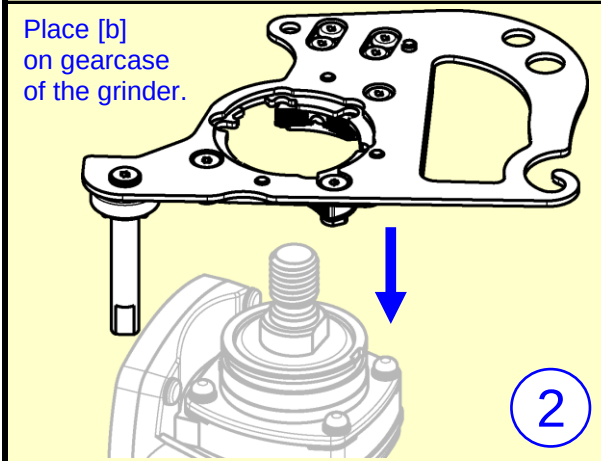
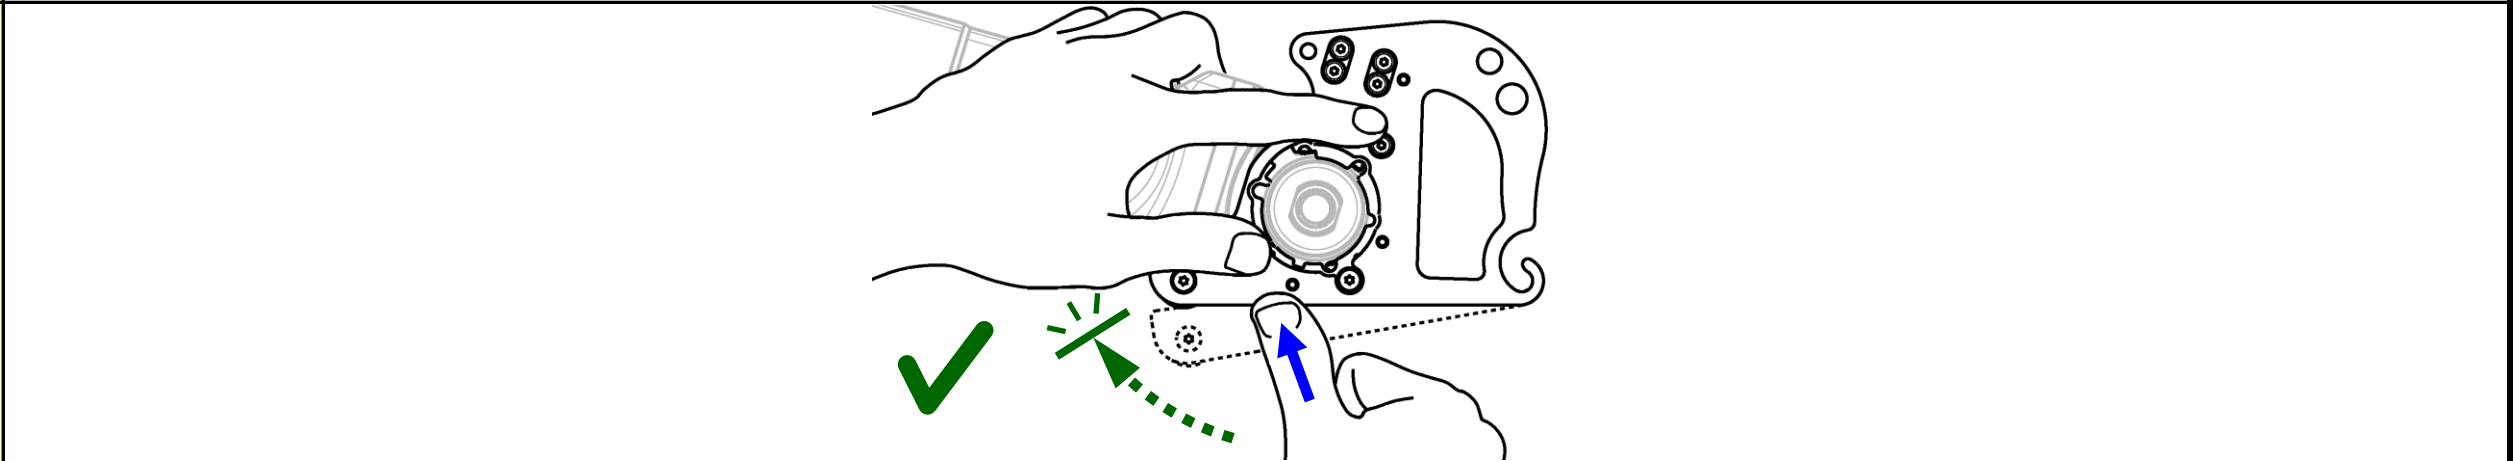
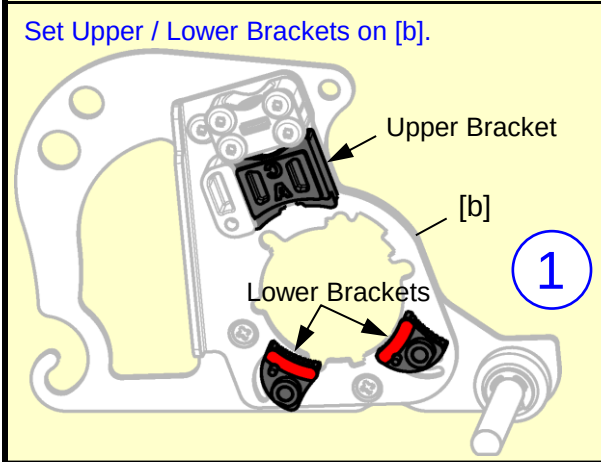
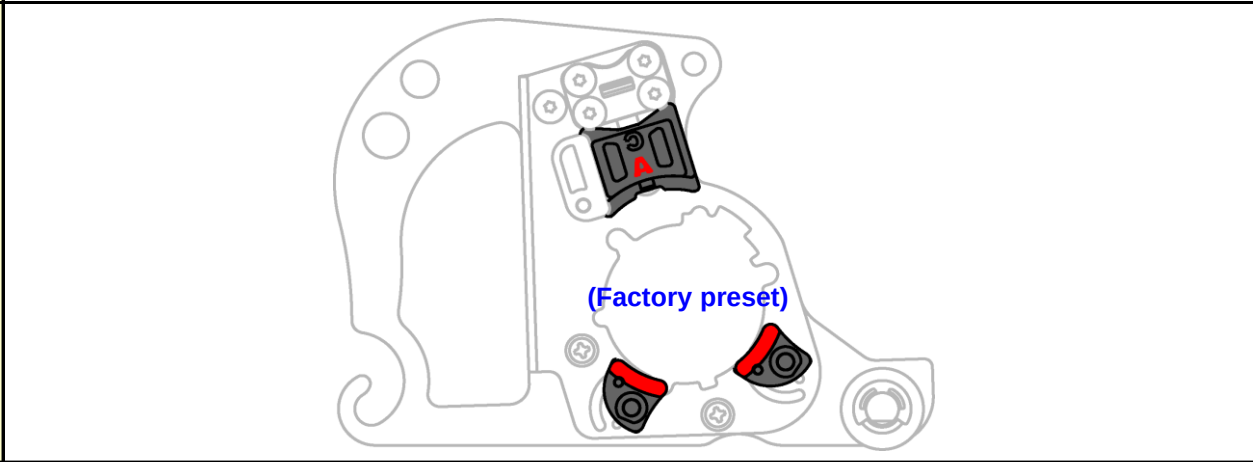
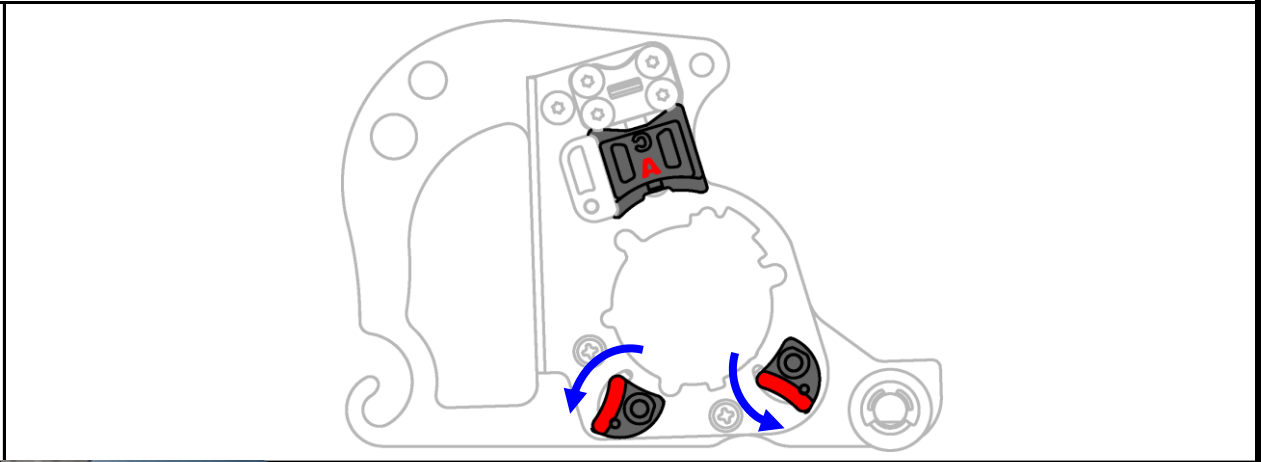
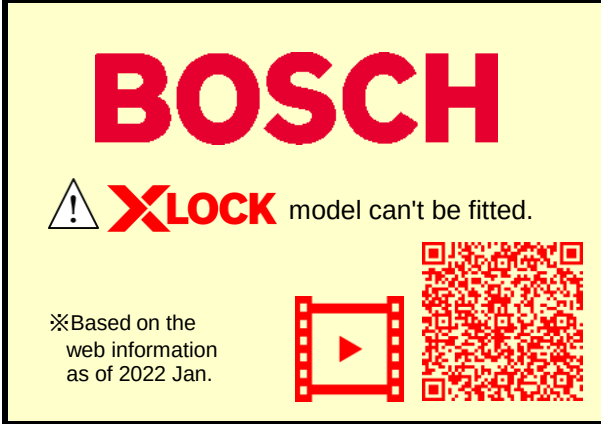
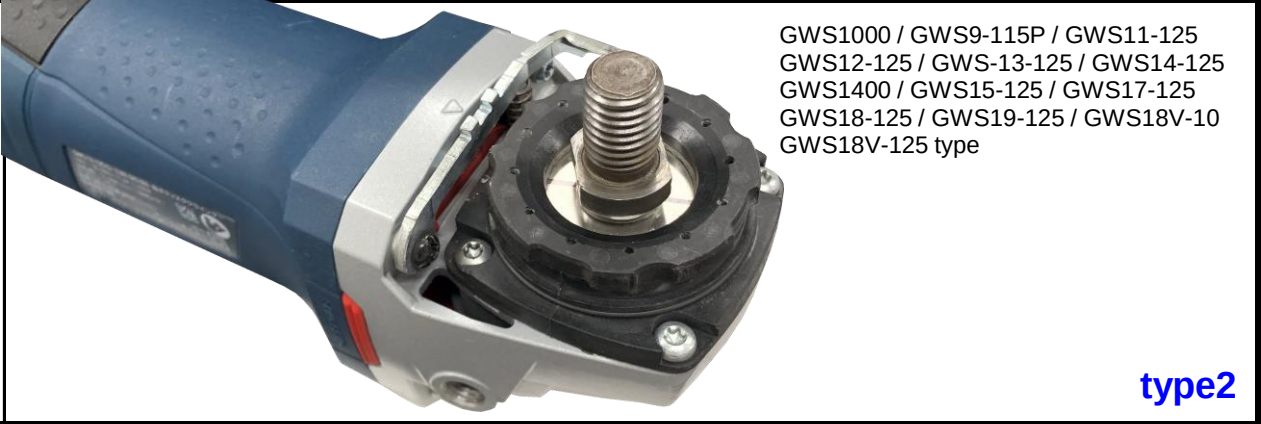
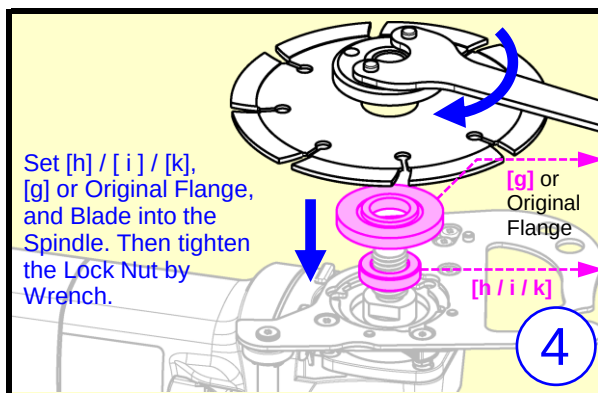

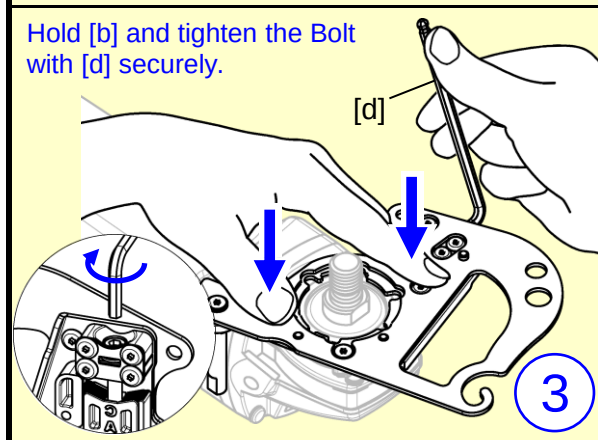
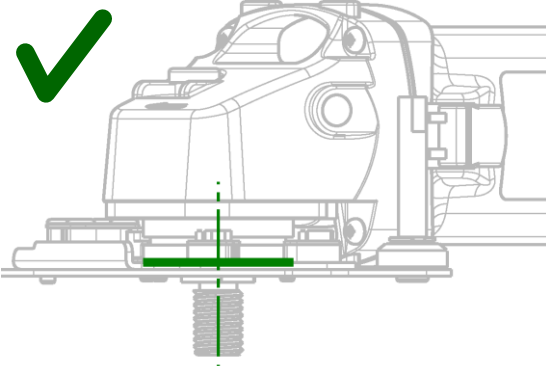
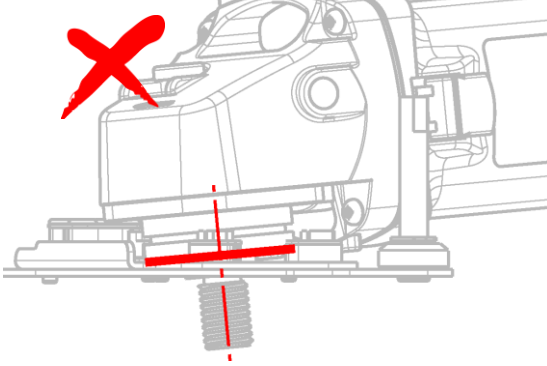
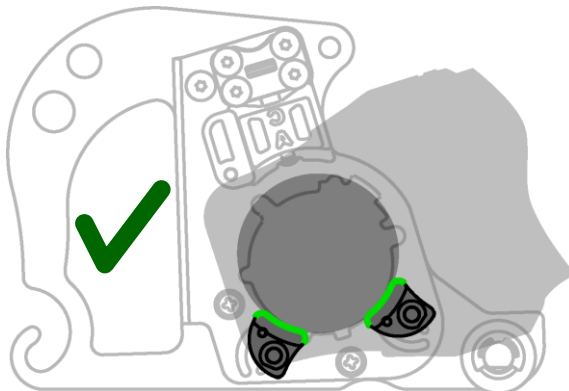
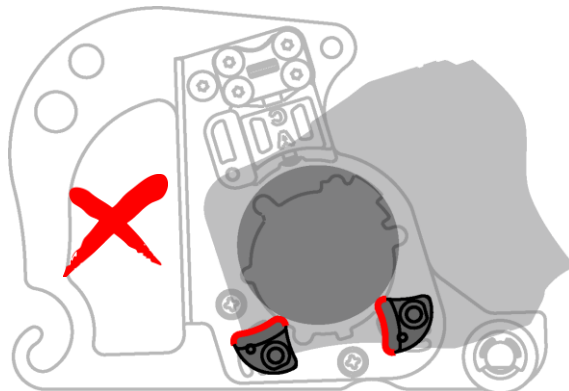
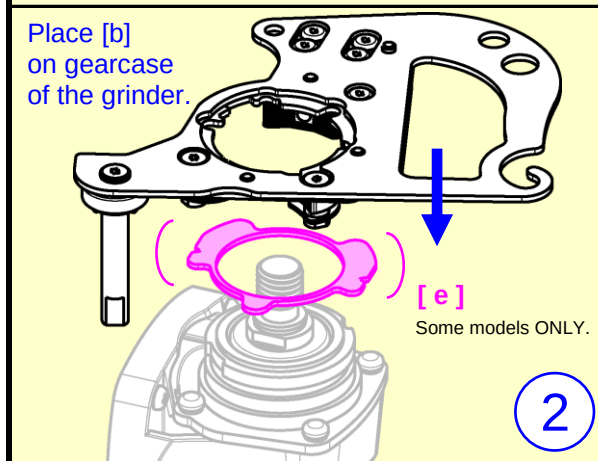
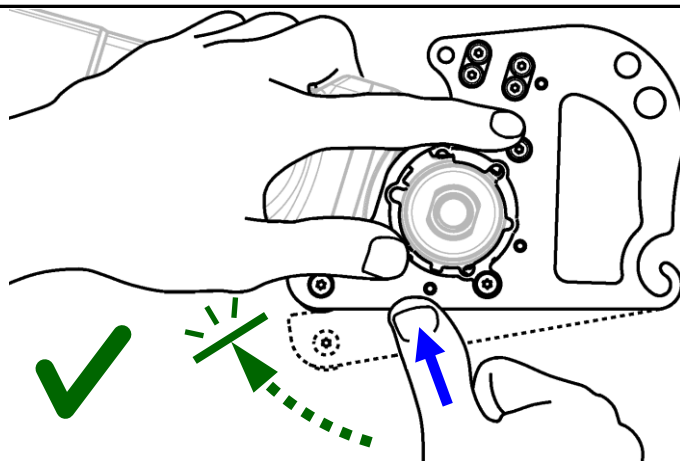
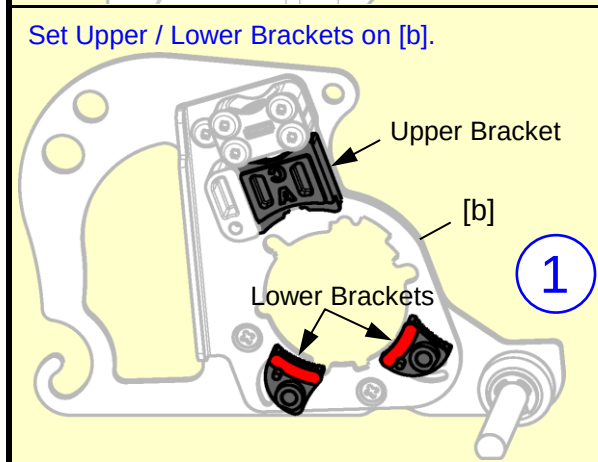
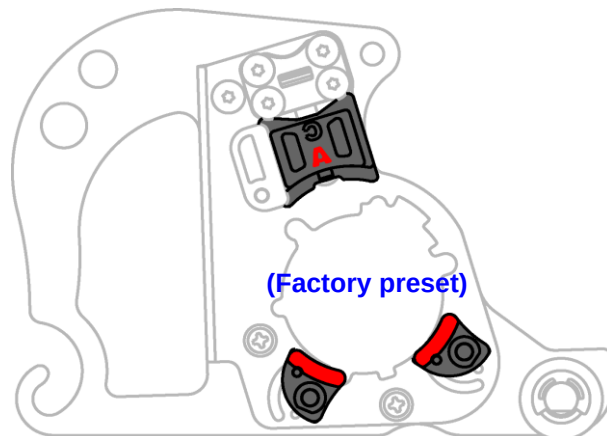
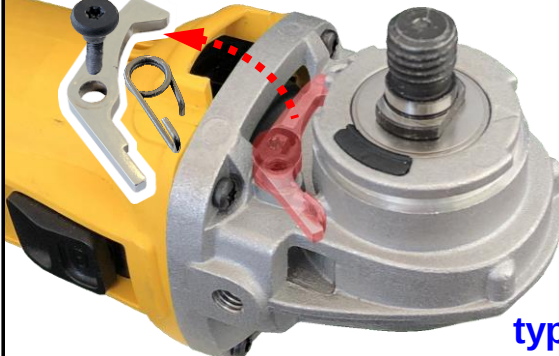
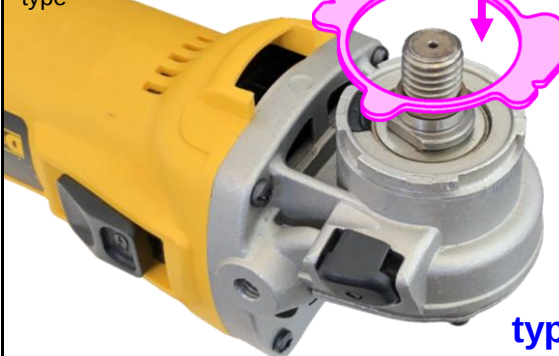
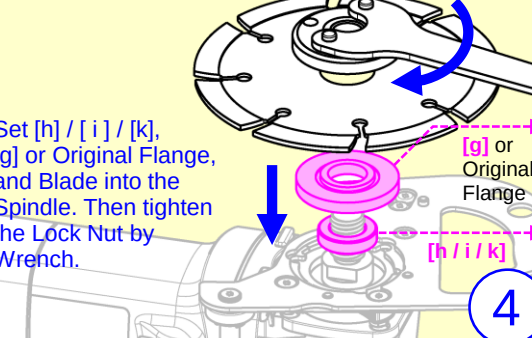

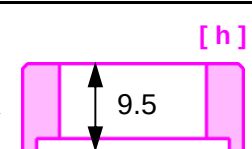
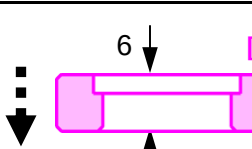
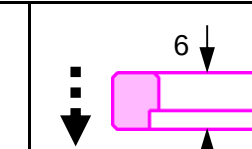
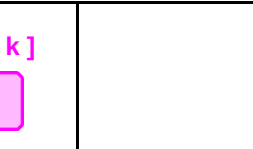
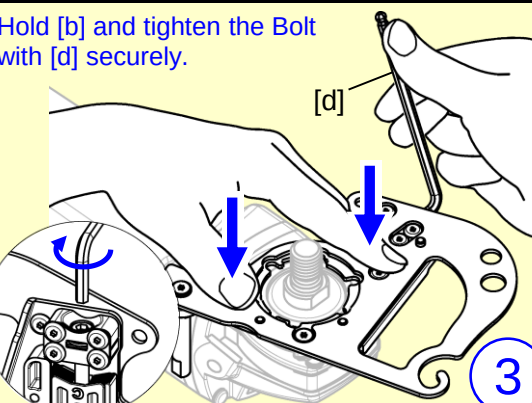
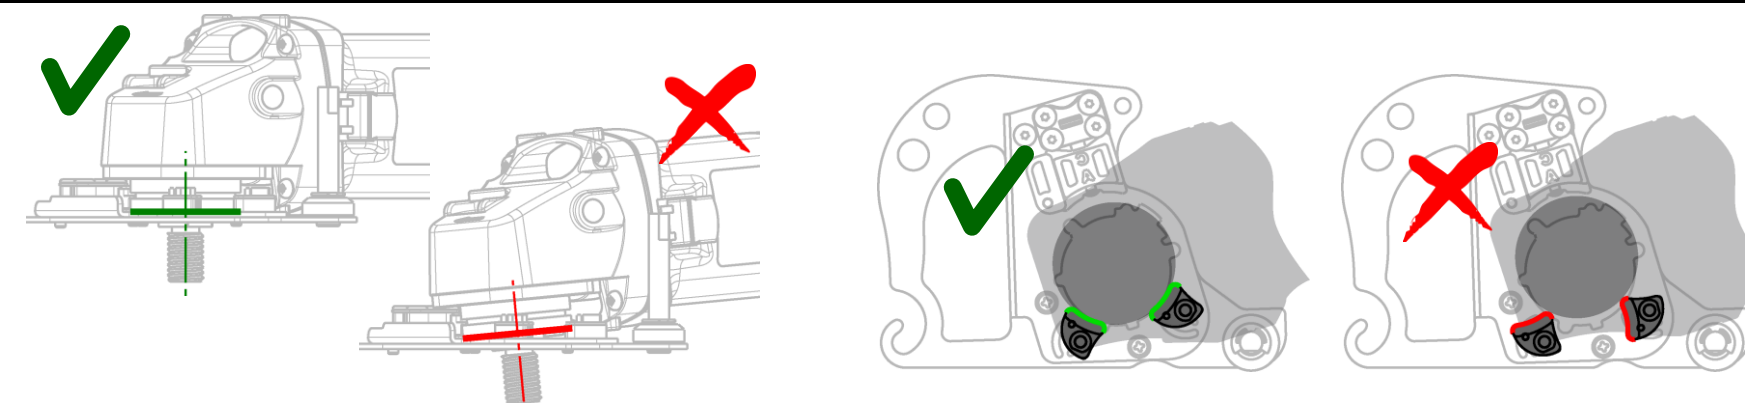
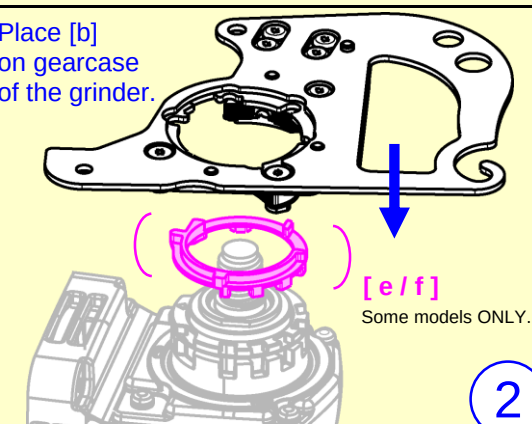
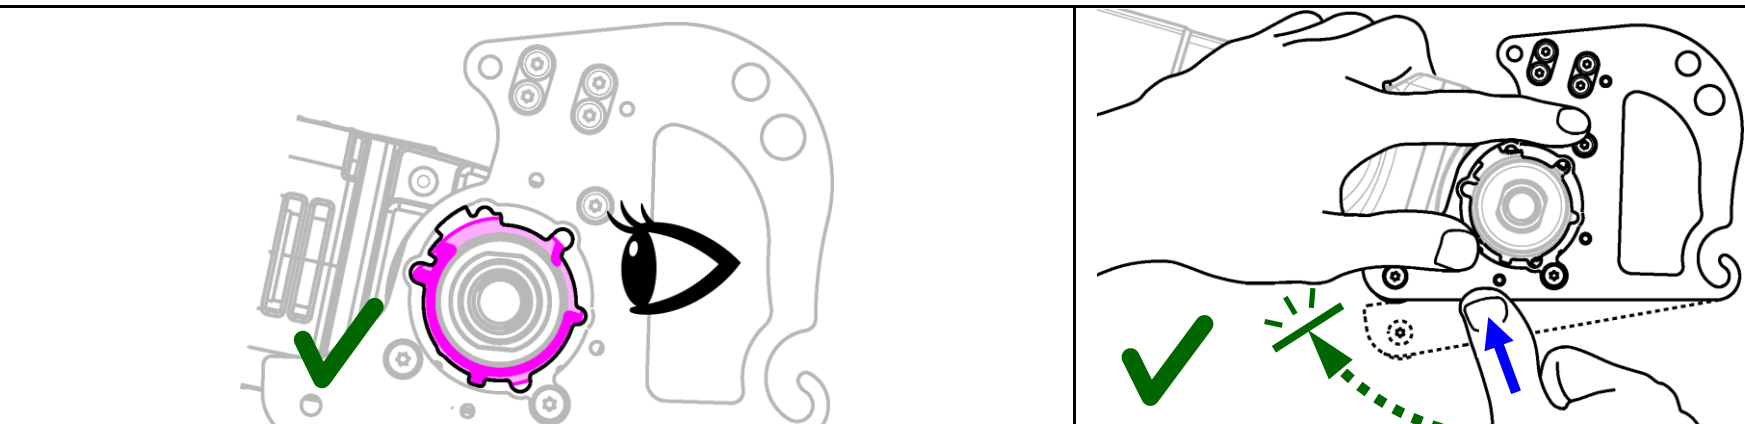
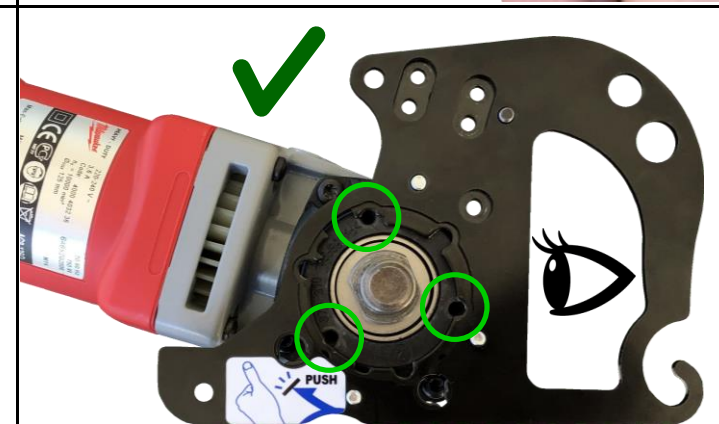
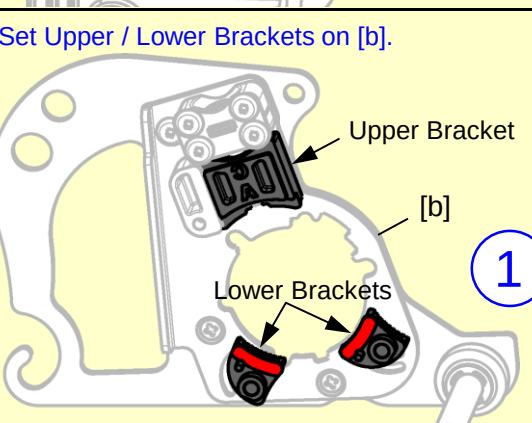
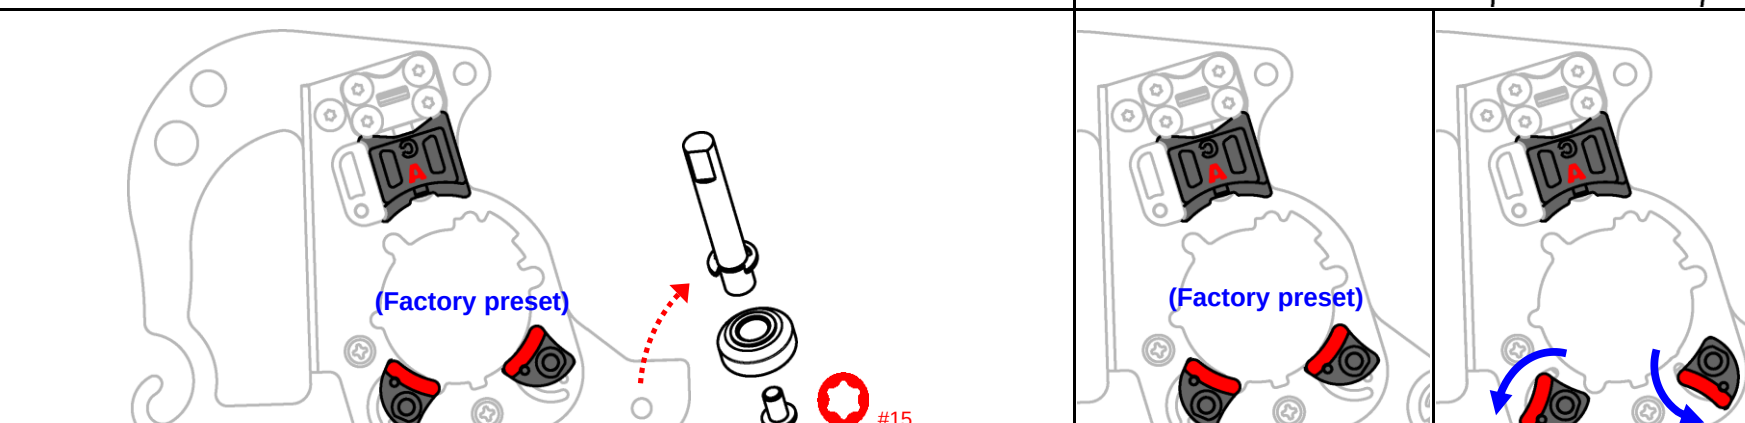
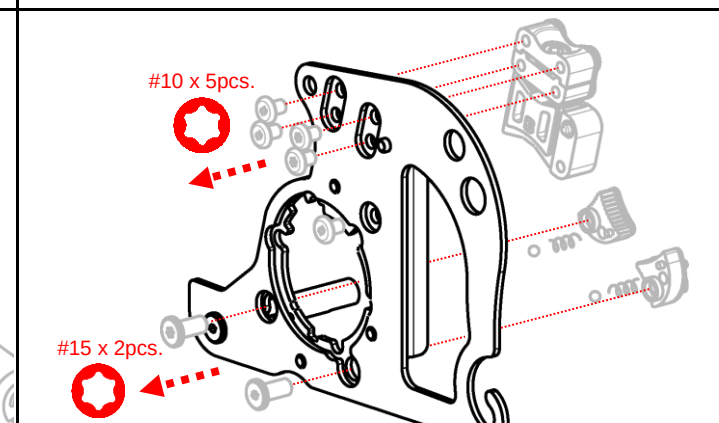
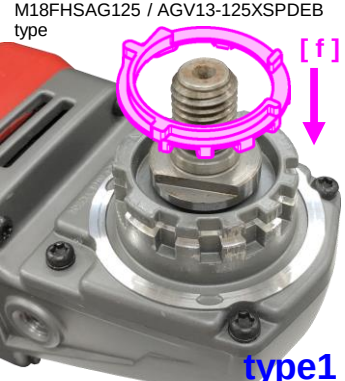
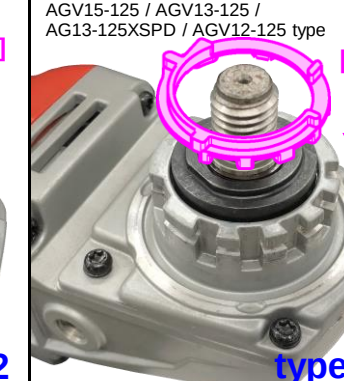
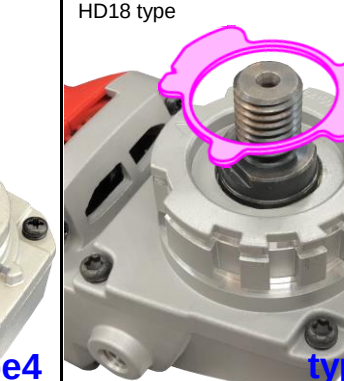
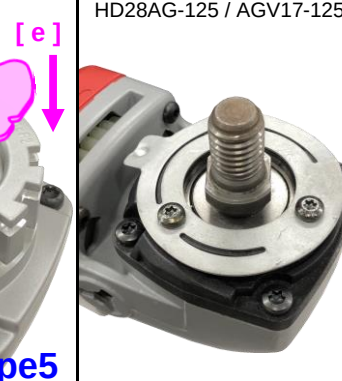
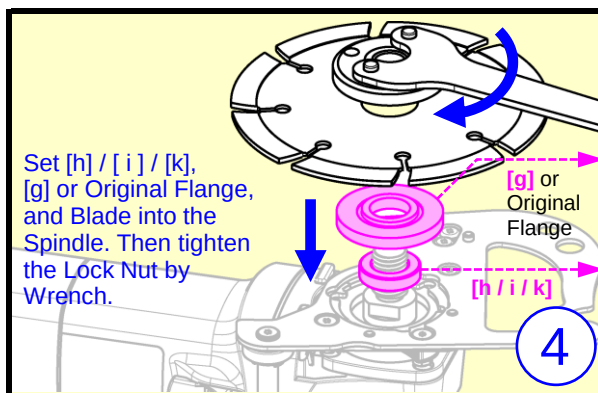
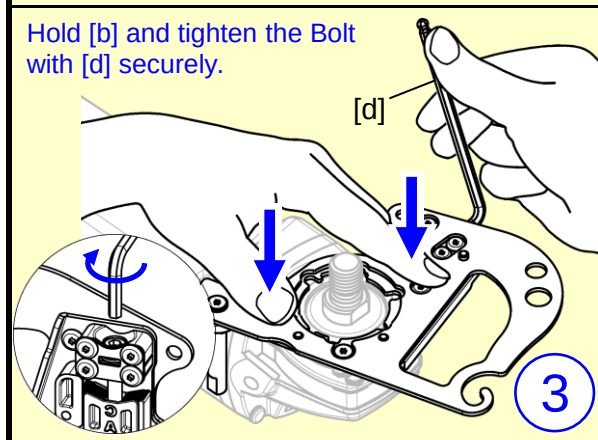
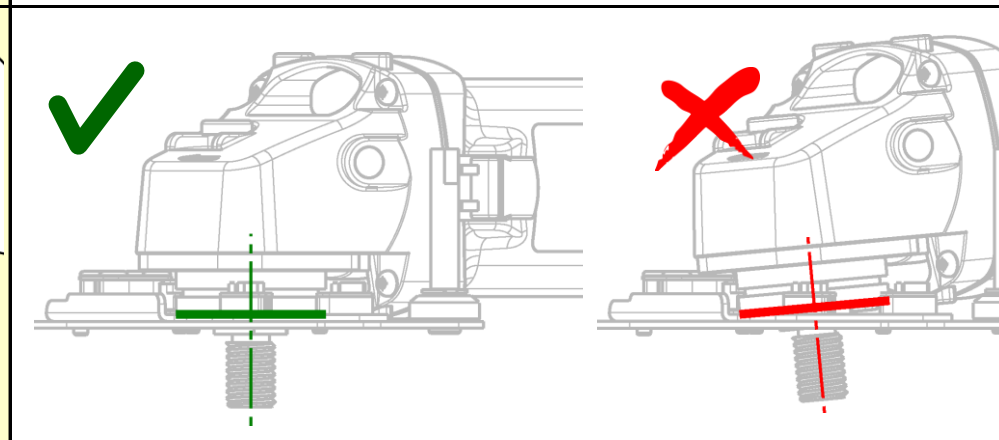
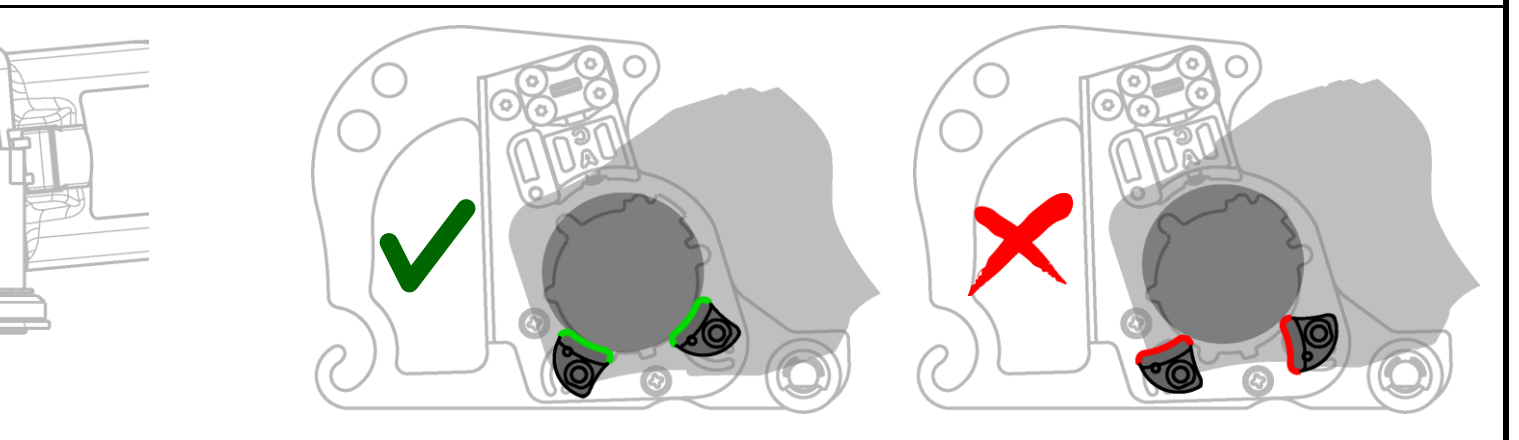
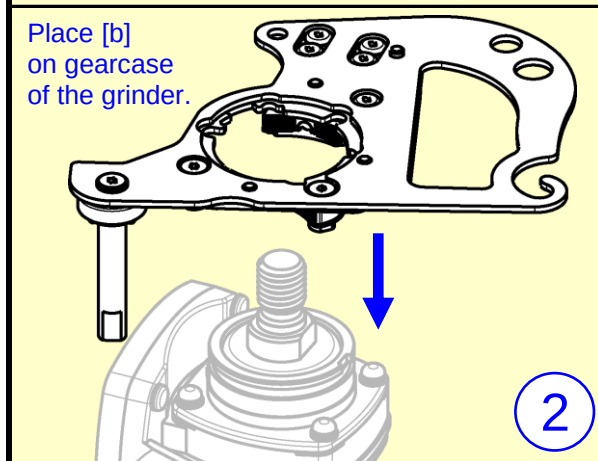
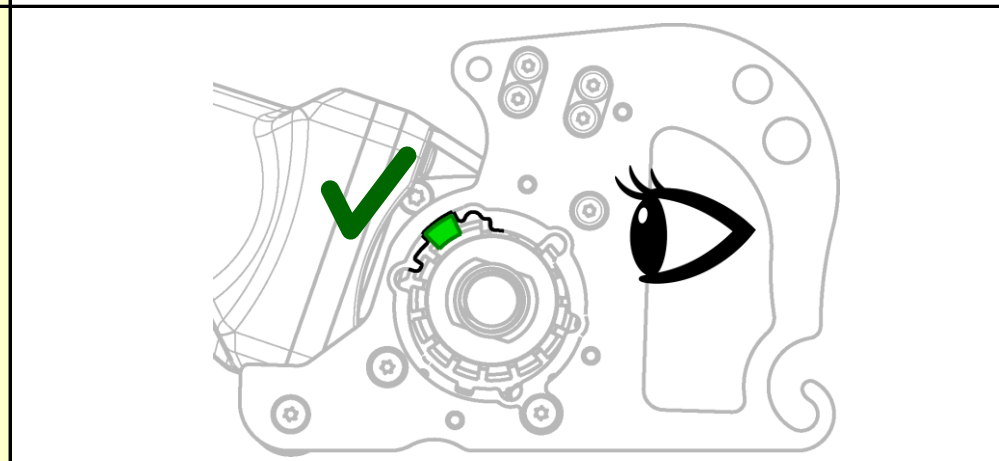
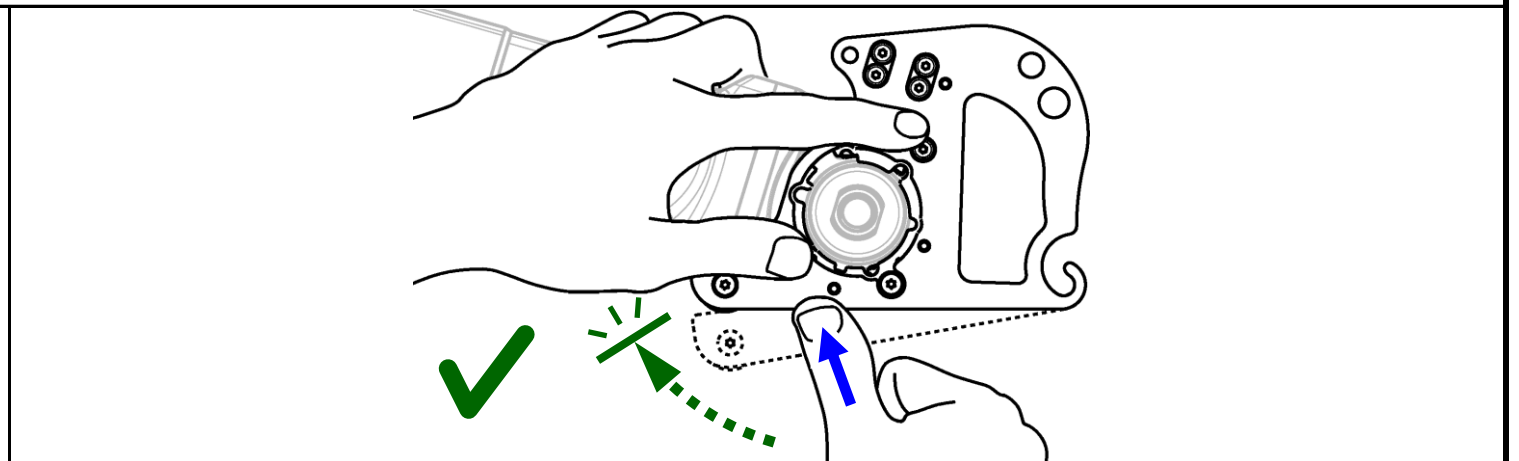
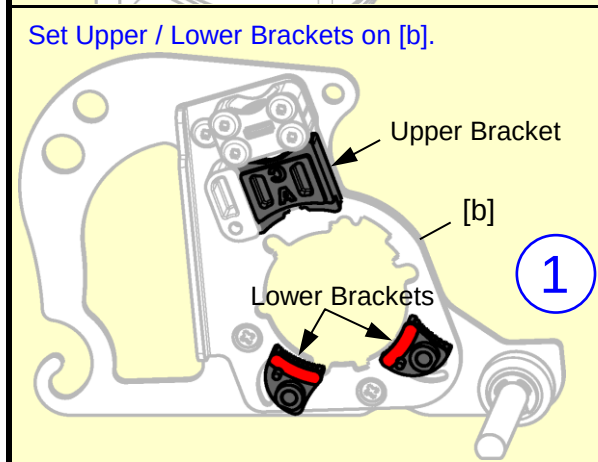
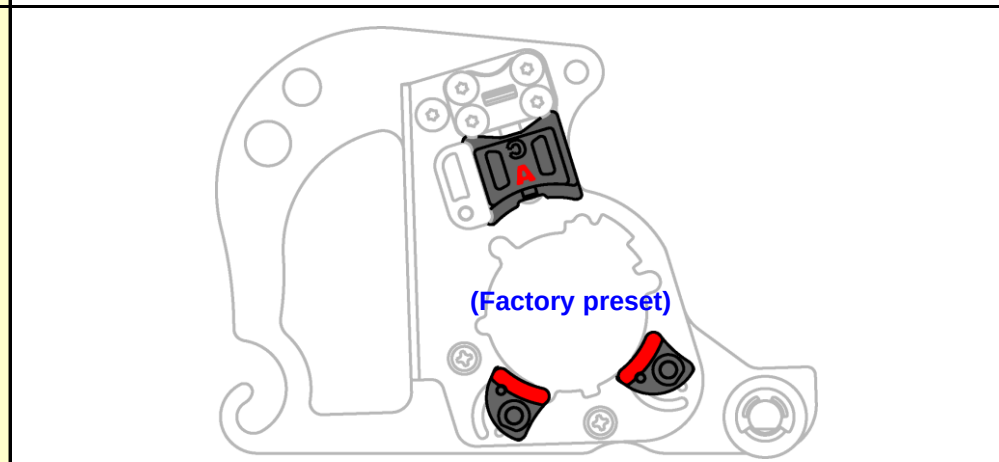
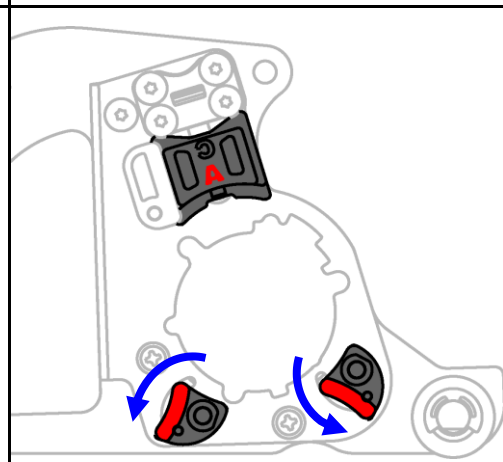
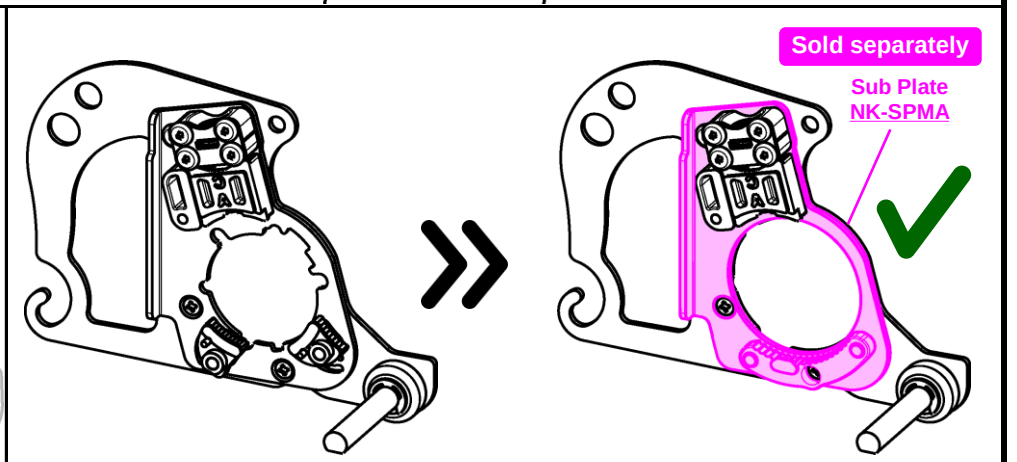
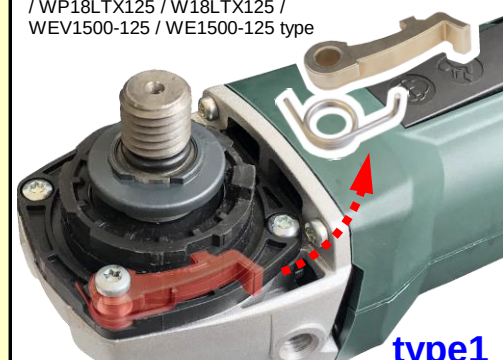












 Set [h] / [i] / [k], [g] or Original Flange, and Blade into the Spindle. Then tighten the Lock Nut by Wrench. 4	 Original Flange					
 Hold [b] and tighten the Bolt with [d] securely. 3						
 Place [b] on gearcase of the grinder. 2						
 Set Upper / Lower Brackets on [b]. Upper Bracket Lower Brackets 1	 (Factory preset)					
⚠ XLOCK model can't be fitted. ※Based on the web information as of 2022 Jan.	DGA456 / DGA463 / DGA467 DGA506 / DGA513 / DGA517 GA4541 / GA5041 type  type1	9565 / GA5021 / GA5030 / GA5040 / DGA511 DGA515 / DGA504 / GA4530 / GA4534 GA5034 / GA4540 type  type2	9558 / DGA452 type  type3	GA004 / GA005G / GA012 / GA013G GA022 / GA023G / GA028 type  type4	GA008G / GA016G type  type5	GA5050R / GA4550 type  type6


















 Set [h] / [i] / [k], [g] or Original Flange, and Blade into the Spindle. Then tighten the Lock Nut by Wrench. 4	 BOSCH Original Flange	 [g] 9.5 [h]
 Hold [b] and tighten the Bolt with [d] securely. 3		
 Place [b] on gearcase of the grinder. 2		
 Set Upper / Lower Brackets on [b]. Upper Bracket [b] Lower Brackets 1	 (Factory preset)	
 BOSCH ⚠ XLOCK model can't be fitted. ※Based on the web information as of 2022 Jan. 	 GWS7-115 / GWS7-125 / GWS9-115S GWS9-125S / GWS750 / GWS880 GWS18V-7 type type1	 GWS1000 / GWS9-115P / GWS11-125 GWS12-125 / GWS13-125 / GWS14-125 GWS1400 / GWS15-125 / GWS17-125 GWS18-125 / GWS19-125 / GWS18V-10 GWS18V-125 type type2

 Set [h] / [i] / [k], [g] or Original Flange, and Blade into the Spindle. Then tighten the Lock Nut by Wrench. 4	 [g]			
 Hold [b] and tighten the Bolt with [d] securely. 3	   			
 Place [b] on gearcase of the grinder. [e] Some models ONLY. 2				
 Set Upper / Lower Brackets on [b]. Upper Bracket [b] Lower Brackets 1	 (Factory preset)			
 ⚠ D28137 / DCG405FN can't be fitted. ※Based on the web information as of 2022 Jan. 	 type1	 type2	 type3	 type4

Set [h] / [i] / [k], [g] or Original Flange, and Blade into the Spindle. Then tighten the Lock Nut by Wrench.  4	 [g]  [h]  [k]  [k]  [k]				 Original Flange	
Hold [b] and tighten the Bolt with [d] securely.  3					 x 3	
Place [b] on gearcase of the grinder.  [e/f] Some models ONLY. 2						
Set Upper / Lower Brackets on [b].  Upper Bracket [b] Lower Brackets 1	 (Factory preset) (Factory preset) #15				 #10 x 5pcs. #15 x 2pcs.	
 AGV10-125EK, AG10-125EK, AG800-125EK type can't be fitted.  ※Based on the web information as of 2022 Jan.	 M18FHSAG125 / AGV13-125XSPDEB type [f] type1	 M18FSAGV125 type [f] type2	 AGV15-125 / AGV13-125 / AG13-125XSPD / AGV12-125 type [f] type3	 AG800-125E type type4	 HD18 type [e] type5	 HD28AG-125 / AGV17-125 / AG16-125 / AG8-125 / AG9-125 type Detach the Plate. type6

 Set [h] / [i] / [k], [g] or Original Flange, and Blade into the Spindle. Then tighten the Lock Nut by Wrench. 4					
 Hold [b] and tighten the Bolt with [d] securely. 3					
 Place [b] on gearcase of the grinder. 2					
 Set Upper / Lower Brackets on [b]. Upper Bracket [b] Lower Brackets 1	 (Factory preset)		  Sold separately Sub Plate NK-SPMA		
 ※Based on the web information as of 2022 Jan. 	 type1	 type2	 type3	 type4	 type5

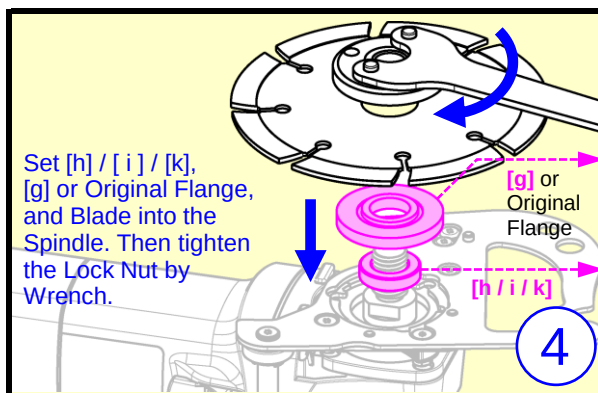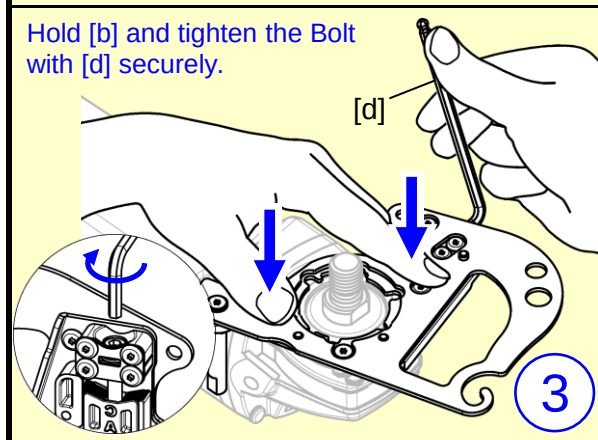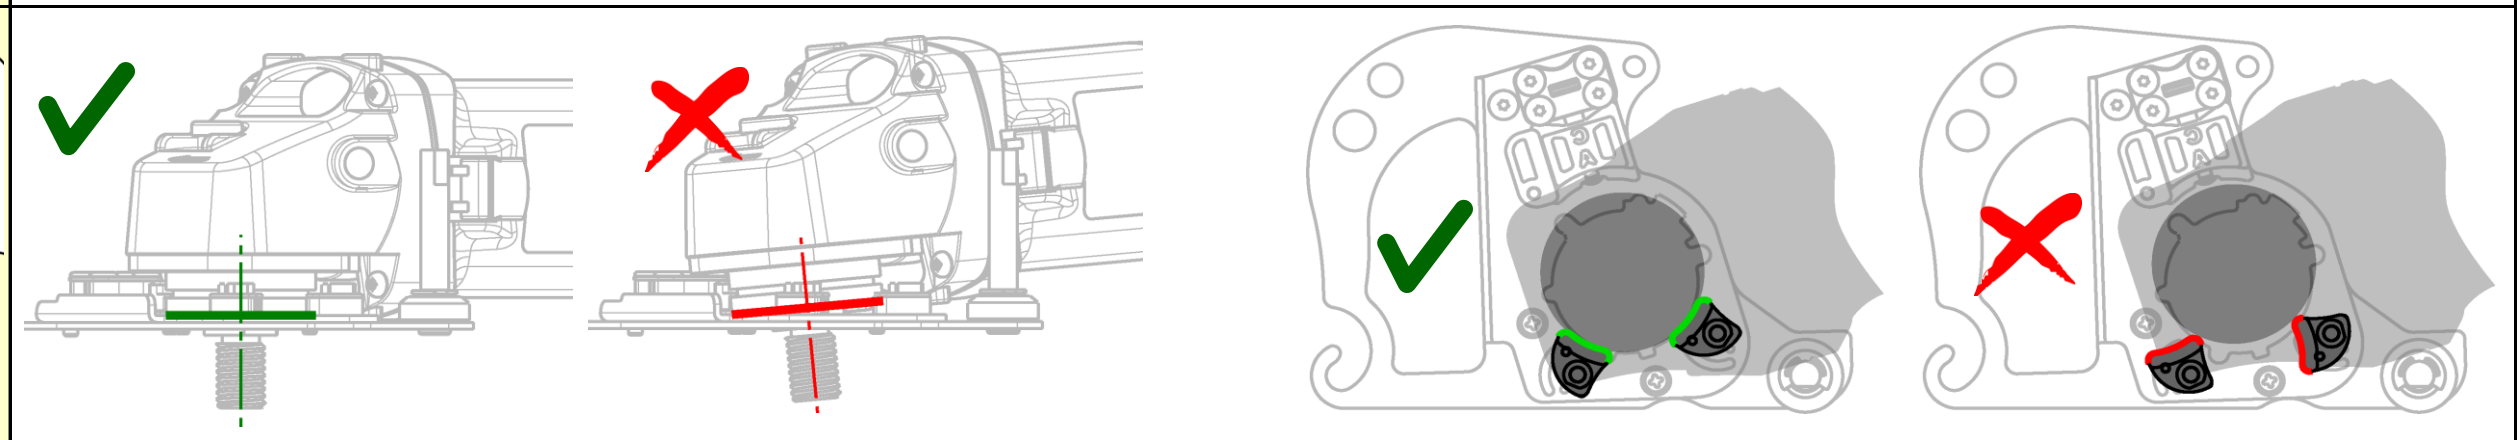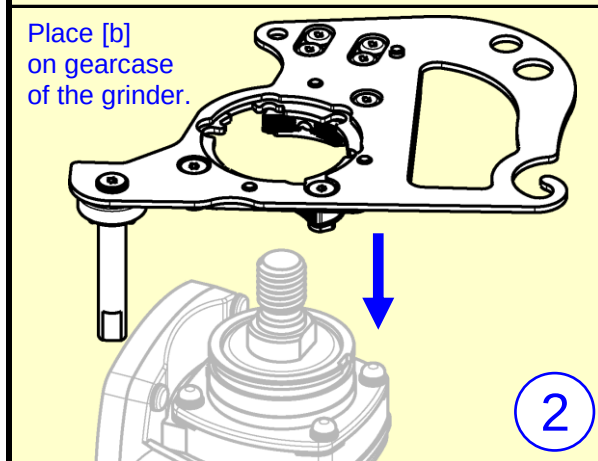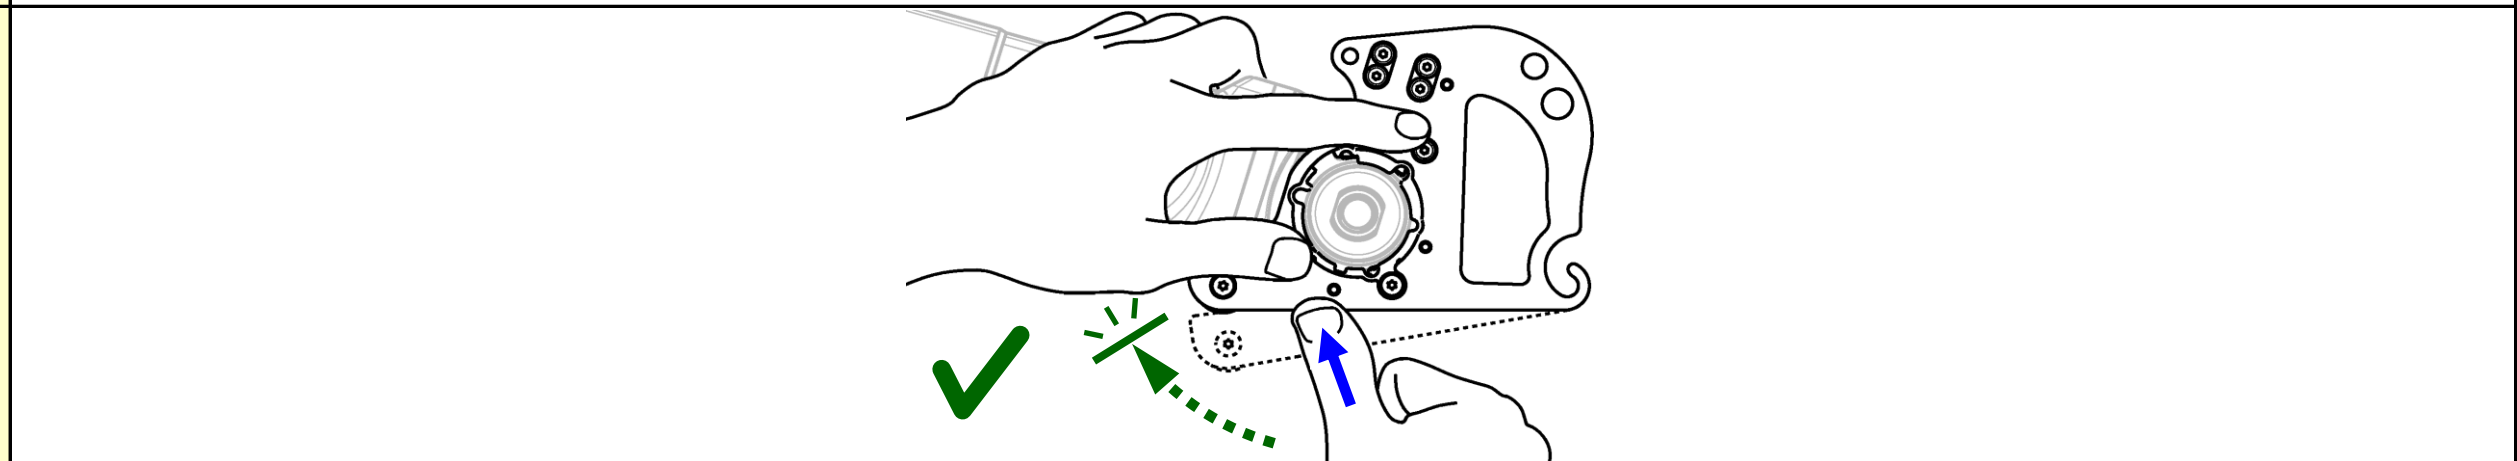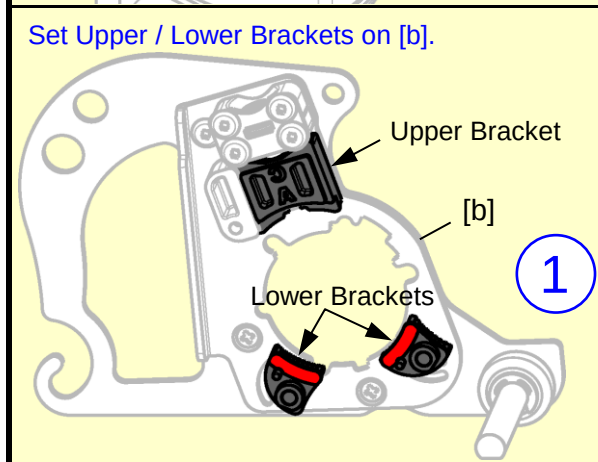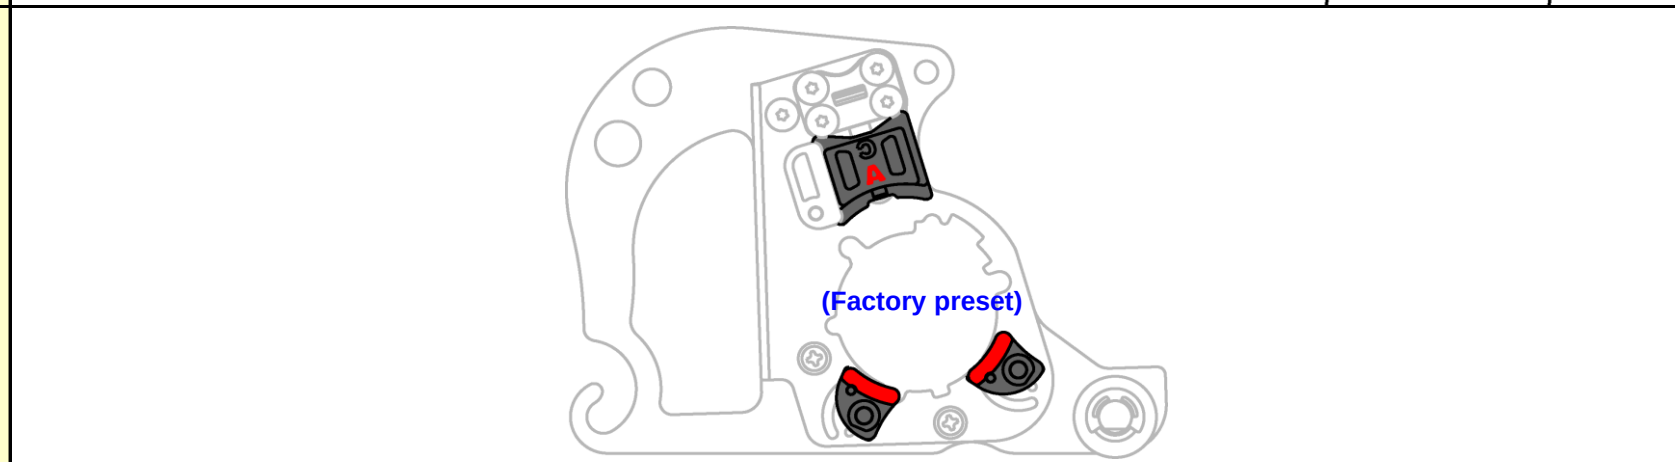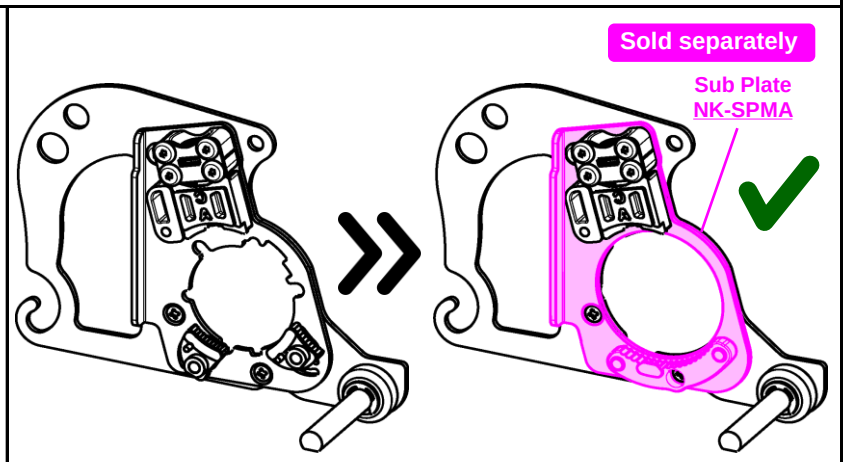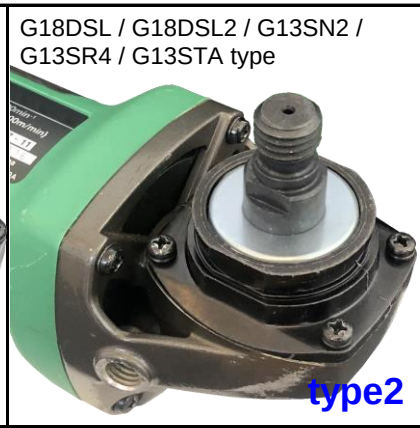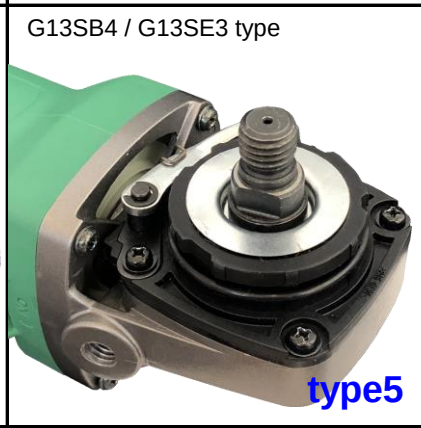 Set [h] / [i] / [k], [g] or Original Flange, and Blade into the Spindle. Then tighten the Lock Nut by Wrench. 4						
 Hold [b] and tighten the Bolt with [d] securely. 3						
 Place [b] on gearcase of the grinder. 2						
 Set Upper / Lower Brackets on [b]. Upper Bracket Lower Brackets [b] 1	 (Factory preset)		 Sold separately Sub Plate NK-SPMA			
 ※Based on the web information as of 2022 Jan.	 type1	 type2	 type3	 type4	 type5	 type6

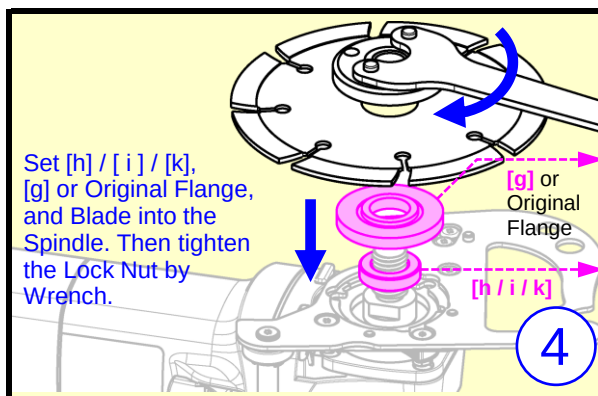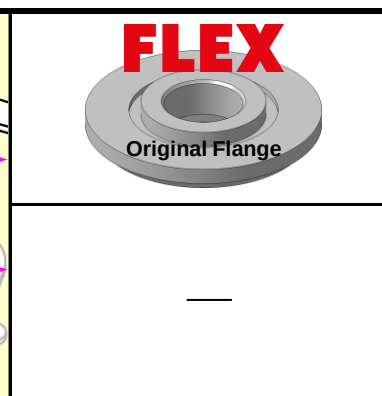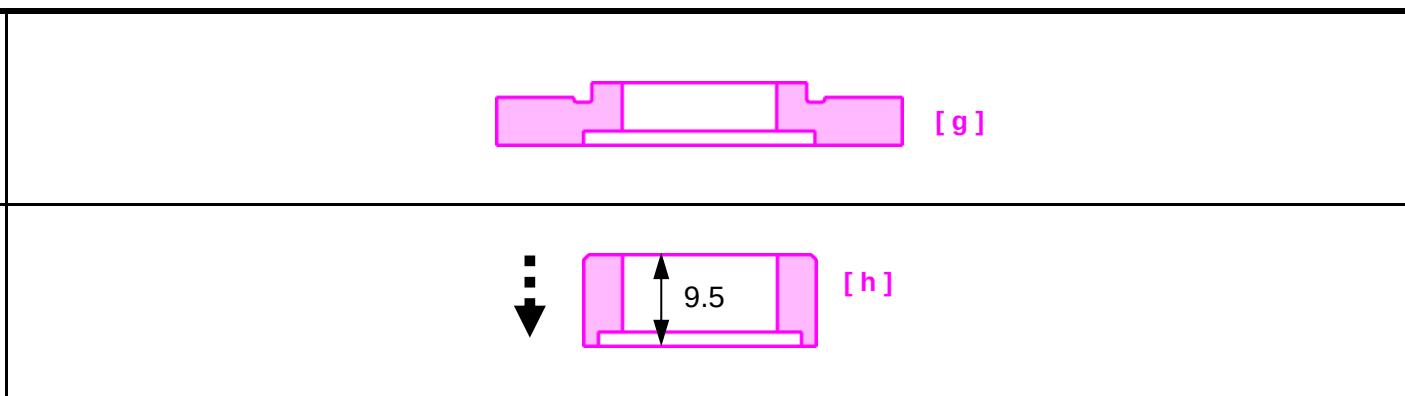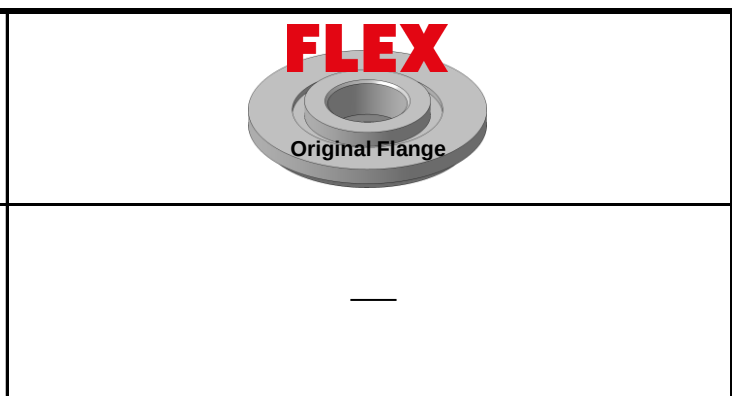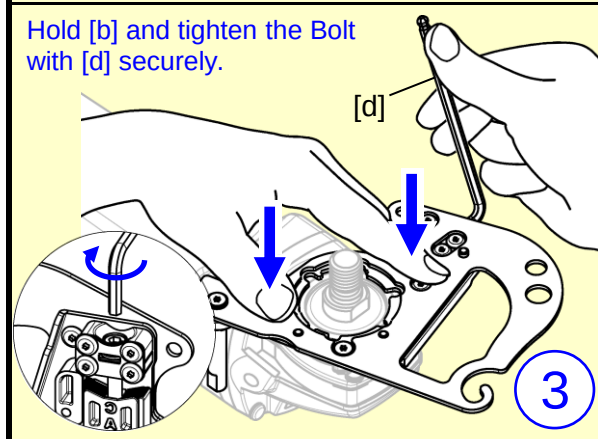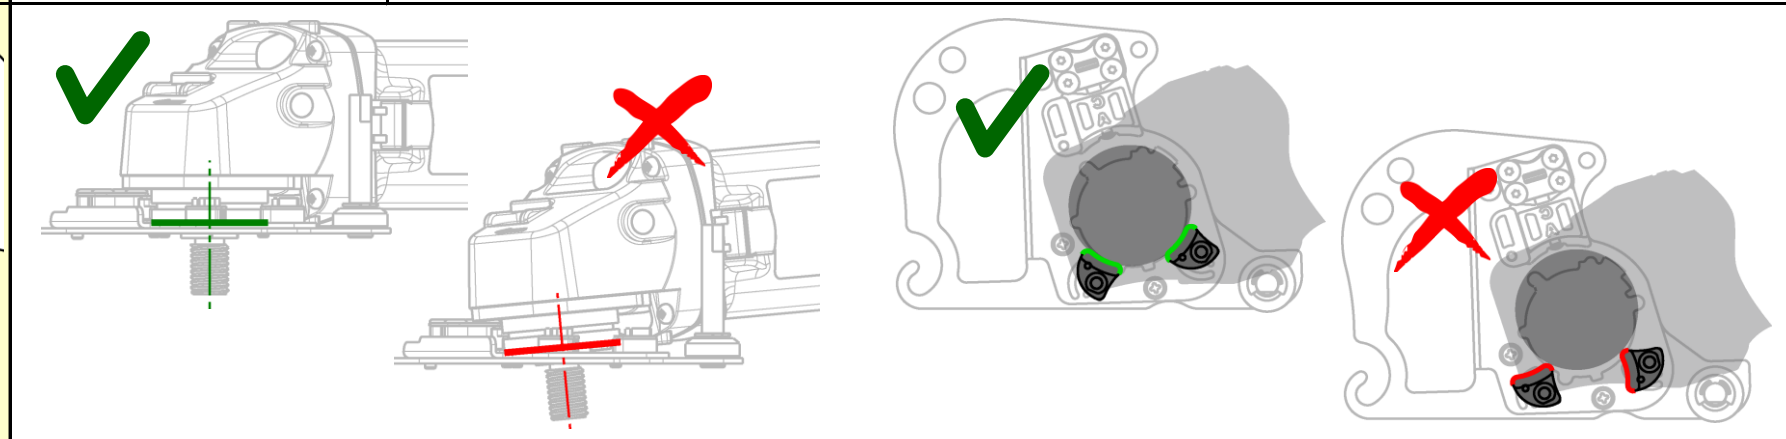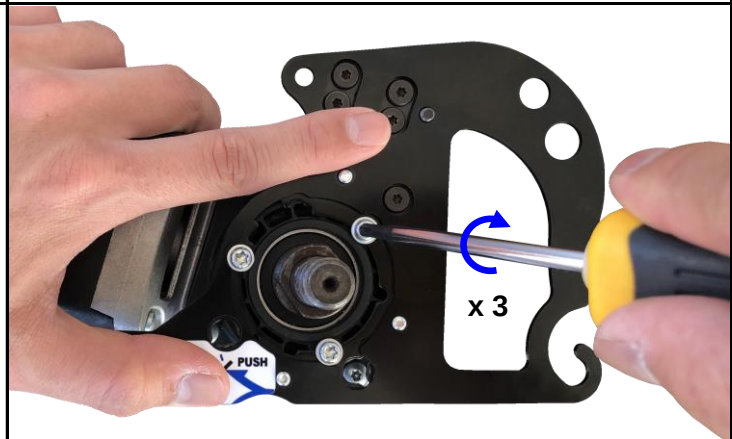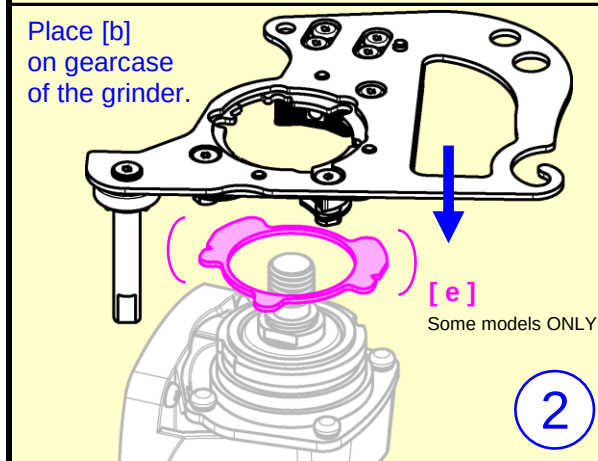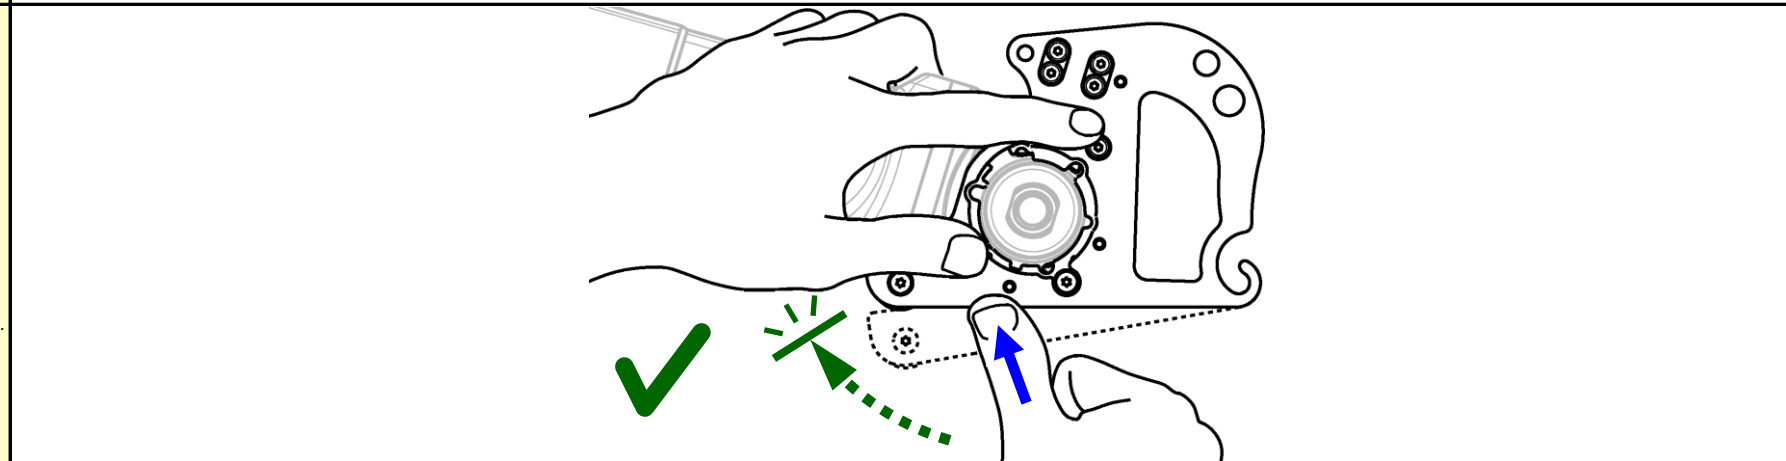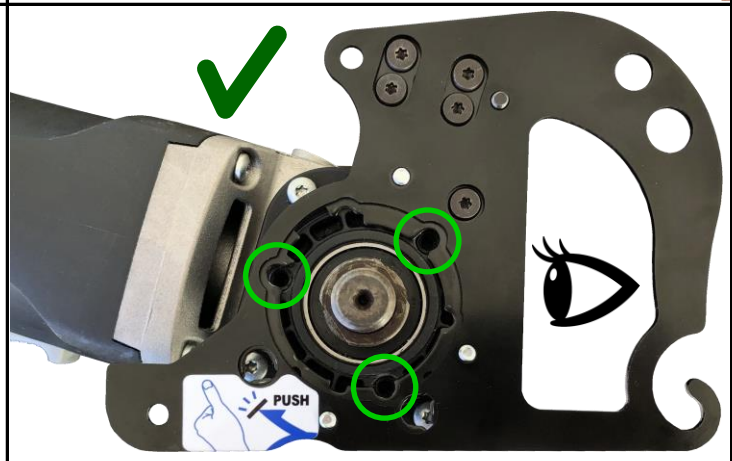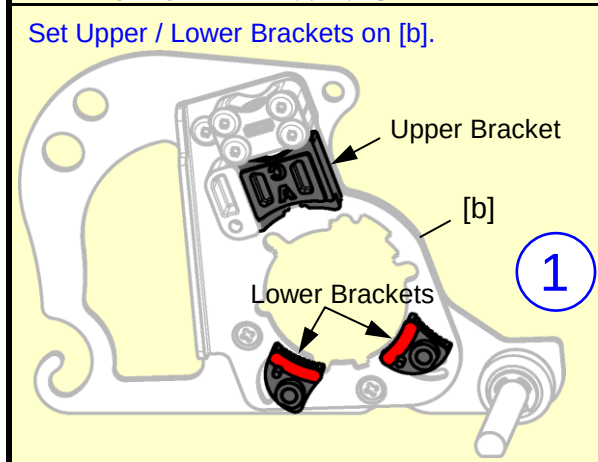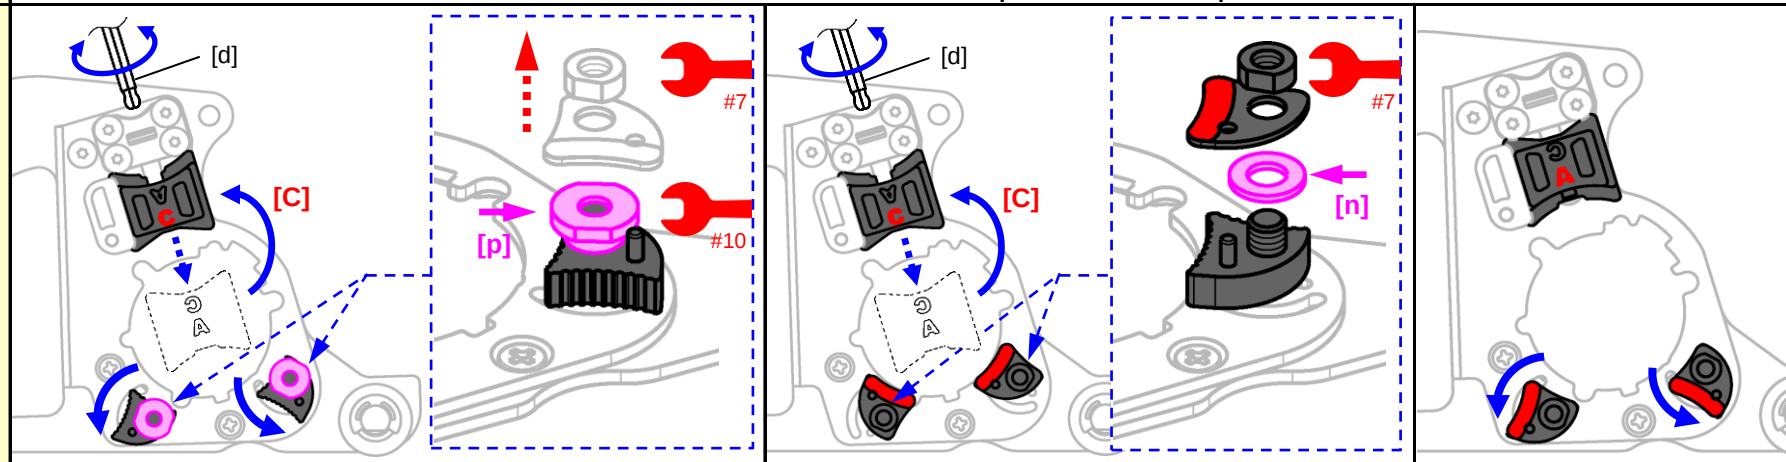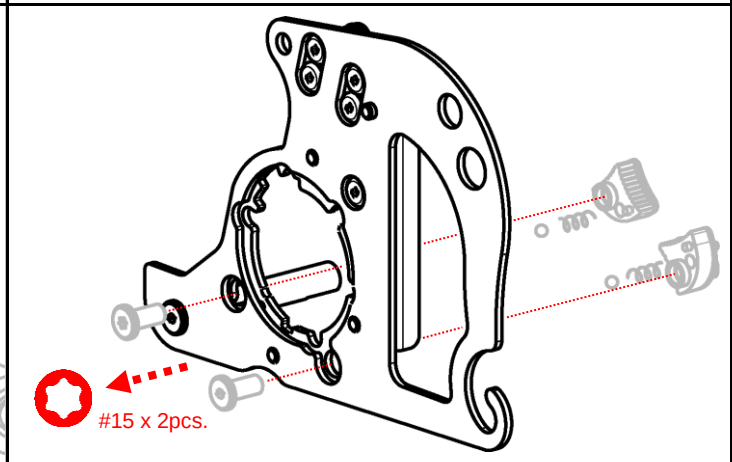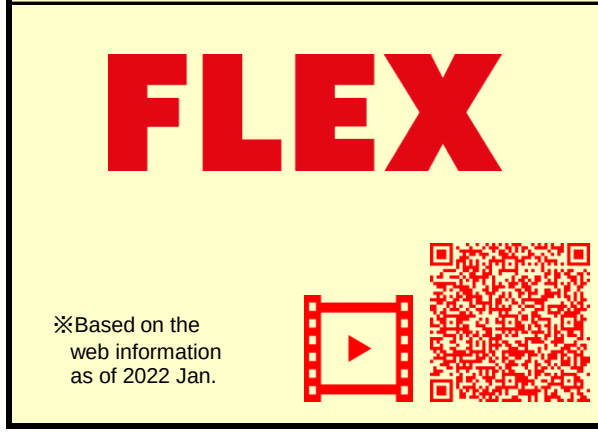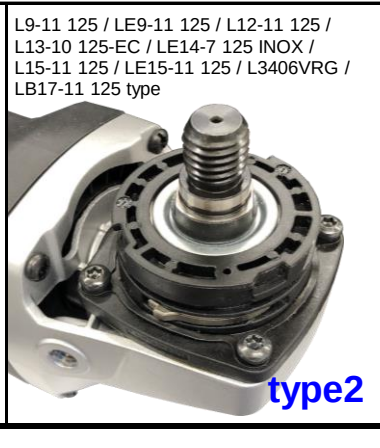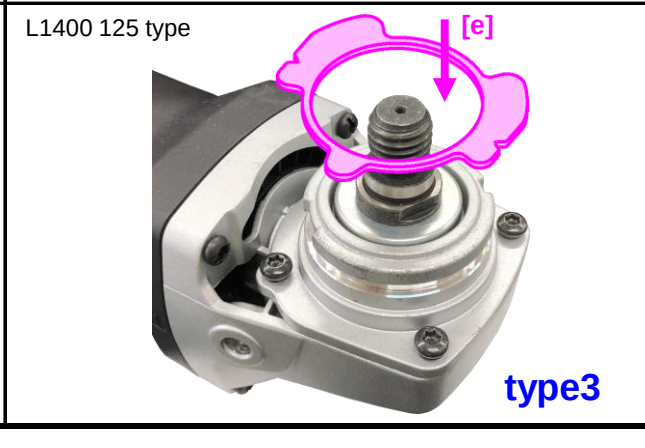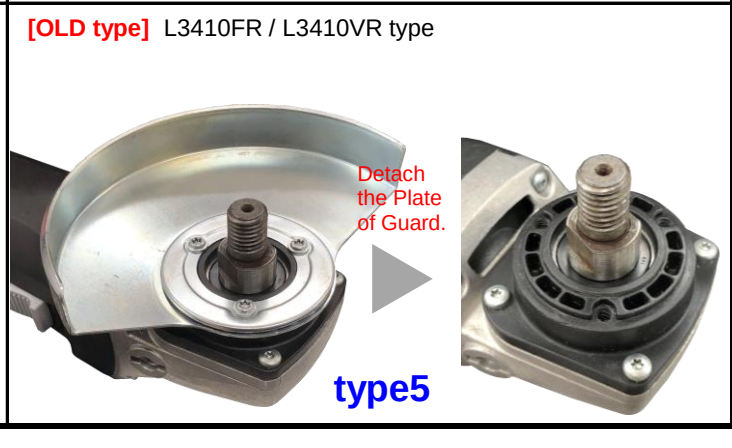 Set [h] / [i] / [k], [g] or Original Flange, and Blade into the Spindle. Then tighten the Lock Nut by Wrench. 4					
 Hold [b] and tighten the Bolt with [d] securely. 3					
 Place [b] on gearcase of the grinder. [e] Some models ONLY. 2					
 Set Upper / Lower Brackets on [b]. Upper Bracket [b] Lower Brackets 1					
 ※Based on the web information as of 2022 Jan.	 L1506VR type type1	 L9-11 125 / LE9-11 125 / L12-11 125 / L13-10 125-EC / LE14-7 125 INOX / L15-11 125 / LE15-11 125 / L3406VRG / LB17-11 125 type type2	 L1400 125 type type3	 LBE125 18.0-EC / LB125 18.0-EC / L125 18.0-EC type 18.0V type4	 [OLD type] L3410FR / L3410VR type Detach the Plate of Guard. type5



Check the
instruction
video.

