

Set [d/e/f] Spacer, [c] Flange, Grinding Cup, then tighten [b] Lock-Nut.

4

Hold the inner plate of [a] and tighten the Bolt with [h] Wrench securely.

3

Place [a] on the grinder head.

2

Set Upper / Lower Brackets at [a] Main Unit.

1

! XLOCK model can't be fitted.

※Based on the web as of 2021 Sep.

[f] 7

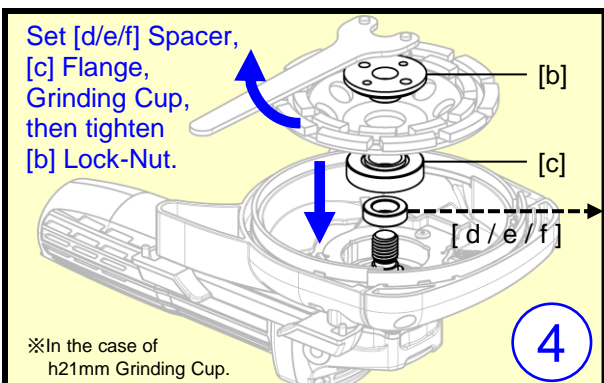
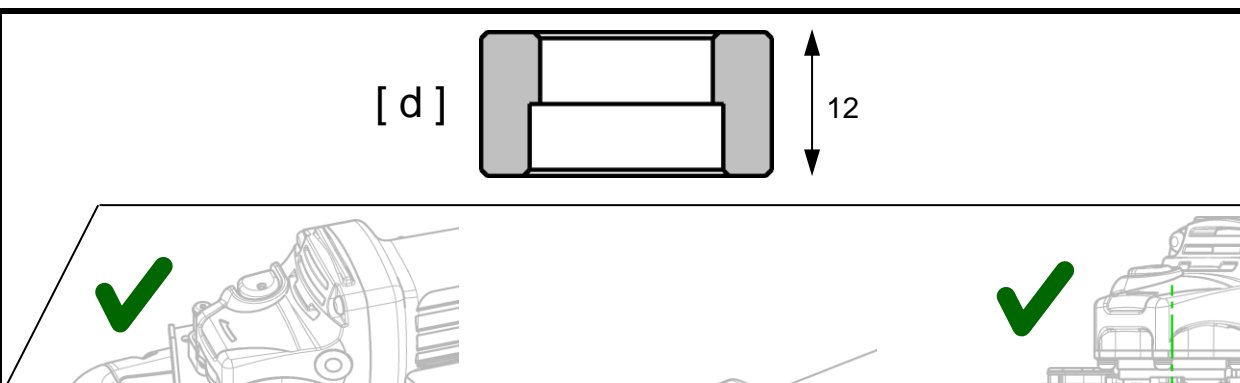
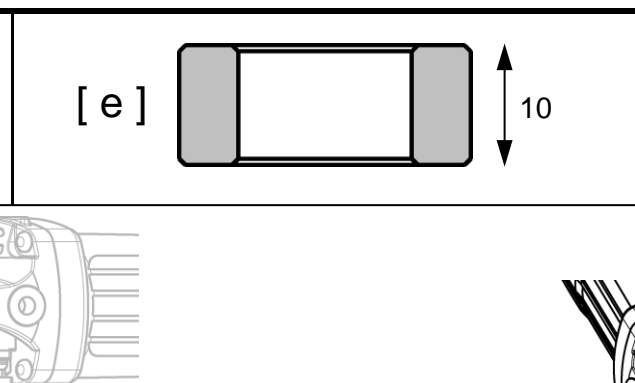
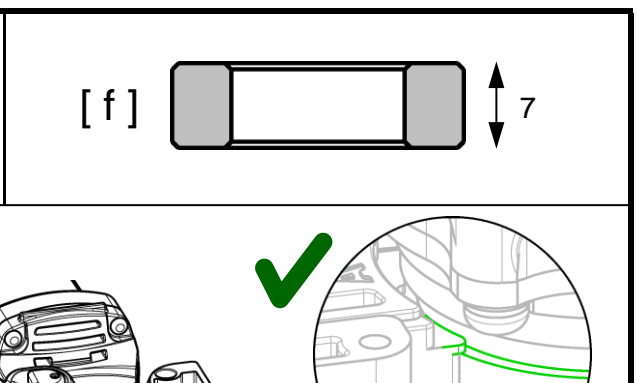
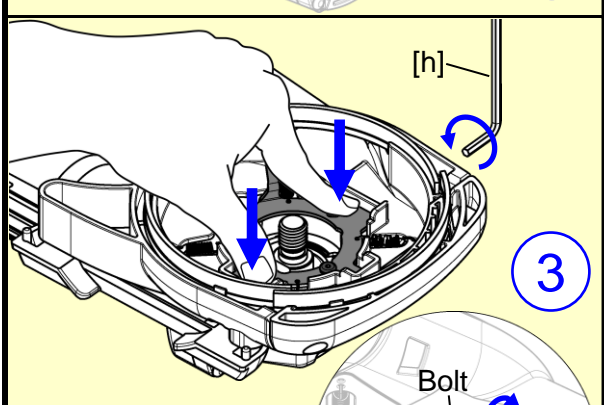
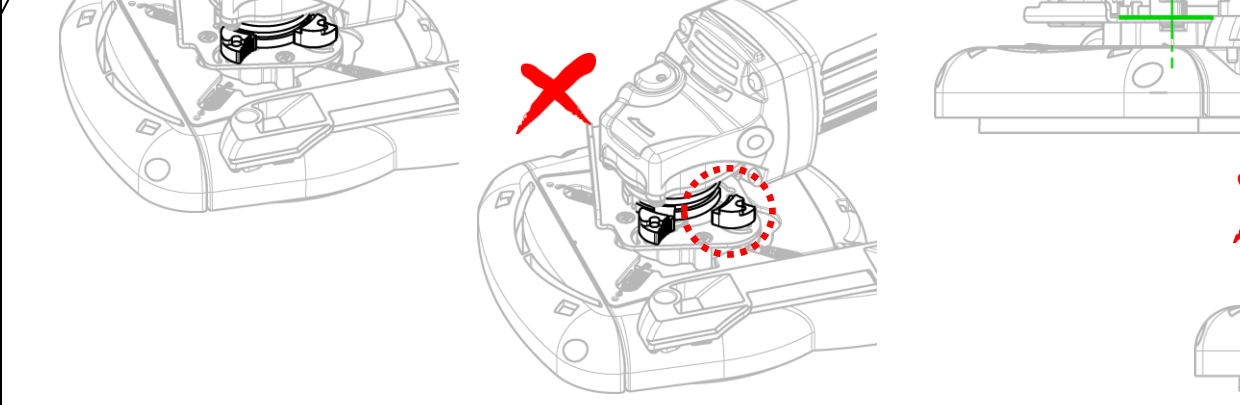
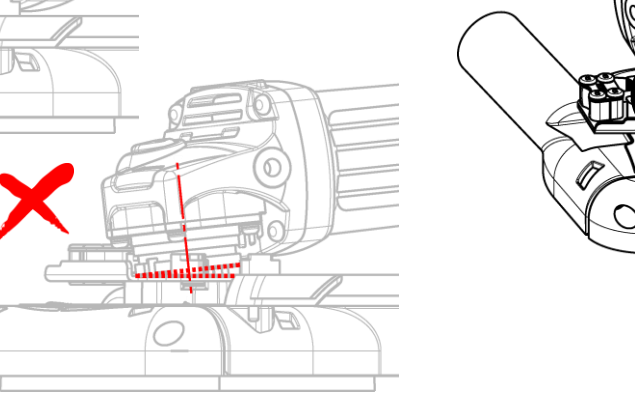
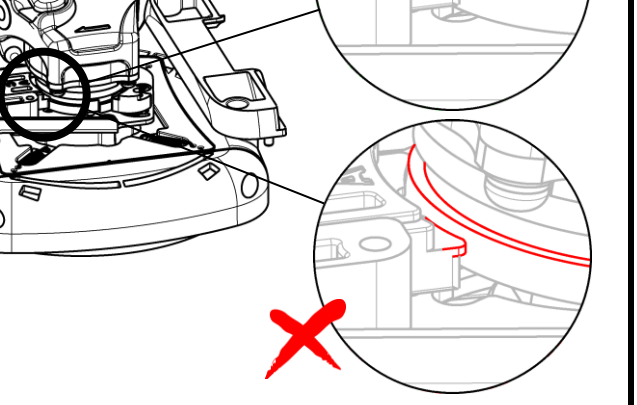
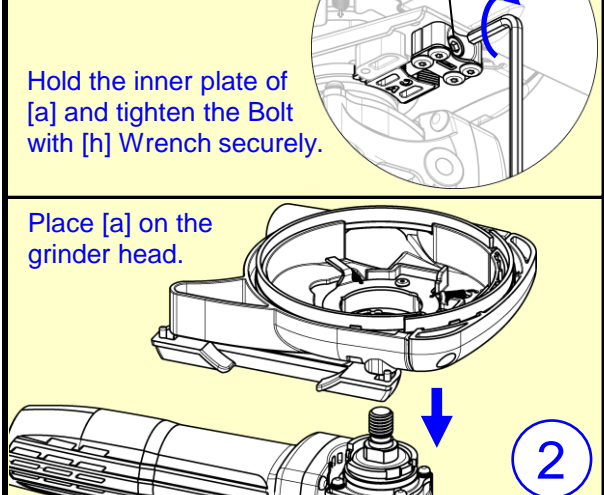
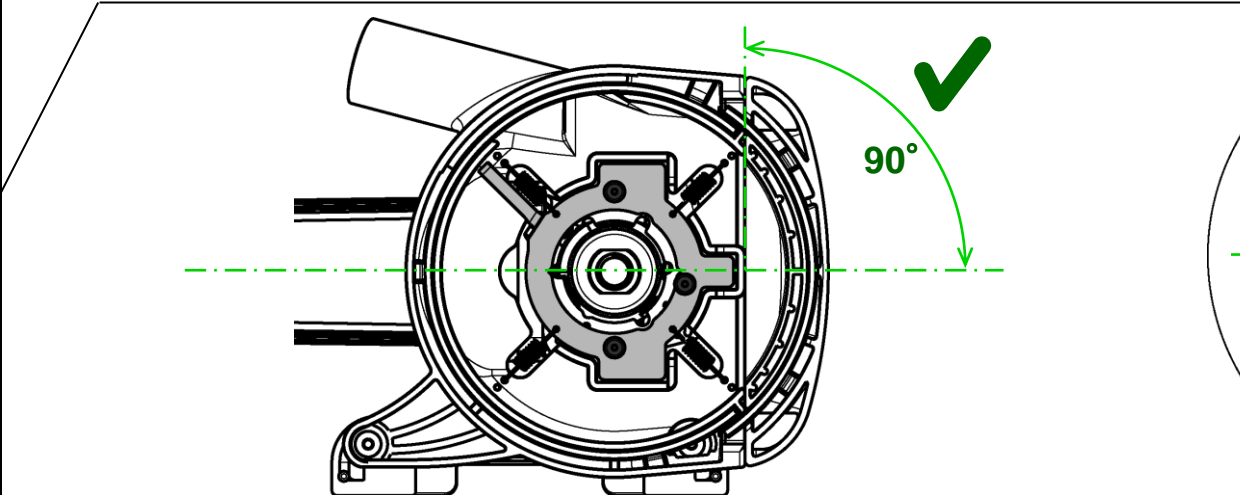
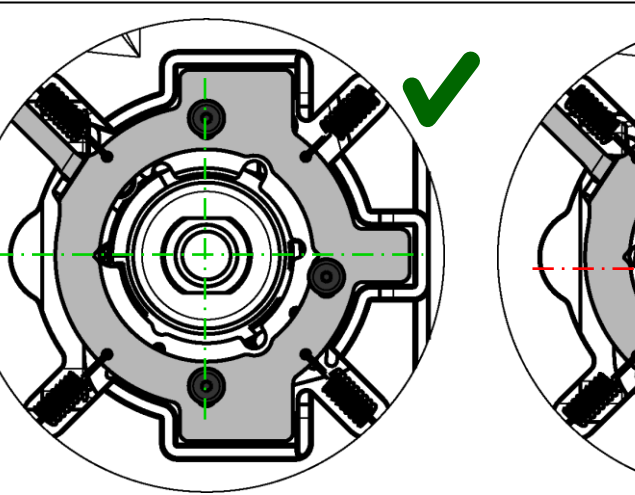
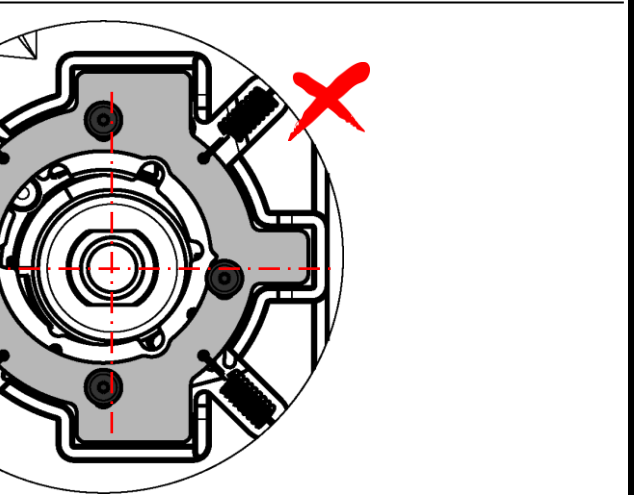
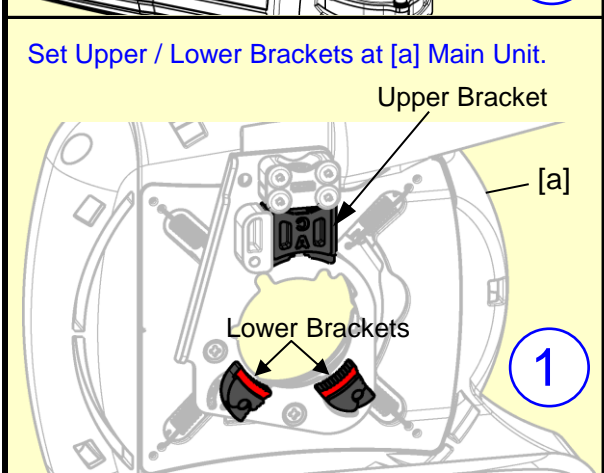
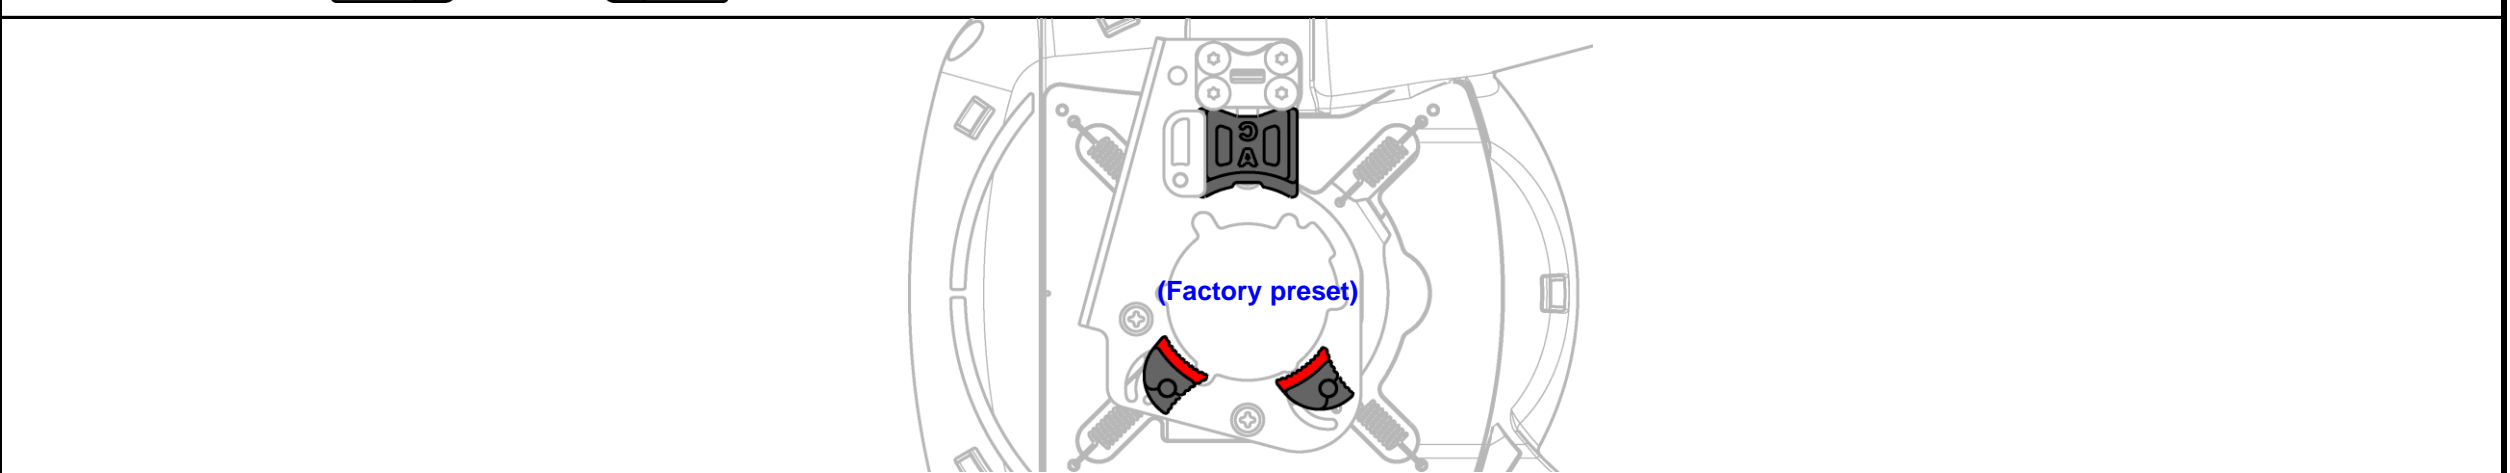

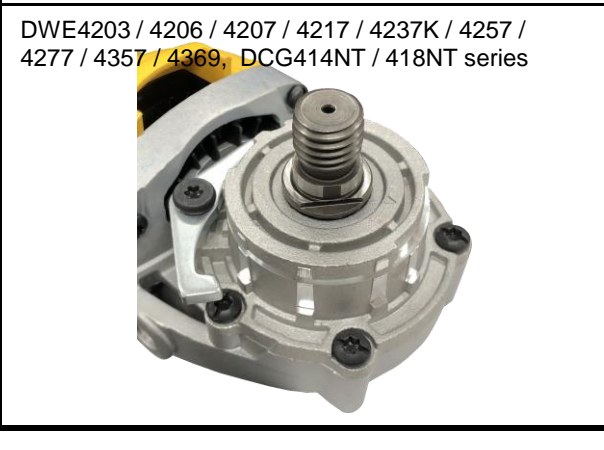
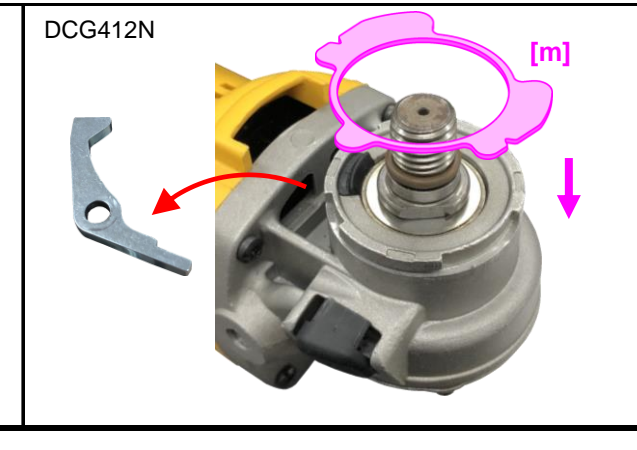
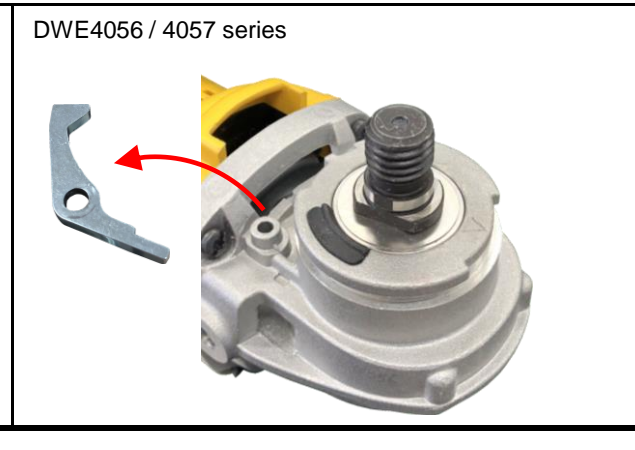
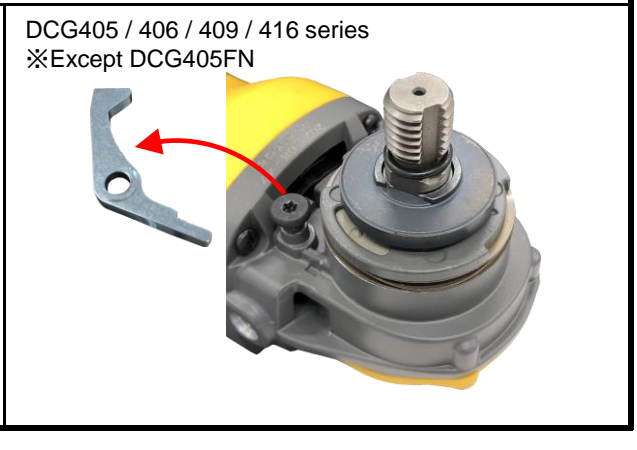
90°

(Factory preset)

[h] [c]

<p>9558 / 9565 series</p>	<p>DGA513 / DGA517 series</p>	<p>GA5021 / GA5030 / GA5040 / GA5041 / DGA511 / DGA515 / DGA504 series</p>	<p>GA005G / GA013G / GA023G series 40V^{Li-ion} max</p>	<p>GA008G / GA016G series 40V^{Li-ion} max</p>	<p>GA5050R</p> <p>[m]</p>
---------------------------	-------------------------------	--	--	---	---------------------------

<p>Set [d/e/f] Spacer, [c] Flange, Grinding Cup, then tighten [b] Lock-Nut.</p> <p>※In the case of h21mm Grinding Cup.</p> <p>4</p>	<p>[e]</p>	<p>[d]</p>
<p>Hold the inner plate of [a] and tighten the Bolt with [h] Wrench securely.</p> <p>3</p>		
<p>Place [a] on the grinder head.</p> <p>2</p>		
<p>Set Upper / Lower Brackets at [a] Main Unit.</p> <p>1</p>		
<p>BOSCH</p> <p>⚠ XLOCK model can't be fitted.</p> <p>※Based on the web as of 2021 Sep.</p>	<p>GWS7-125 / GWS750 / GWS880 GWS9-125S / GWS18-125V-LI series</p>	<p>GWS1000 / GWS11-125 series GWS13-125CI series / GWS1400 / GWS15-125CIEP series GWS17-125CI series GWS17-125 INOX / GWS18-125 series GWS19-125CI series GWS18V series</p>

<p>Set [d/e/f] Spacer, [c] Flange, Grinding Cup, then tighten [b] Lock-Nut.</p>  <p>※In the case of h21mm Grinding Cup.</p> <p>4</p>	<p>[d]</p>  <p>12</p>	<p>[e]</p>  <p>10</p>	<p>[f]</p>  <p>7</p>	
<p>Hold the inner plate of [a] and tighten the Bolt with [h] Wrench securely.</p>  <p>3</p>				
<p>Place [a] on the grinder head.</p>  <p>2</p>	 <p>90°</p>			
<p>Set Upper / Lower Brackets at [a] Main Unit.</p>  <p>1</p>	 <p>(Factory preset)</p>			
<p>DeWALT</p> <p>⚠ D28137 / DCG405FN can't be fitted.</p> <p>※Based on the web as of 2021 Sep.</p> 	<p>DWE4203 / 4206 / 4207 / 4217 / 4237K / 4257 / 4277 / 4357 / 4369, DCG414NT / 418NT series</p> 	<p>DCG412N</p> 	<p>DWE4056 / 4057 series</p> 	<p>DCG405 / 406 / 409 / 416 series ※Except DCG405FN</p> 

Set [d/e/f] Spacer, [c] Flange, Grinding Cup, then tighten [b] Lock-Nut.

※In the case of h21mm Grinding Cup.

4

Hold the inner plate of [a] and tighten the Bolt with [h] Wrench securely.

3

Place [a] on the grinder head.

2

Set Upper / Lower Brackets at [a] Main Unit.

1

Milwaukee

⚠ AG10 / AGV10 series can't be fitted.

※Based on the web as of 2021 Sep.

[d]

12

[e]

10

x 3

90°

(Factory preset)

#10 x 5 x 3

[i]

M18FHSAG125-series, AGV13-125XSPDEB [m]

M18FSAGV125 series [m]

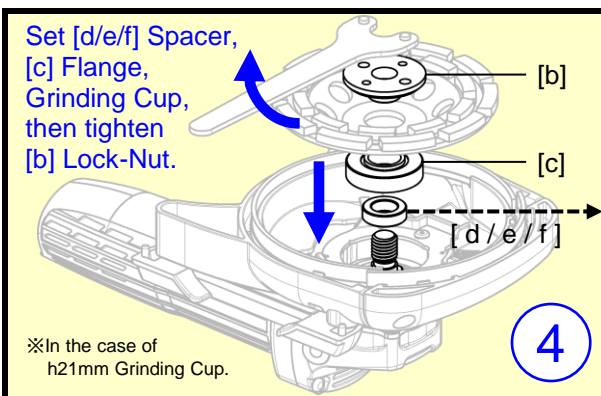
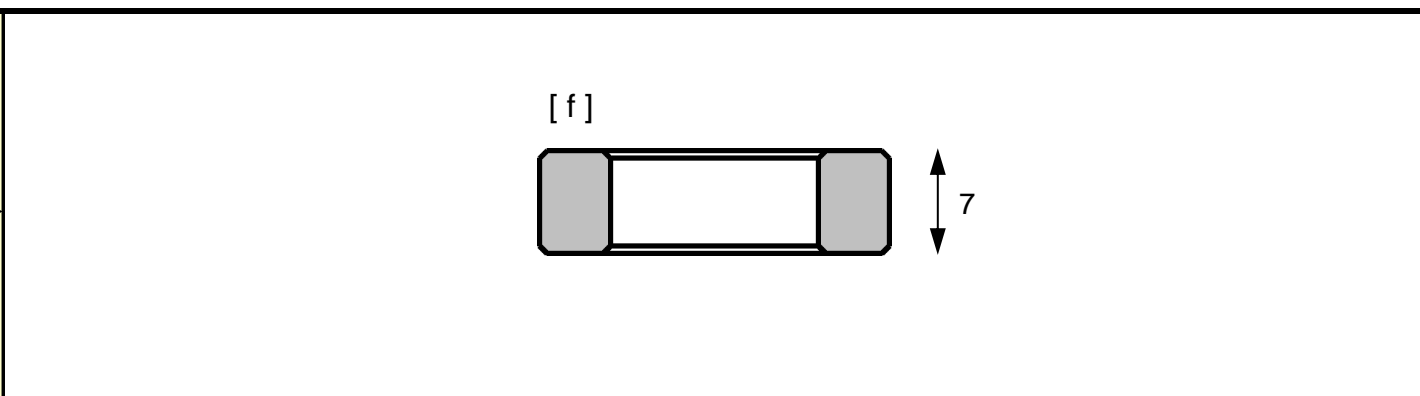
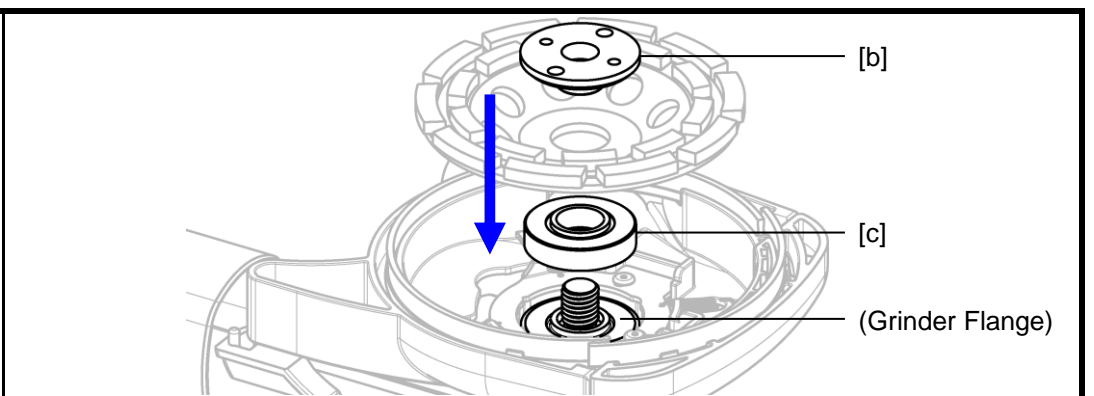
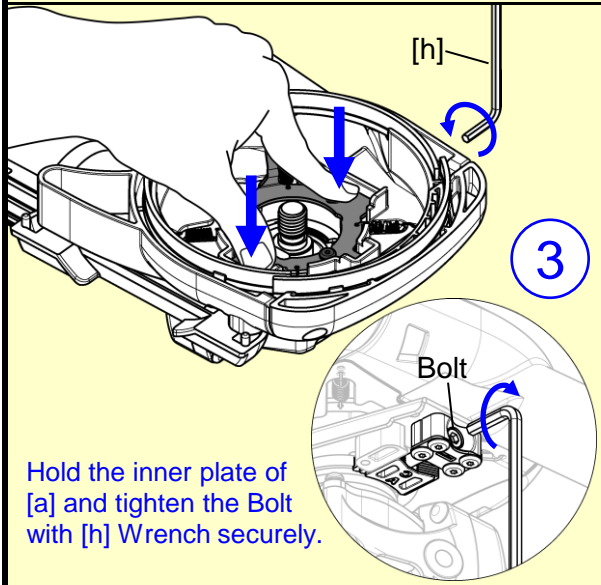
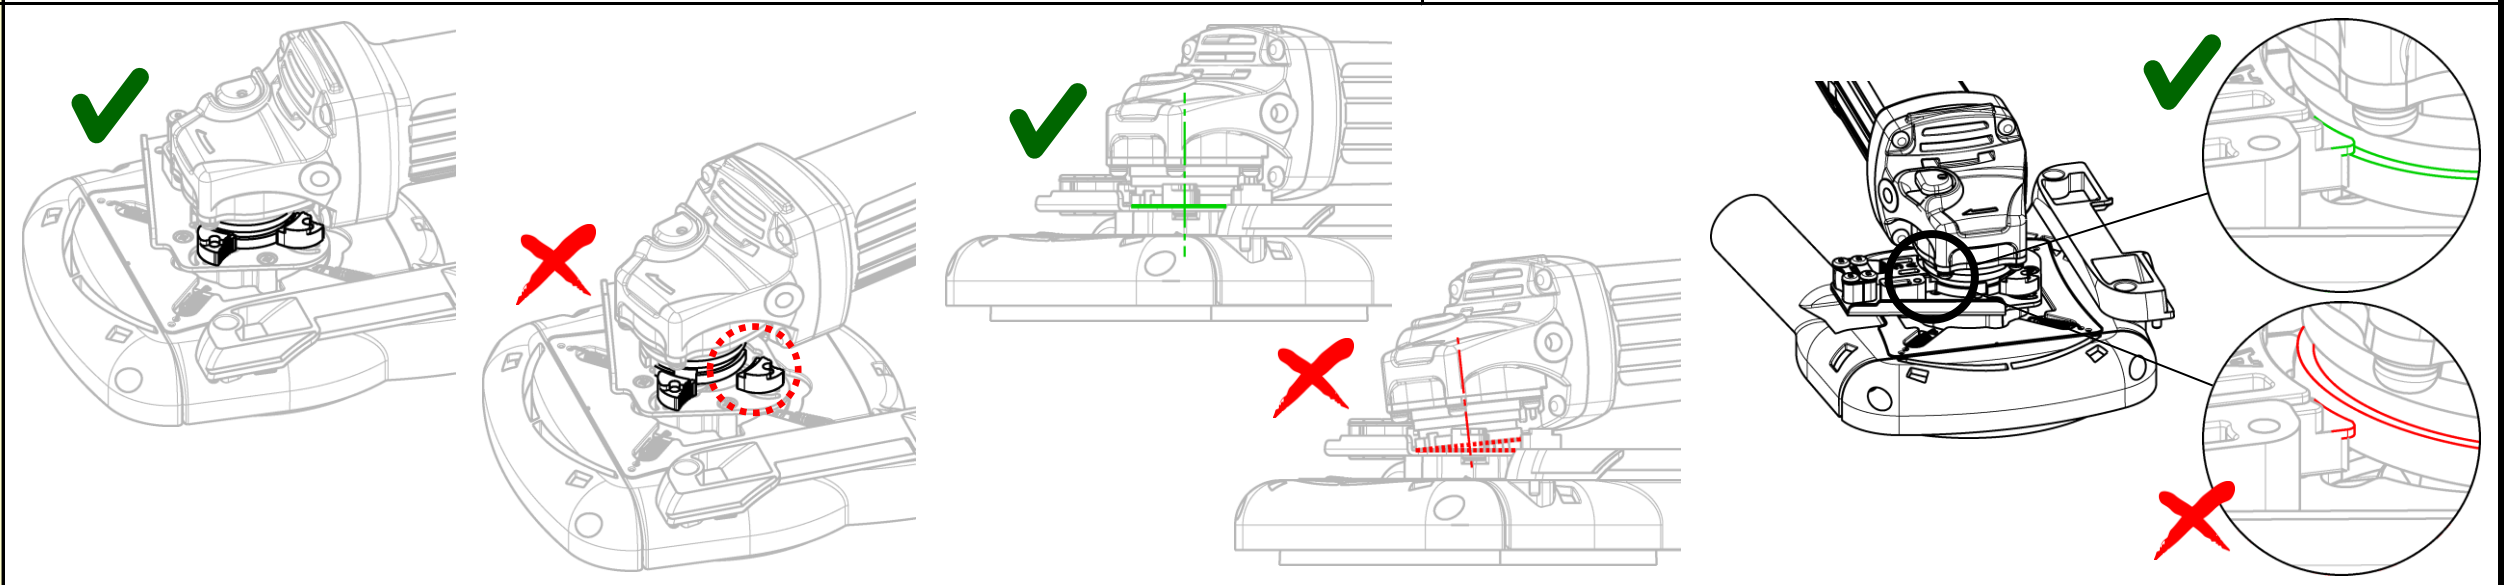
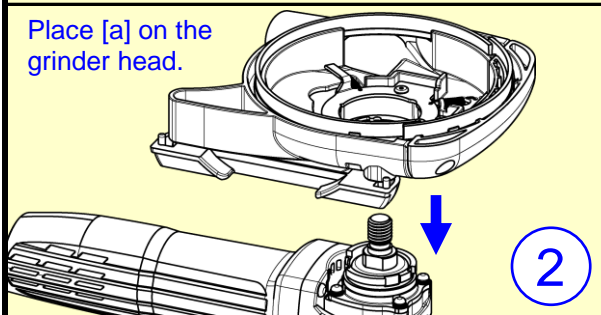
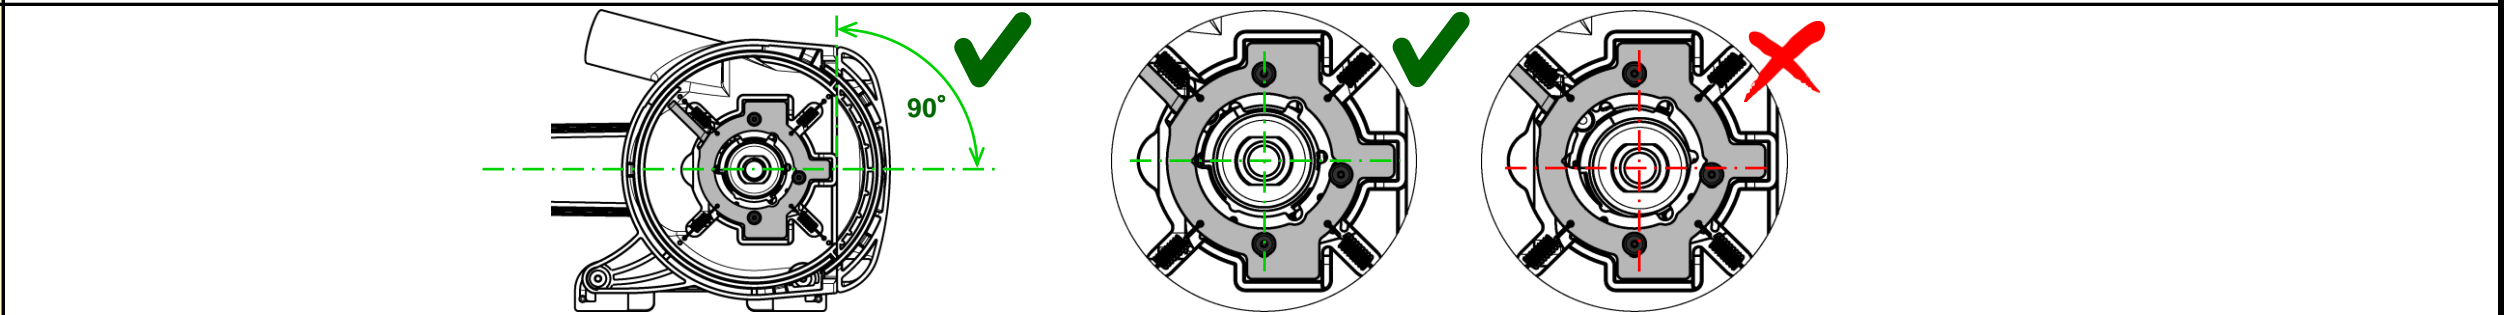
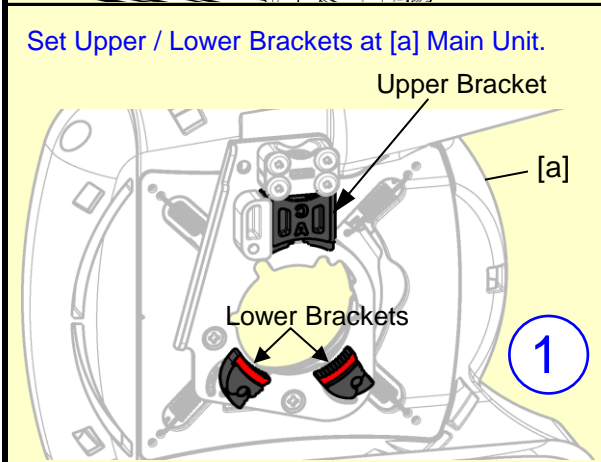
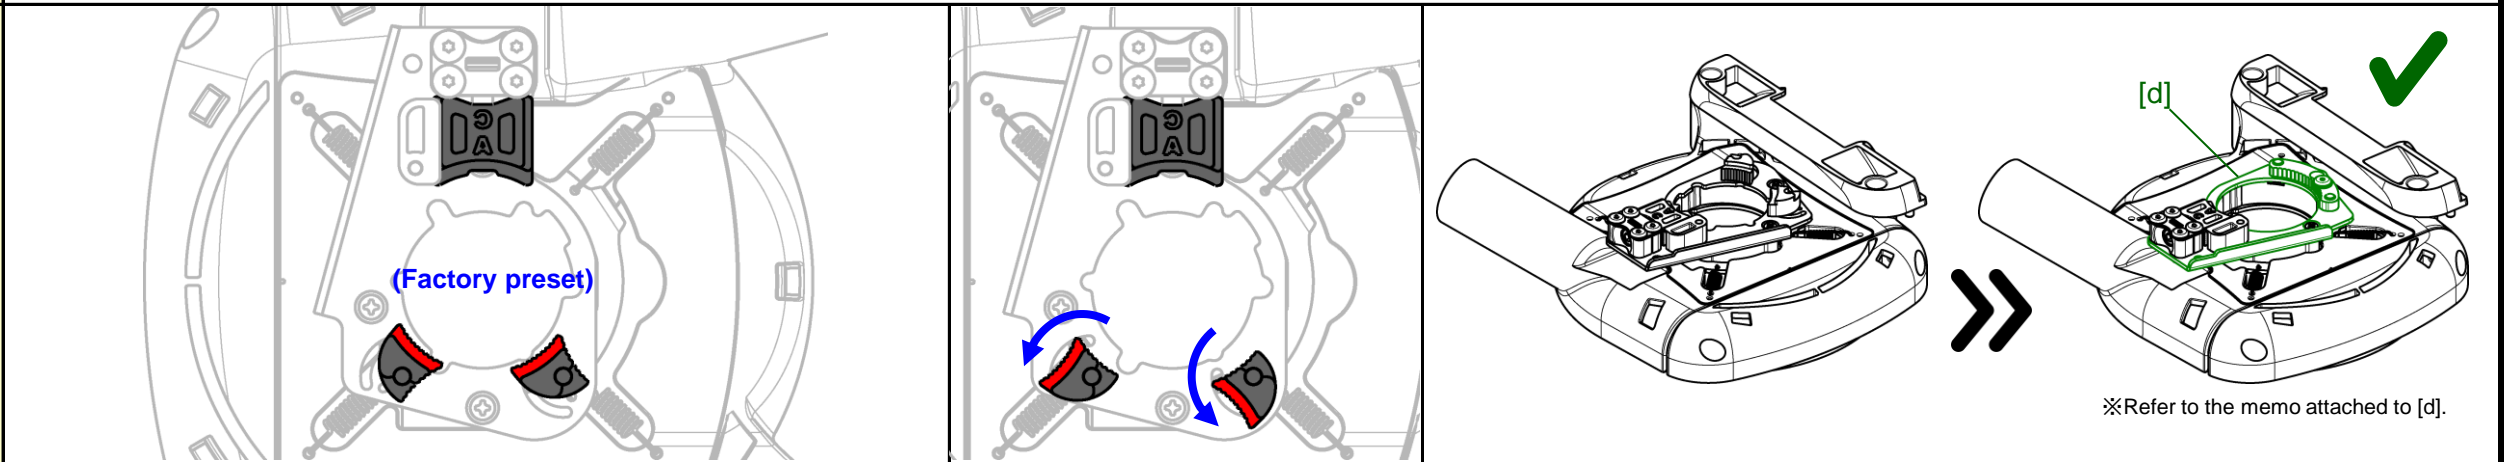


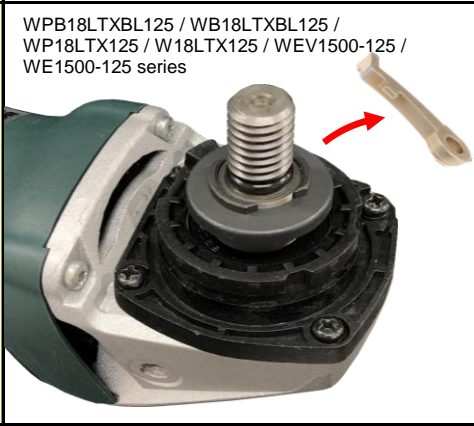


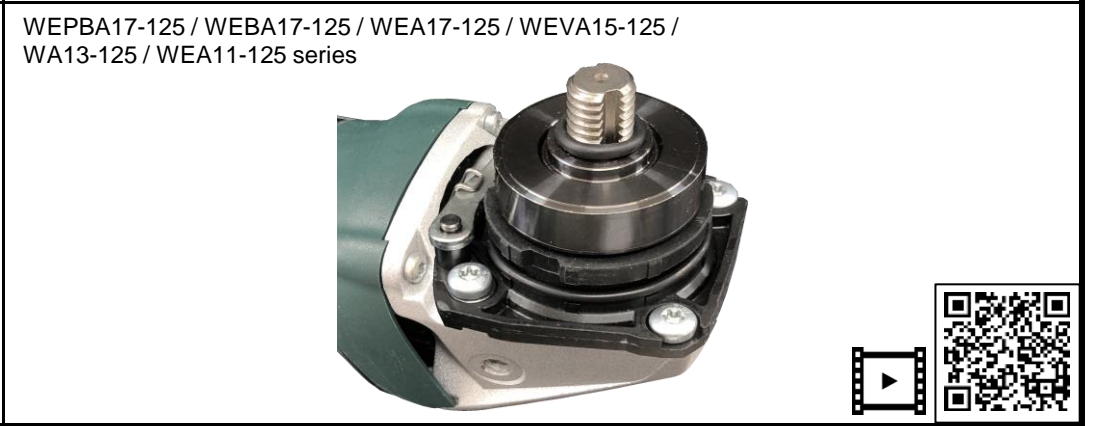
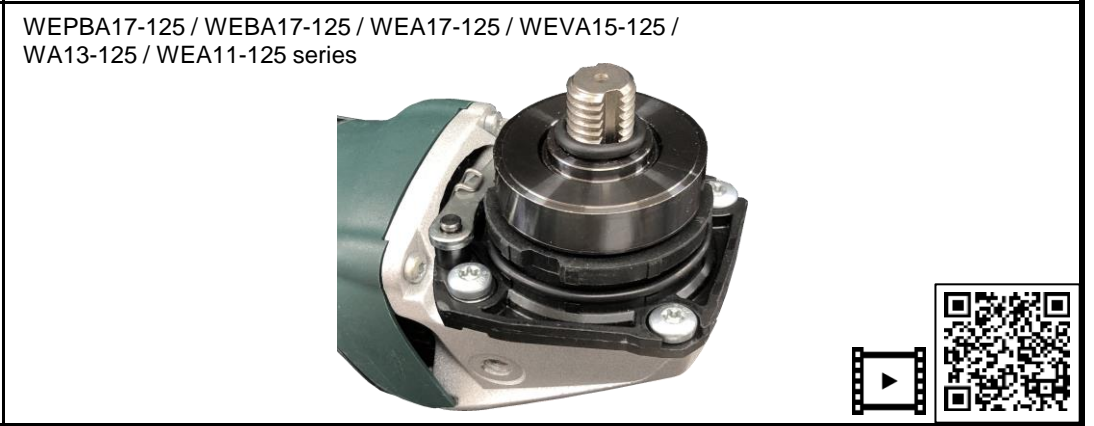
AGV15-125, AGV13-125 series, AG13-125XSPD, AGV12-125 [m]

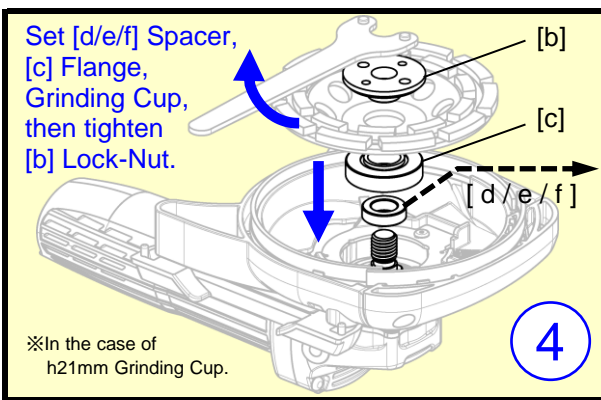
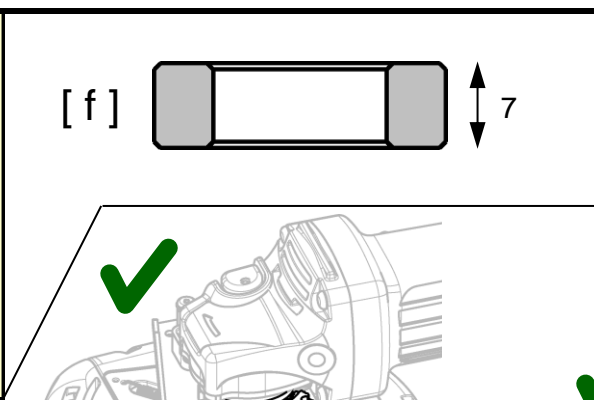
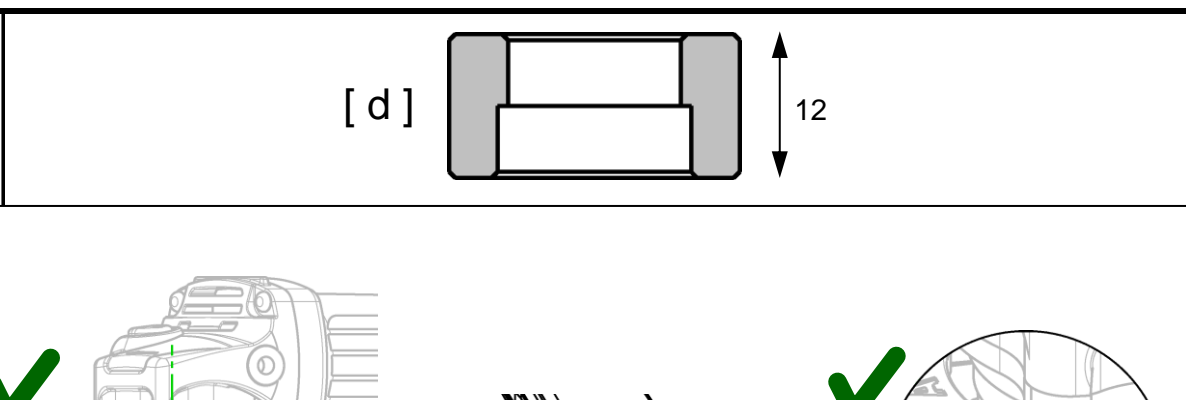
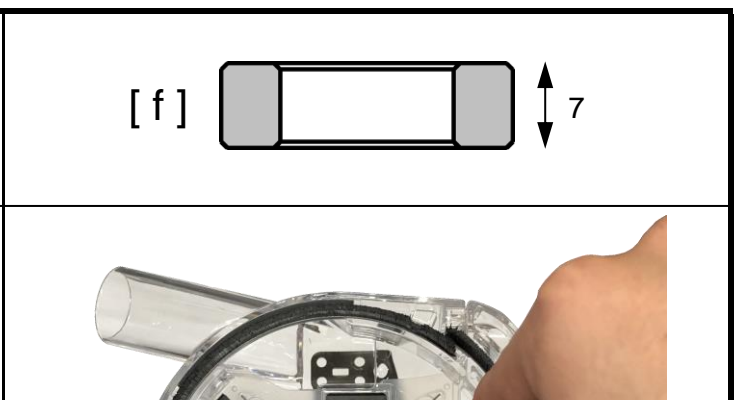
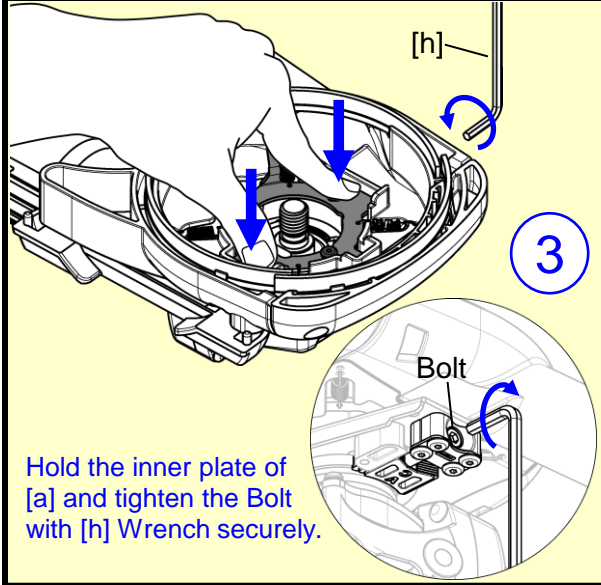
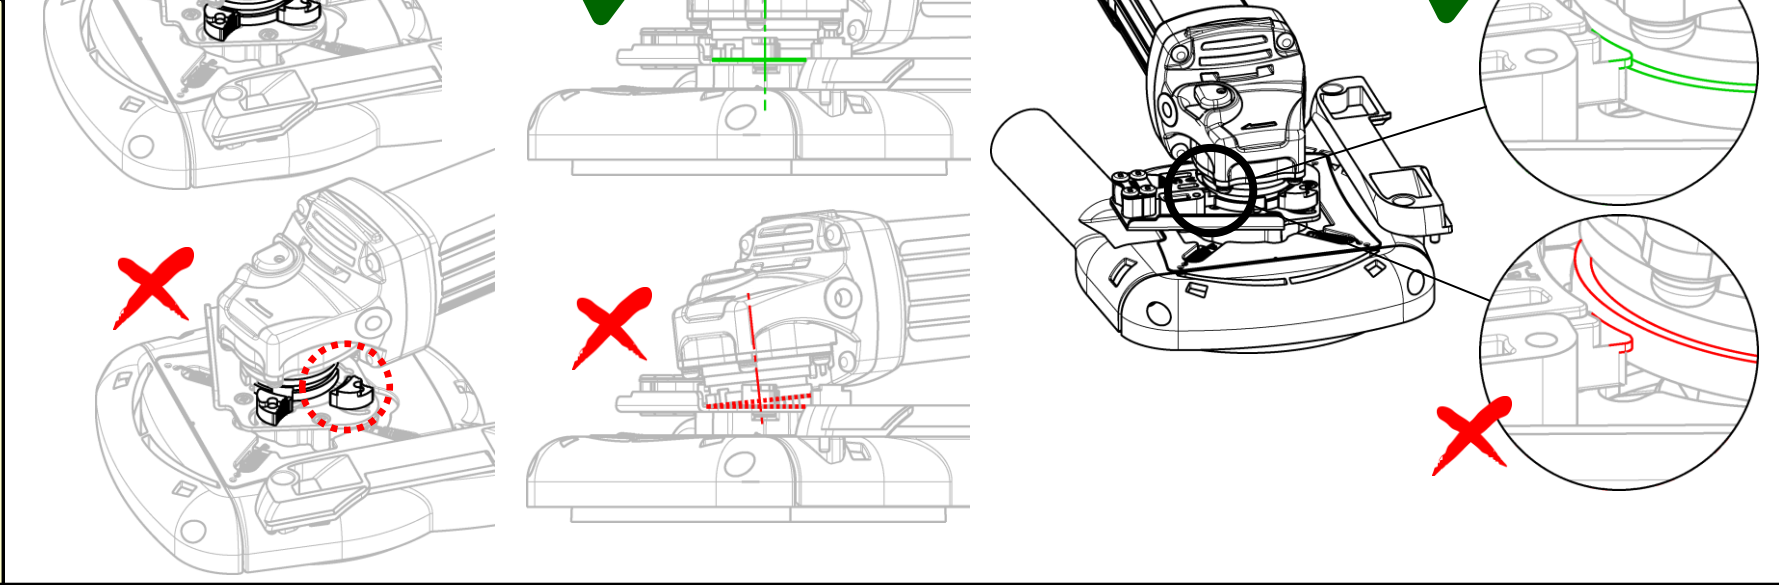
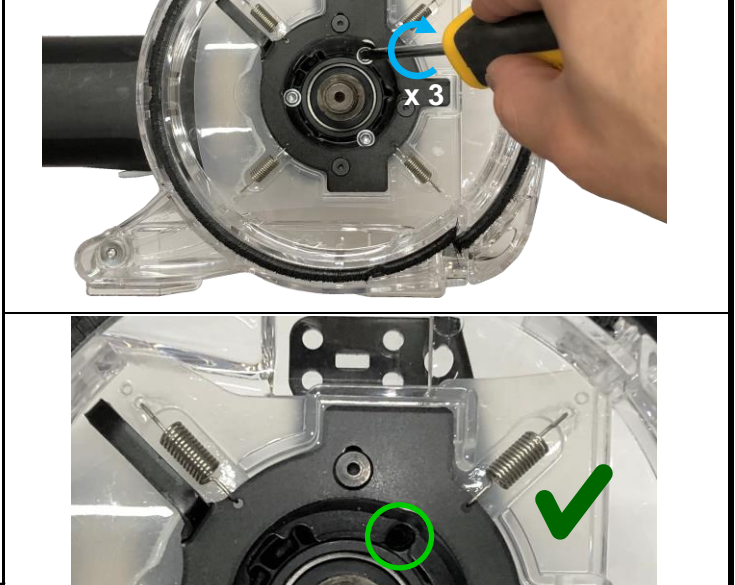
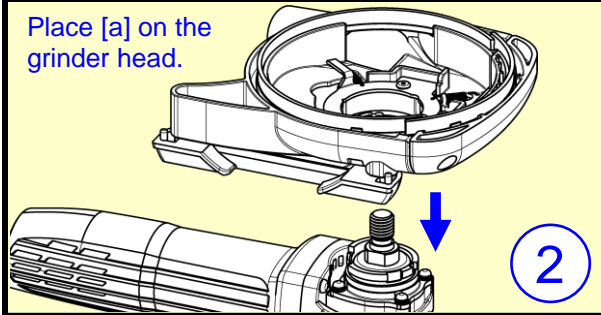
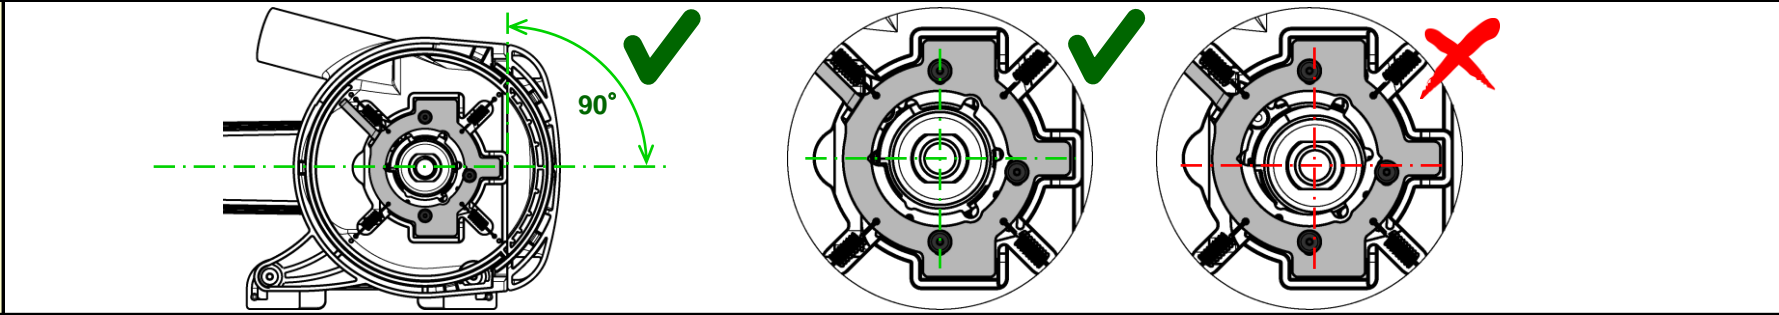
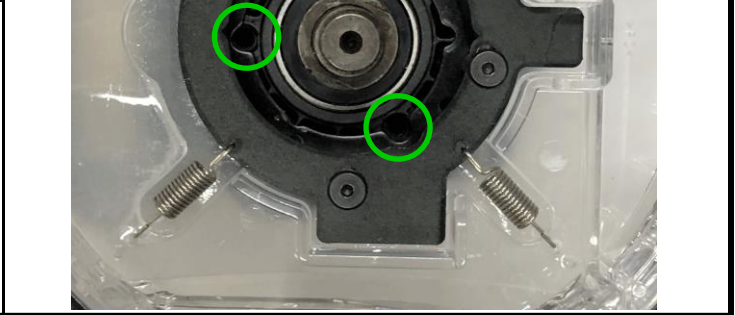
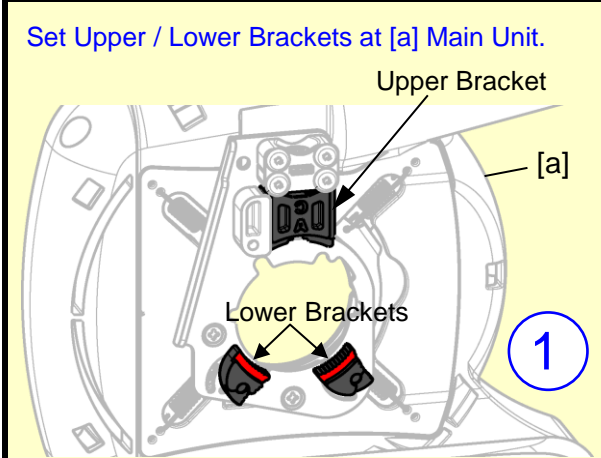
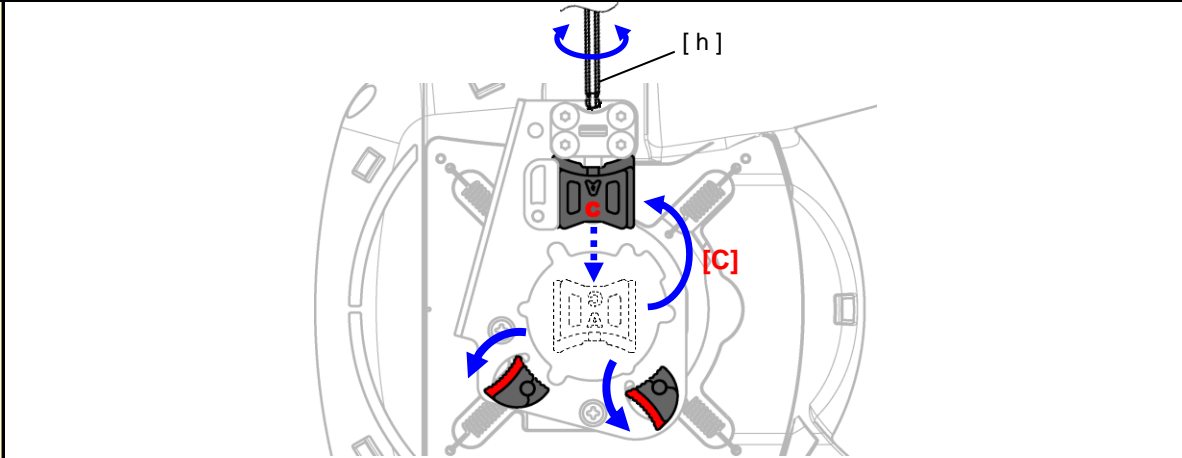
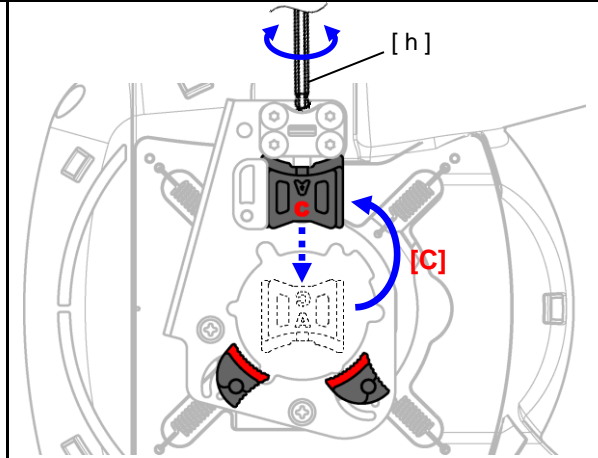
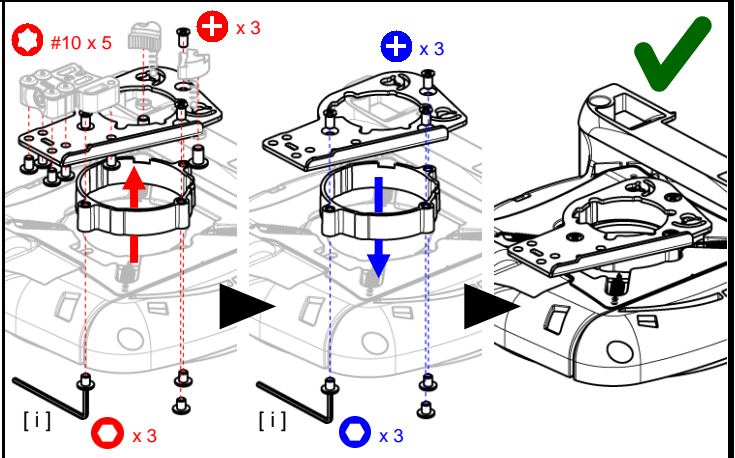


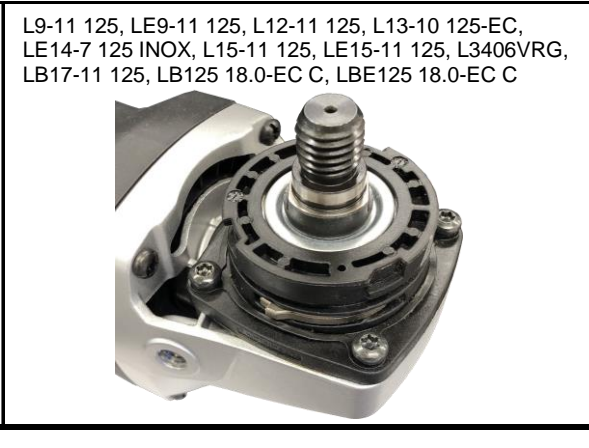
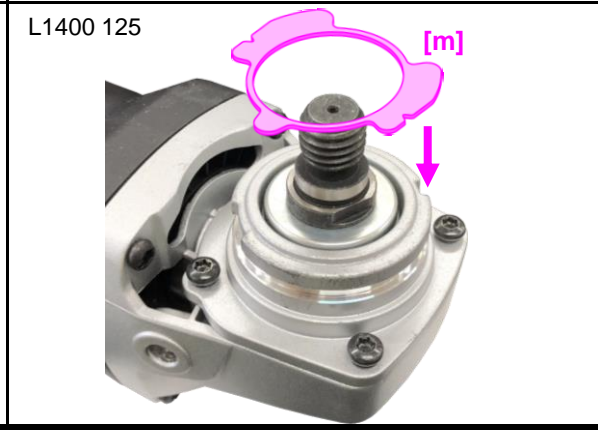
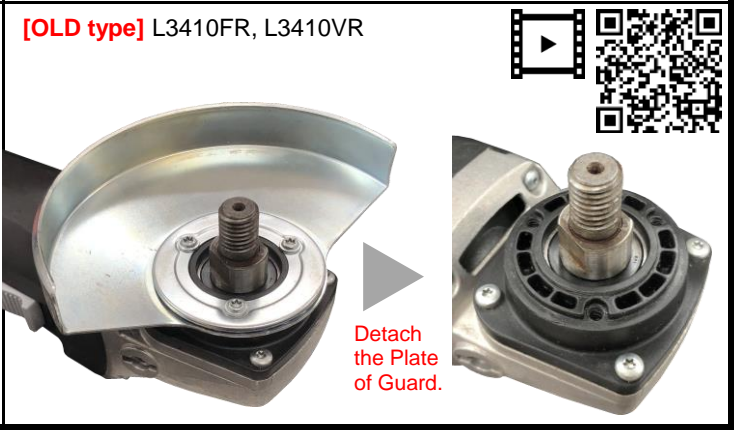
AG800-125E, AG800-125EK

HD18 AG-125 [m]

Detach the Plate.

HD28AG-125, AGV17-125 series, AG16-125 series, AG8-125, AG9-125

<p>Set [d/e/f] Spacer, [c] Flange, Grinding Cup, then tighten [b] Lock-Nut.</p>  <p>※In the case of h21mm Grinding Cup.</p> <p>4</p>				
 <p>3</p> <p>Hold the inner plate of [a] and tighten the Bolt with [h] Wrench securely.</p>				
<p>Place [a] on the grinder head.</p>  <p>2</p>				
<p>Set Upper / Lower Brackets at [a] Main Unit.</p>  <p>1</p>	 <p>※Refer to the memo attached to [d].</p>			
 <p>※Based on the web as of 2021 Sep.</p> 	<p>WPB18LTXBL125 / WB18LTXBL125 / WP18LTX125 / W18LTX125 / WEV1500-125 / WE1500-125 series</p> 	<p>WEV850-125 / WP850-125 / W850-125 / W750-125 series</p> 	<p>WEV17-125 / WEP17-125 / WE17-125 / WEV15-125 / WE15-125 / WEQ1400-125 / WPB13-125 / WP13-125 / W13-125 / WEV11-125 / WP11-125 / W11-125 / WQ1100-125 / W1100-125 / W9-125 series</p> 	<p>WEPBA17-125 / WEBA17-125 / WEA17-125 / WEVA15-125 / WA13-125 / WEA11-125 series</p>  

<p>Set [d/e/f] Spacer, [c] Flange, Grinding Cup, then tighten [b] Lock-Nut.</p>  <p>※In the case of h21mm Grinding Cup.</p> <p>4</p>	<p>[f]</p> 	<p>[d]</p> 	<p>[f]</p> 	
<p>Hold the inner plate of [a] and tighten the Bolt with [h] Wrench securely.</p>  <p>3</p>				
<p>Place [a] on the grinder head.</p>  <p>2</p>				
<p>Set Upper / Lower Brackets at [a] Main Unit.</p>  <p>1</p>				
<p>FLEX</p> <p>※Based on the web as of 2021 Sep.</p> 	<p>L1506VR</p> 	<p>L9-11 125, LE9-11 125, L12-11 125, L13-10 125-EC, LE14-7 125 INOX, L15-11 125, LE15-11 125, L3406VRG, LB17-11 125, LB125 18.0-EC C, LBE125 18.0-EC C</p> 	<p>L1400 125</p> 	<p>[OLD type] L3410FR, L3410VR</p>  <p>Detach the Plate of Guard.</p>

