NK-125MA

Installation Guide

NAKAYA JAPAN ORIGINAL TOOLS

Step 4

Set Flange and Blade into the Spindle, then tighten the Lock Nut by Wrench.

④

Flange

[f]

← M10 →

← M14 →

makita

Step 3

Hold [b] and tighten the Bolt with [d] securely.

③

[d]

✔ ✘

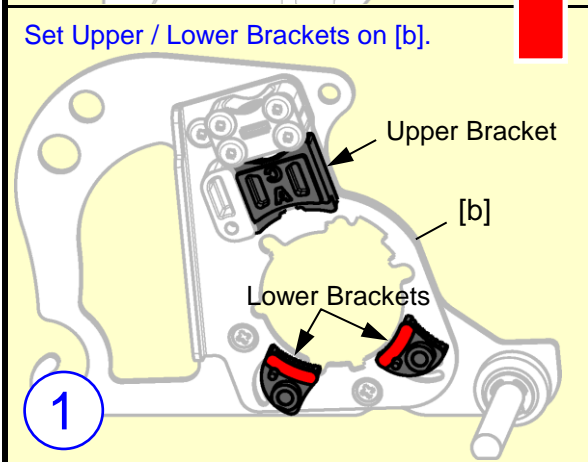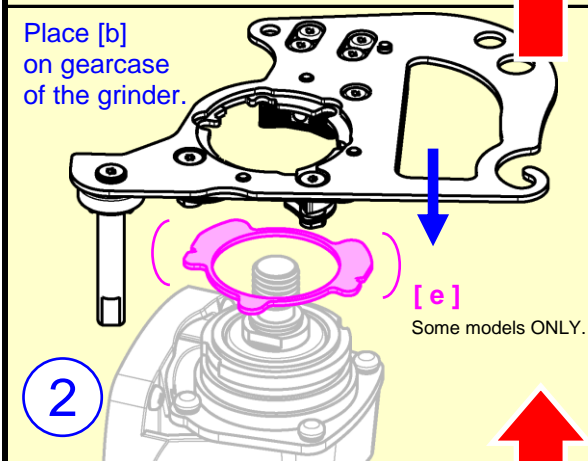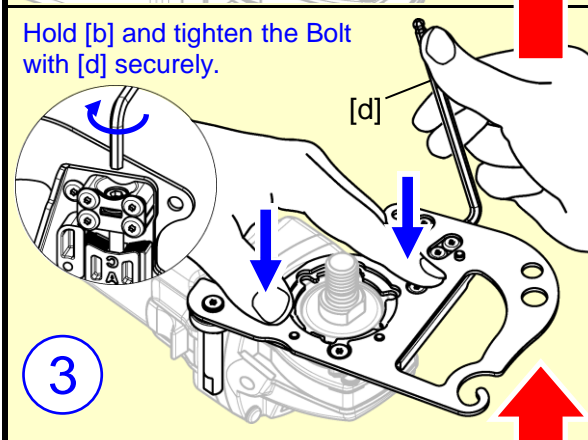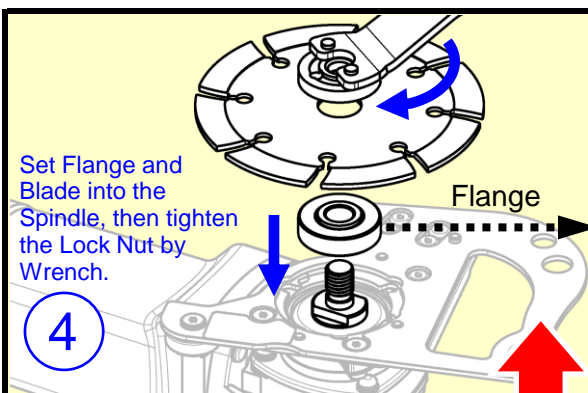✔ ✘

Step 2

Place [b] on gearcase of the grinder.

②

[e]
Some models ONLY.

✔ 👁

✔

Step 1

Set Upper / Lower Brackets on [b].

①

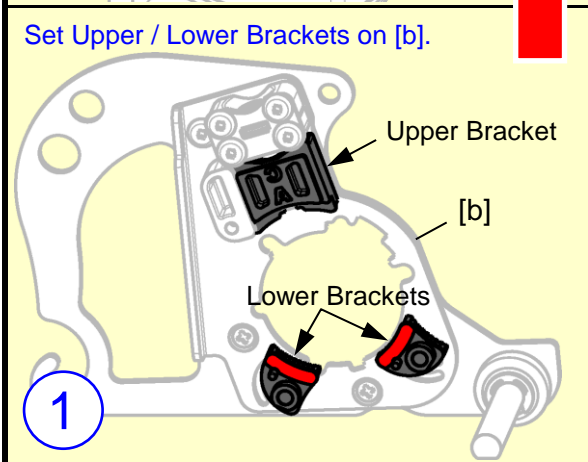Upper Bracket

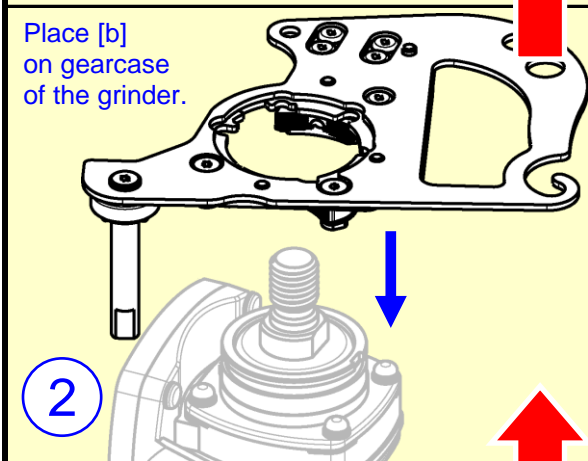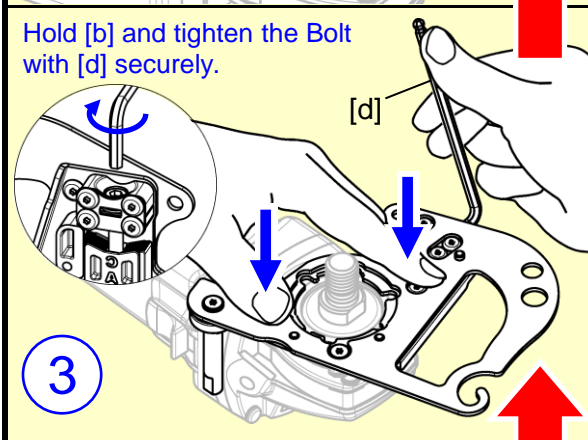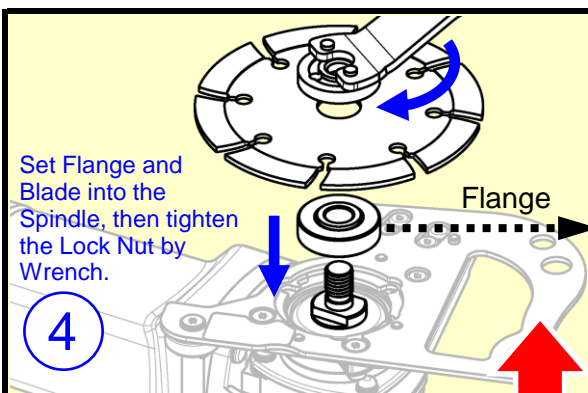[b]

Lower Brackets

(Factory preset)

[d]

[C]

#6

[n]

makita

⚠ **XLOCK** model can't be fitted.

※Based on the web information as of 2022 Sep.

type1	type2	type3	type4	type5	type6
DGA456 / DGA463 / DGA467 DGA506 / DGA513 / DGA517 GA4541 / GA5041 type	9565 / GA5021 / GA5030 / GA5040 / DGA511 DGA515 / DGA504 / GA4530 / GA4534 GA5034 / GA4540 / 9558NBR type	9558NB / DGA452 type	GA004 / GA005G / GA012 / GA013G GA022 / GA023G / GA028 type	GA008G / GA016G type	GA5050R / GA4550 type

[e]

40Vmax Li-ion

40Vmax Li-ion

④ Set Flange and Blade into the Spindle, then tighten the Lock Nut by Wrench.

Flange

[f] M10

BOSCH M14

[f] M10

Sold separately
NKFS-125MA

M14

③ Hold [b] and tighten the Bolt with [d] securely.

[d]

✔ ✘

✔ ✘

② Place [b] on gearcase of the grinder.

✔

① Set Upper / Lower Brackets on [b].

Upper Bracket

[b]

Lower Brackets

(Factory preset)

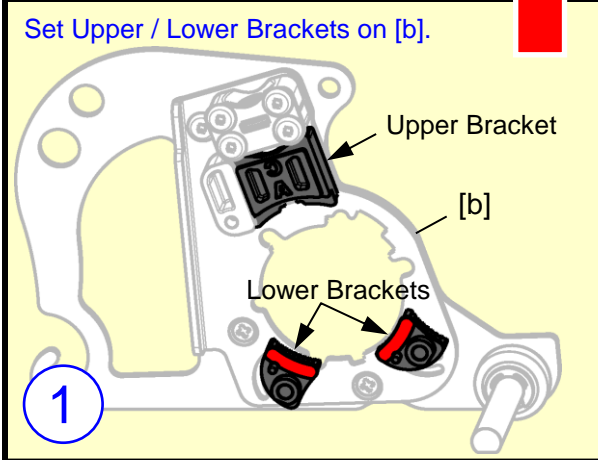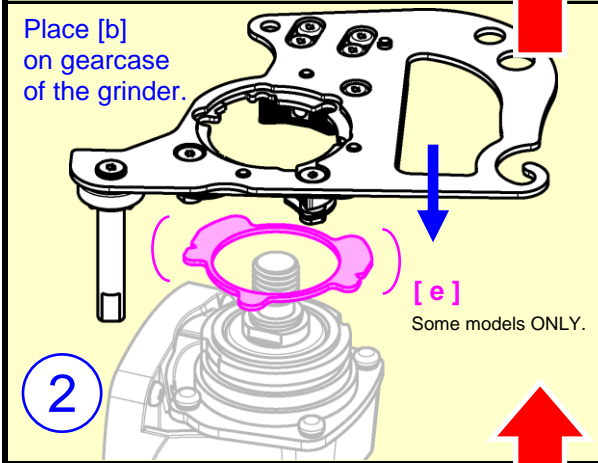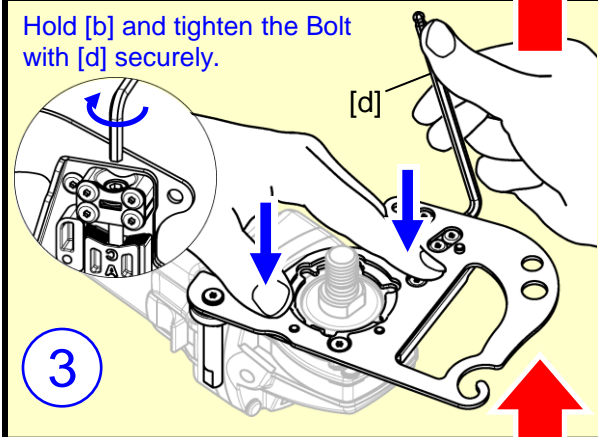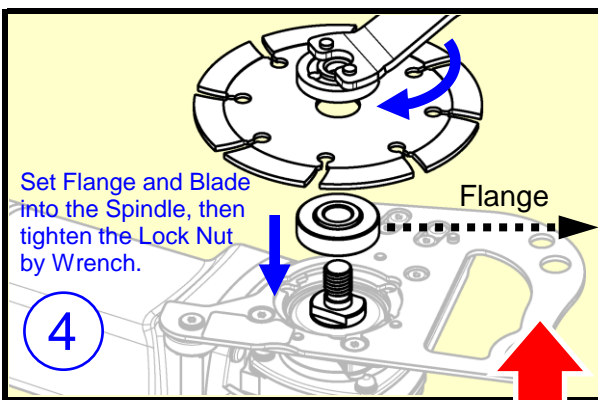**BOSCH**

⚠ **X LOCK** model can't be fitted.

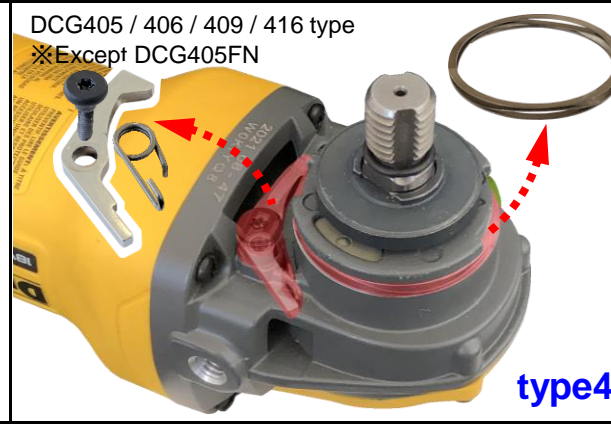GWS7-115 / GWS7-125
GWS9-115S / GWS9-125S
GWS750 / GWS880 type

type1

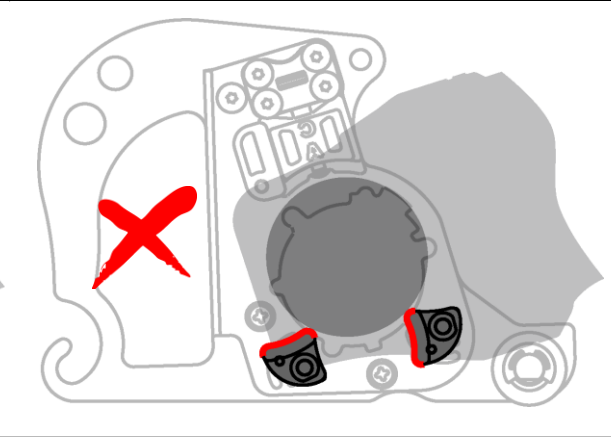GWS18V-7 type

type2

GWS1000 / GWS9-115P / GWS11-125
GWS12-125 / GWS-13-125 / GWS14-125
GWS1400 / GWS15-125 / GWS17-125
GWS18-125 / GWS19-125 / GWS18V-10
GWS18V-125 type

type3

※Based on the web information as of 2022 Sep.

④ Set Flange and Blade into the Spindle, then tighten the Lock Nut by Wrench.

Flange

[f] ← M10

Sold separately
NKFS-125MA ← M14

DEWALT

[f] ← M10 ← M14

③ Hold [b] and tighten the Bolt with [d] securely.

[d]

✔ ✘ ✔ ✘

② Place [b] on gearcase of the grinder.

[e] Some models ONLY.

✔

① Set Upper / Lower Brackets on [b].

Upper Bracket

[b]

Lower Brackets

(Factory preset)

DEWALT®

⚠ D28137 / DCG405FN can't be fitted.

※Based on the web information as of 2022 Sep.

DWE4203 / 4206 / 4207 / 4217 / 4237K / 4257 / 4277 / 4357 / 4369, DCG414NT / 418NT type

type1

DWE4056 / 4057 type

type2
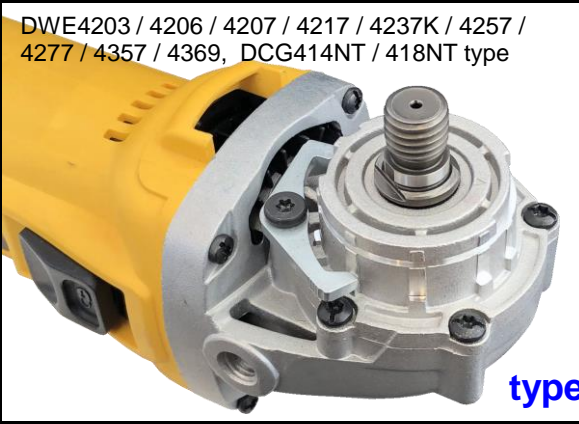
D28134 / DCG412N type

[e]

type3

DCG405 / 406 / 409 / 416 type
※Except DCG405FN

type4

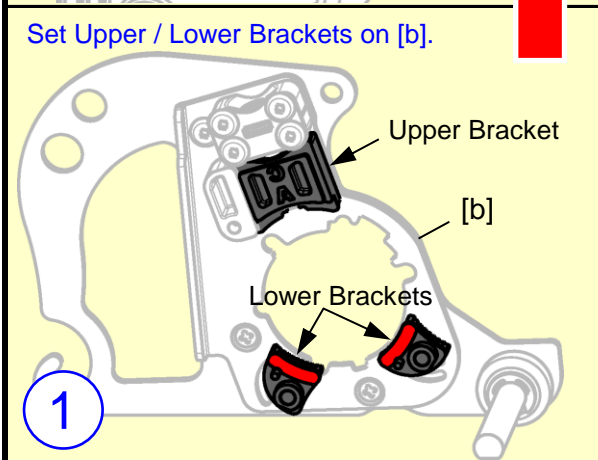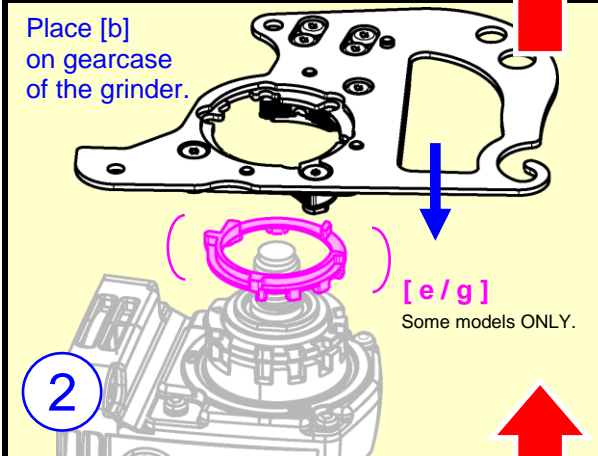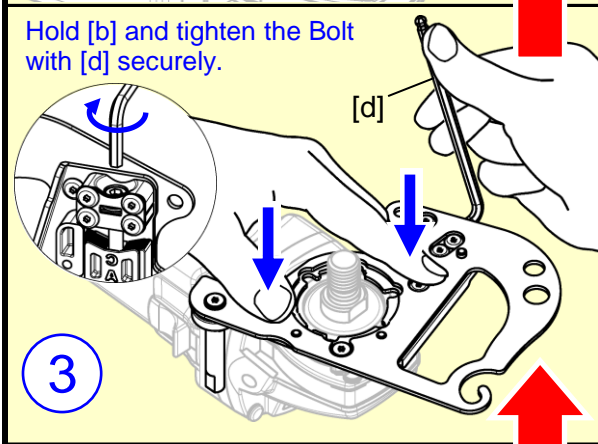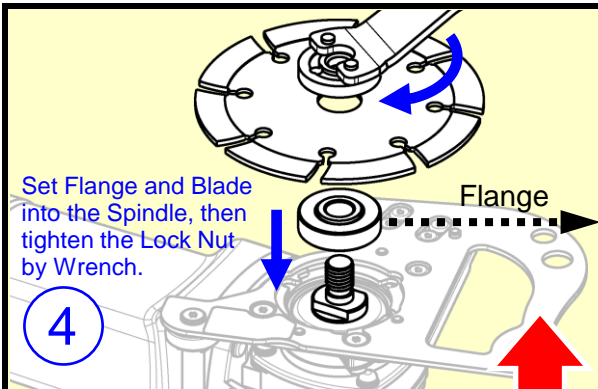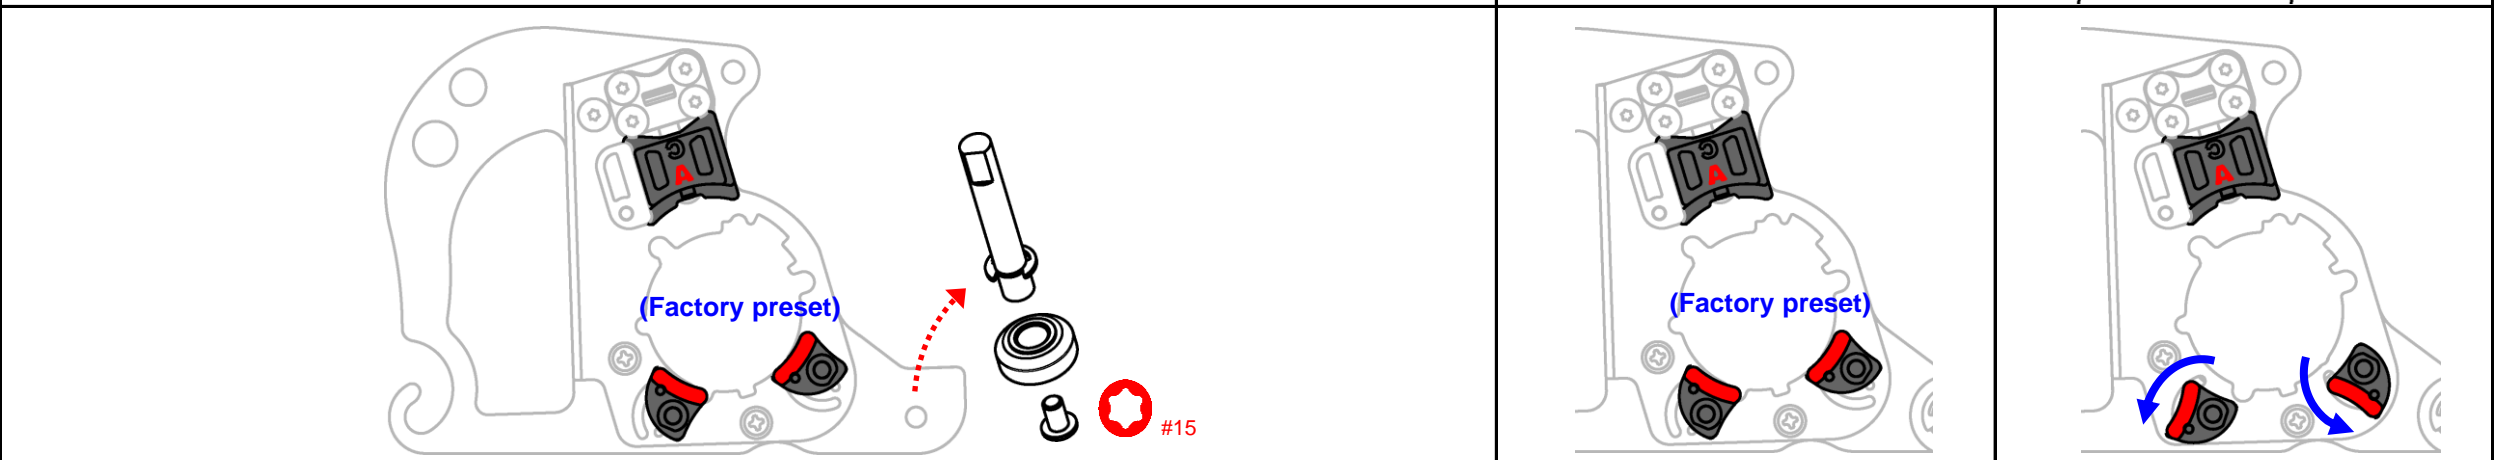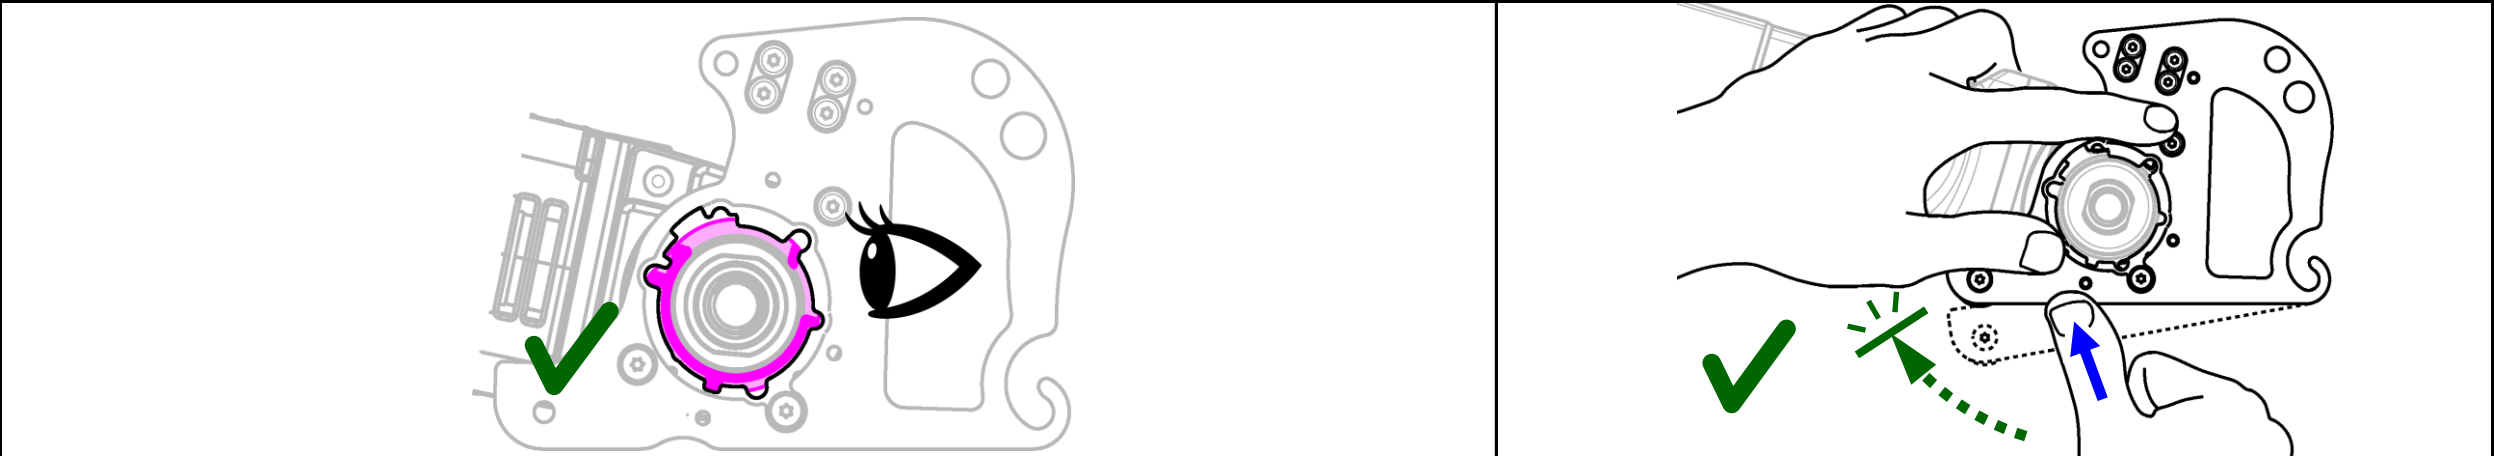|		
④ Set Flange and Blade into the Spindle, then tighten the Lock Nut by Wrench. Flange	[f] ← M10	Sold separately **NKFS-125MA** ← M14
③ Hold [b] and tighten the Bolt with [d] securely. [d]	✔ ✘	✔ ✘
② Place [b] on gearcase of the grinder. [e / g] Some models ONLY.	✔ 👁	✔
① Set Upper / Lower Brackets on [b]. Upper Bracket [b] Lower Brackets	(Factory preset) #15	(Factory preset)

Milwaukee®

⚠ AGV10-125EK, AG10-125EK, AG800-125EK type can't be fitted.

※Based on the web information as of 2022 Sep.

| M18FHSAG125 / AGV13-125XSPDEB type [g] **type1** | M18FSAGV125 type [g] **type2** | AGV15-125 / AGV13-125 / AG13-125XSPD / AGV12-125 type [g] **type3** | AG800-125E type **type4** | HD18 type [e] **type5** |

Step 4. Set Flange and Blade into the Spindle, then tighten the Lock Nut by Wrench. — Flange

[f] metabo

M10 M14

Step 3. Hold [b] and tighten the Bolt with [d] securely. [d]

Step 2. Place [b] on gearcase of the grinder.

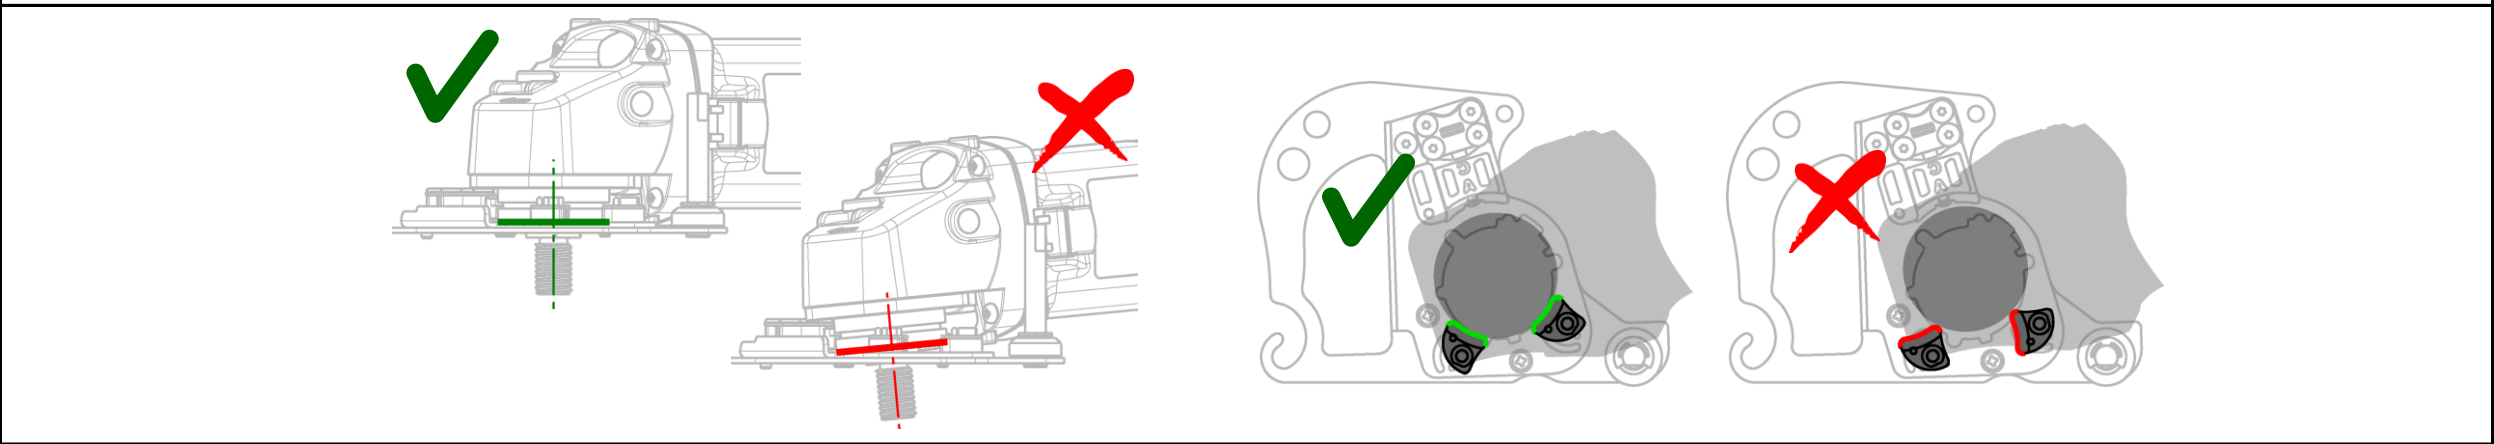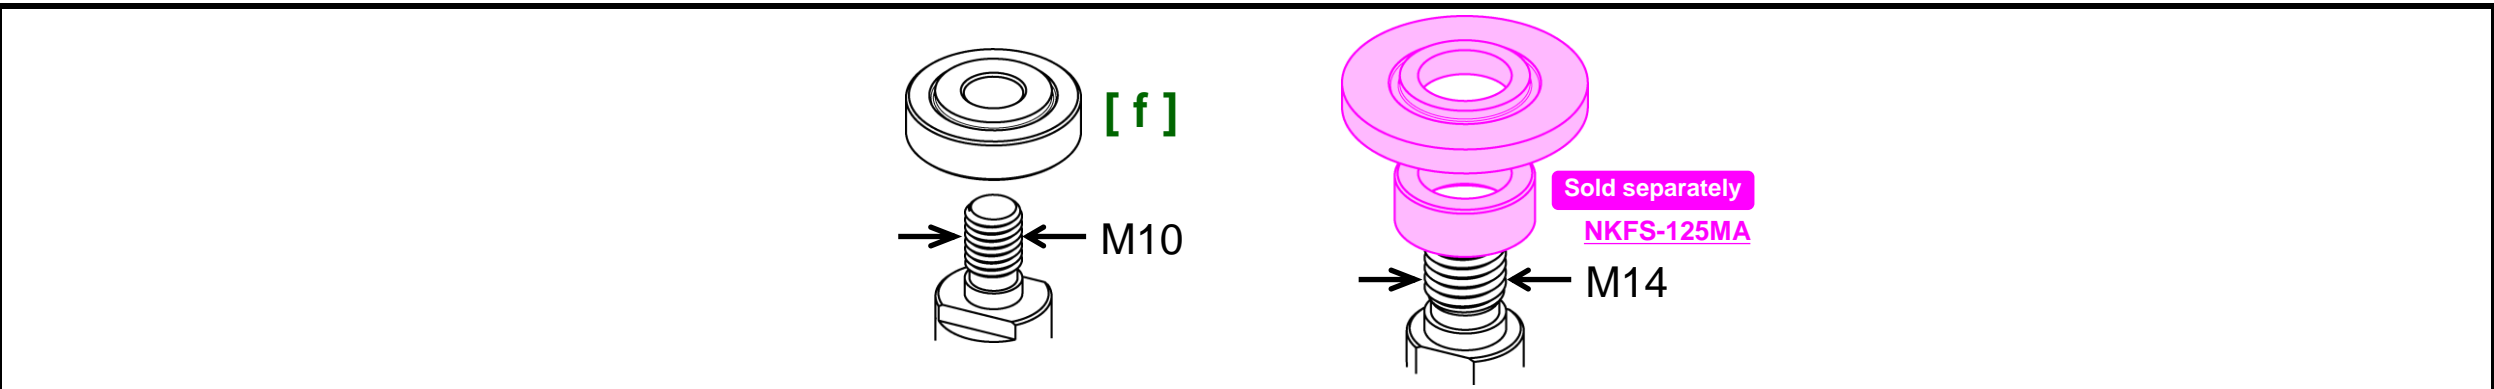**Step 1.** Set Upper / Lower Brackets on [b]. — Upper Bracket — [b] — Lower Brackets
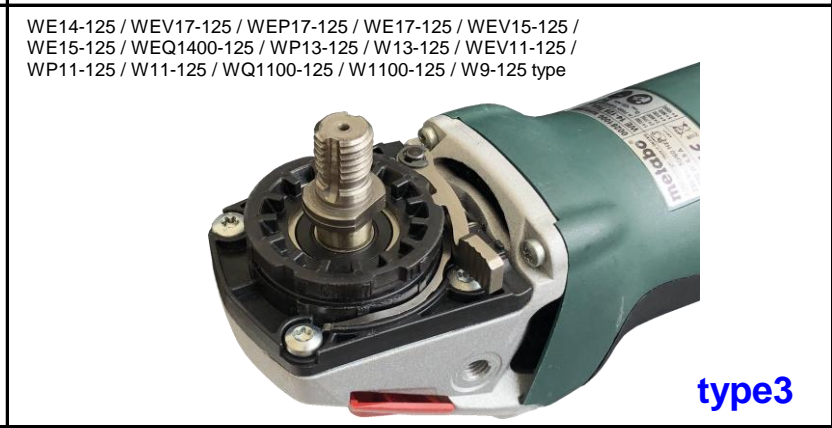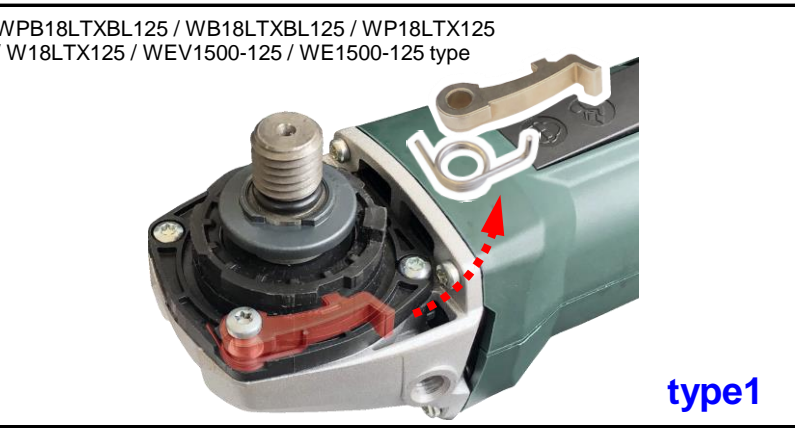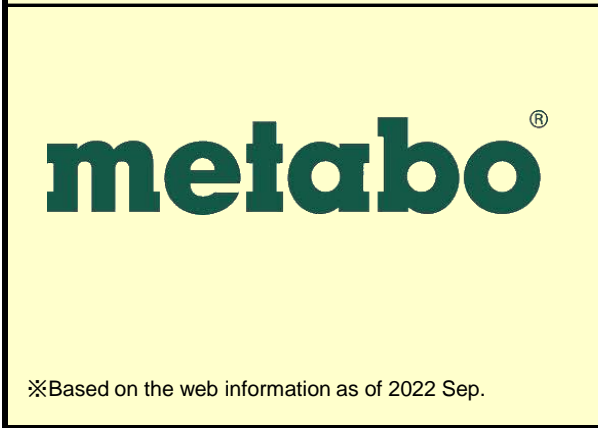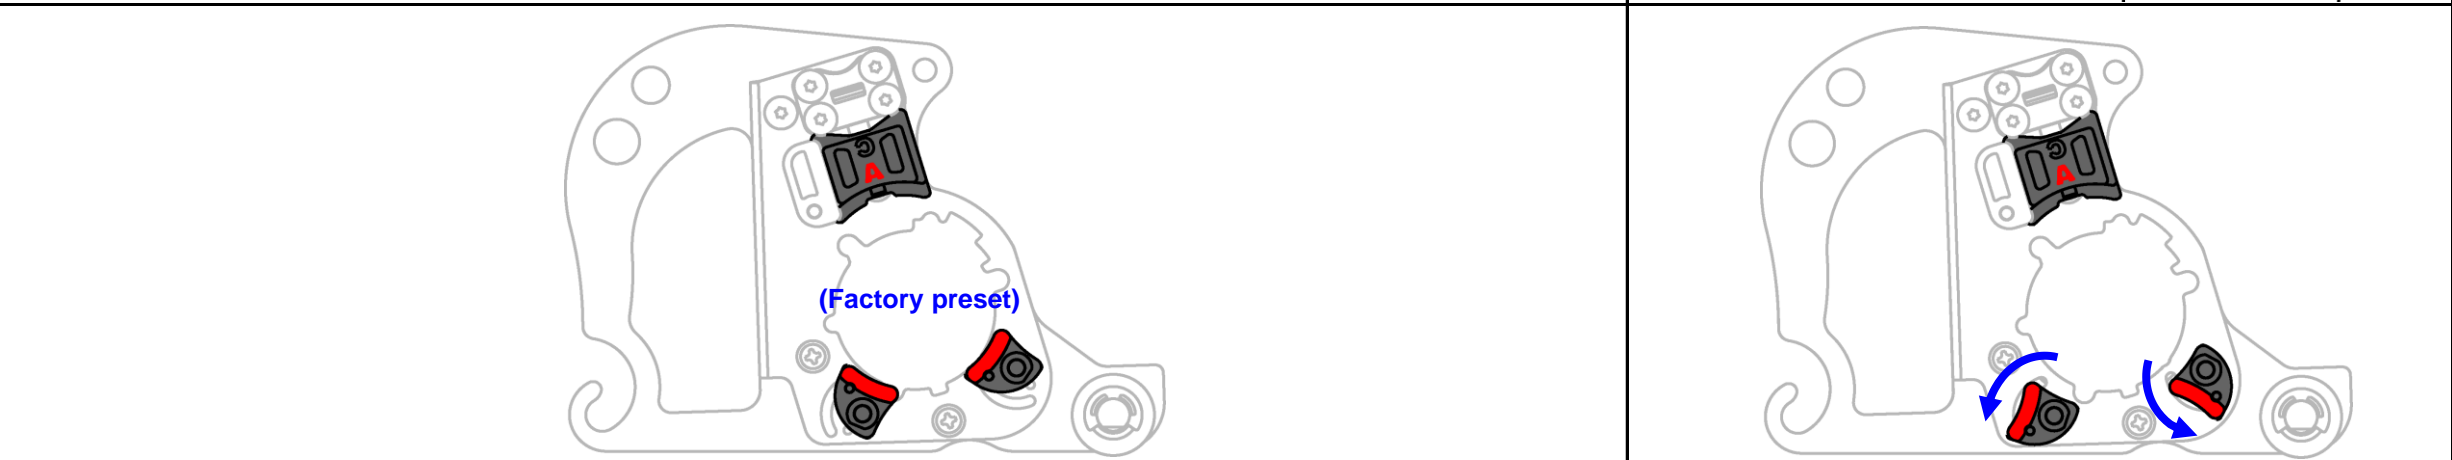
(Factory preset)

metabo

※Based on the web information as of 2022 Sep.

type1: WPB18LTXBL125 / WB18LTXBL125 / WP18LTX125 / W18LTX125 / WEV1500-125 / WE1500-125 type

type2: WEV850-125 / WP850-125 / W850-125 / W750-125 type

type3: WE14-125 / WEV17-125 / WEP17-125 / WE17-125 / WEV15-125 / WE15-125 / WEQ1400-125 / WP13-125 / W13-125 / WEV11-125 / WP11-125 / W11-125 / WQ1100-125 / W1100-125 / W9-125 type

4 Set Flange and Blade into the Spindle, then tighten the Lock Nut by Wrench.

Flange

[f]

←M10→

HiKOKI

→M14←

3 Hold [b] and tighten the Bolt with [d] securely.

[d]

✓ ✗ ✓ ✗

2 Place [b] on gearcase of the grinder.

✓

1 Set Upper / Lower Brackets on [b].

Upper Bracket

[b]

Lower Brackets

(Factory preset)

HiKOKI

※Based on the web information as of 2022 Sep.

G12SR3 / G13SW / G13VE type
type1

G18DSL / G18DSL2 / G13SN2 / G13SR4 / G13STA type
type2

G18DBBAL / G18DBBVL / G3613DA / G3613DB / G13BYEQ type
type3

G13SE2 / G13YC2 / G13VA type
type4

Please scan the QR code to check the compatibility.