Set [h] / [i] / [k], [g] or Original Flange, and Blade into the Spindle. Then tighten the Lock Nut by Wrench.

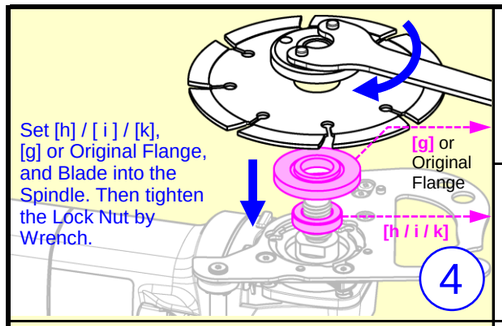

4

—

Hold [b] and tighten the Bolt with [d] securely.

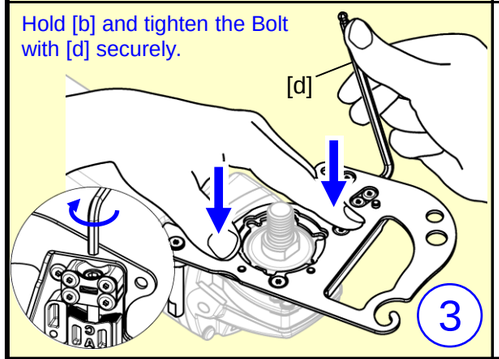

3

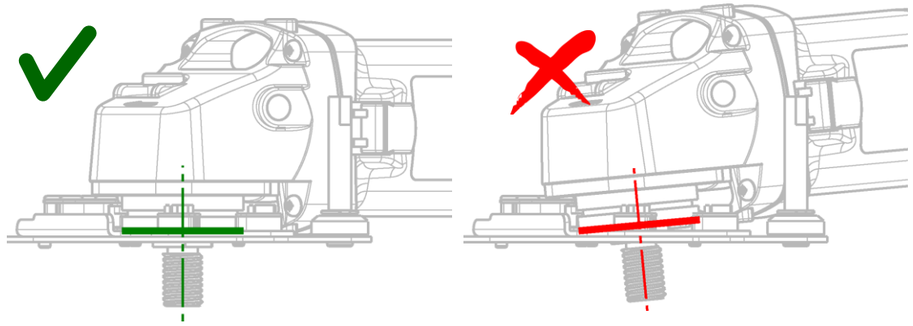

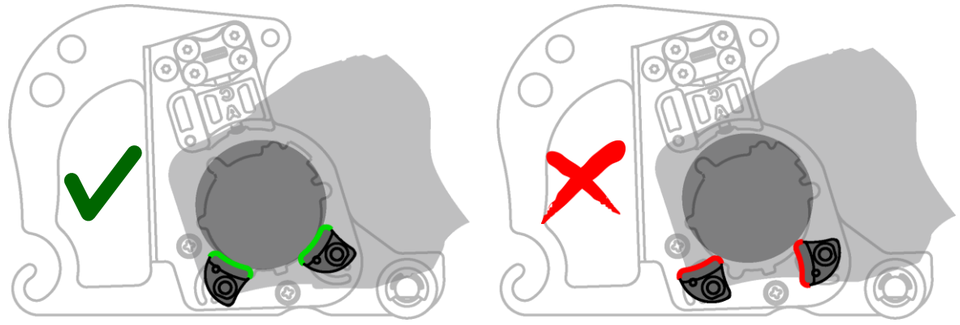

Place [b] on gearcase of the grinder.

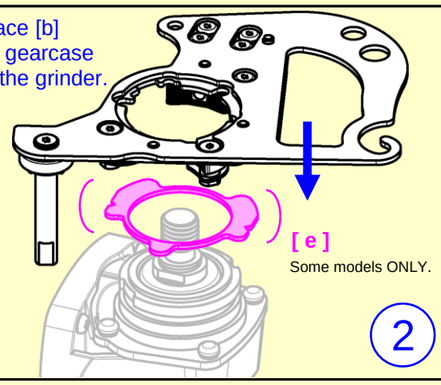

Some models ONLY.

2

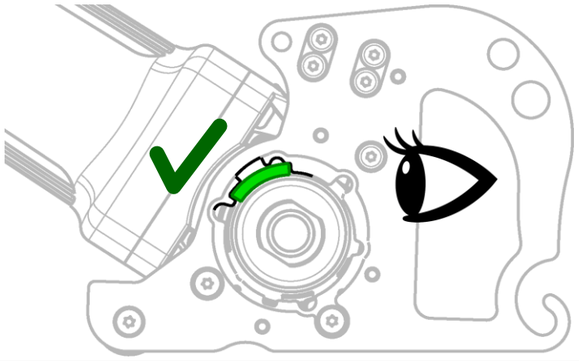

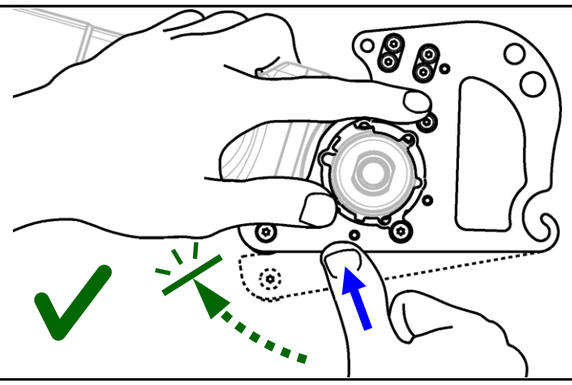

Set Upper / Lower Brackets on [b].

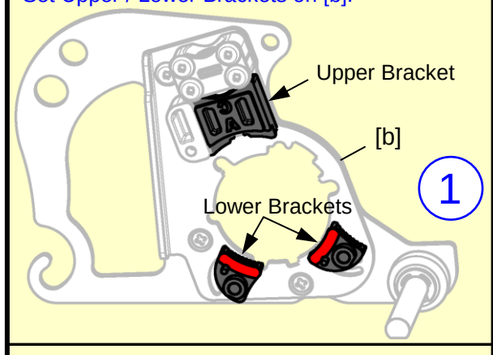

1

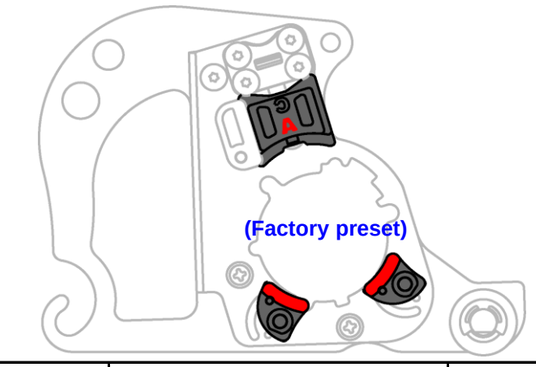

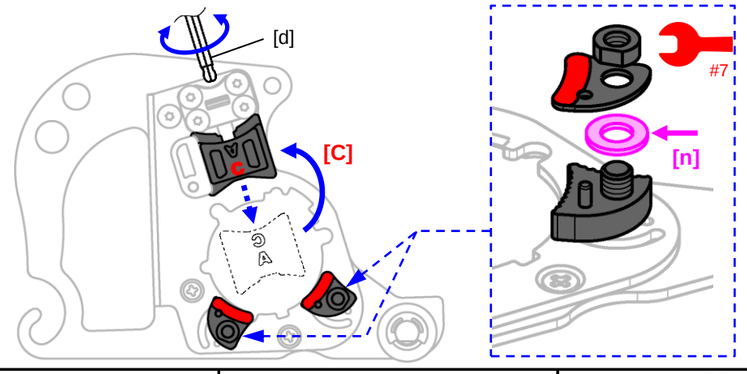

makita

⚠ XLOCK model can't be fitted.

※Based on the web information as of 2022 Jan.

DGA513 / DGA517 type

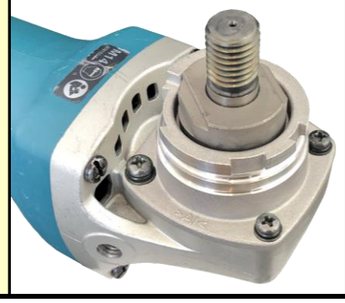

GA5021 / GA5030 / GA5040 / GA5041 / DGA511 / DGA515 / DGA504 type

9558 / 9565 type

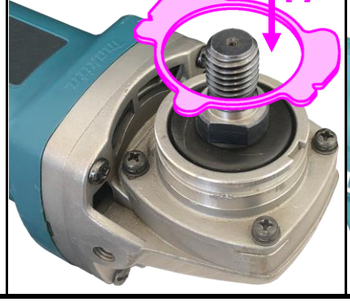

GA005G / GA013G / GA023G type

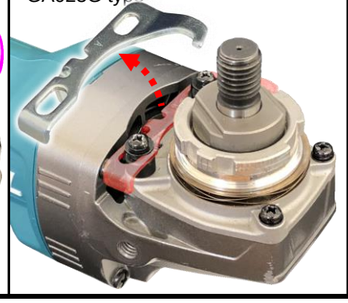

GA008G / GA016G type

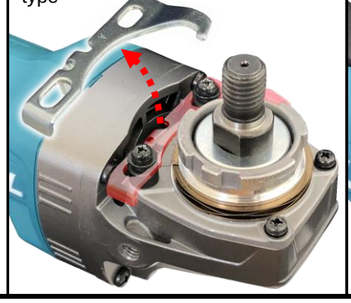

GA5050R type

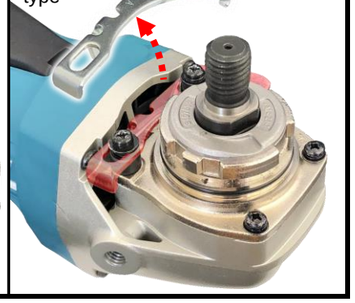

Set [h] / [i] / [k], [g] or Original Flange, and Blade into the Spindle. Then tighten the Lock Nut by Wrench.

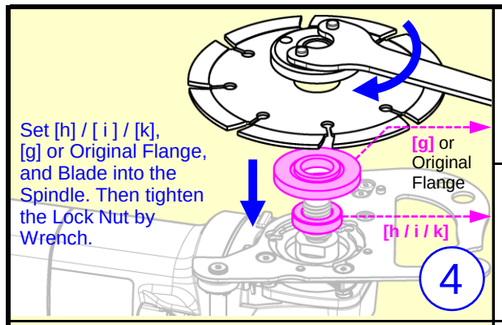

4

—

Hold [b] and tighten the Bolt with [d] securely.

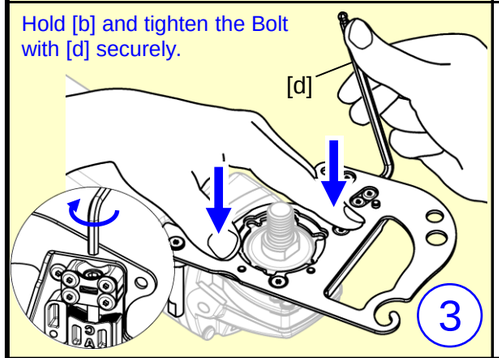

3

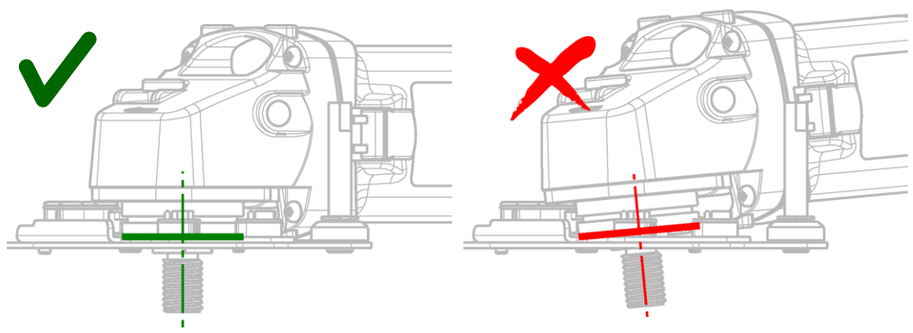

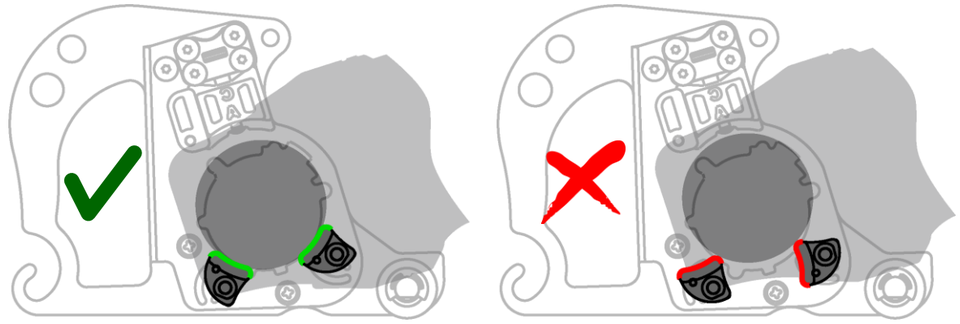

Place [b] on gearcase of the grinder.

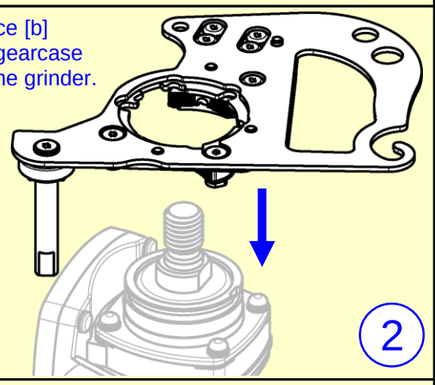

2

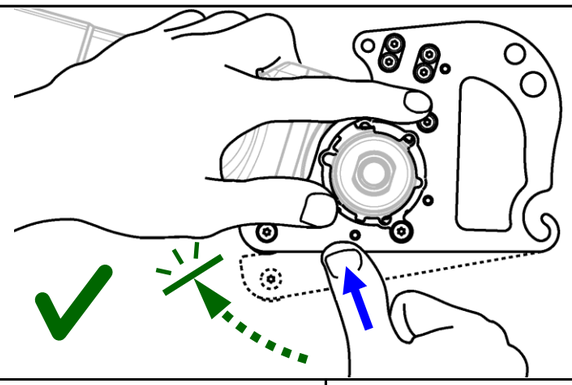

Set Upper / Lower Brackets on [b].

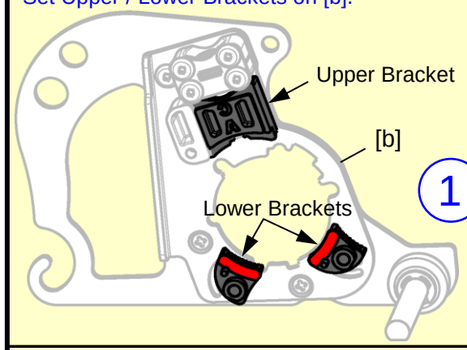

1

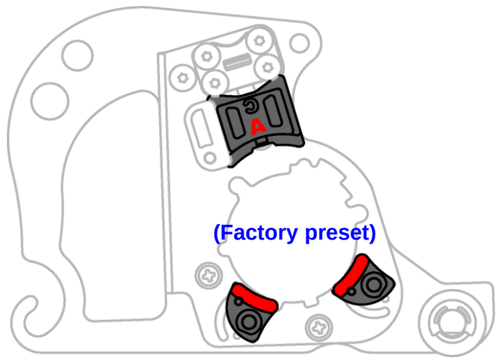

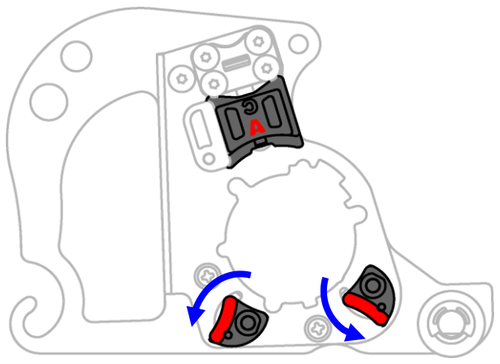

BOSCH

⚠ **XLOCK** model can't be fitted.

※Based on the web information as of 2022 Jan.

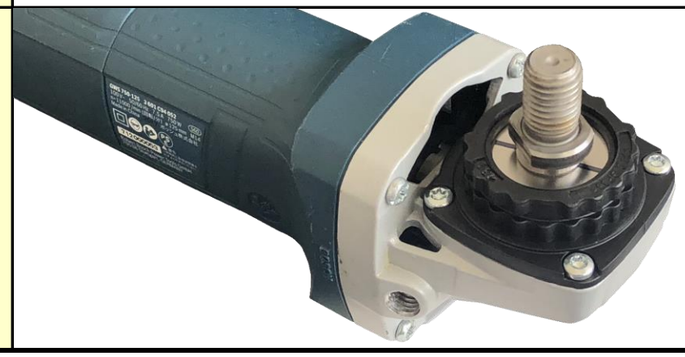

GWS7-125 / GWS750 /
GWS880 / GWS9-125S /
GWS18-125V-LI
type

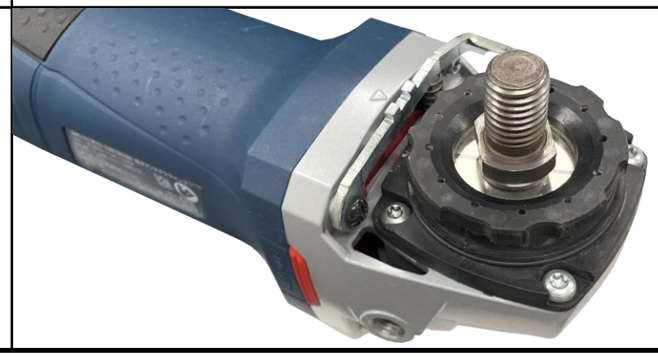

GWS1000 / GWS11-125
GWS13-125CI
GWS1400 / GWS15-125CIEP
GWS17-125CI
GWS17-125 INOX / GWS18-125
GWS19-125CI
GWS18V
type

Set [h] / [i] / [k], [g] or Original Flange, and Blade into the Spindle. Then tighten the Lock Nut by Wrench.

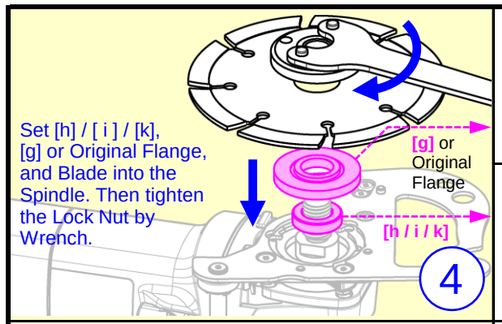

4



DEWALT Original Flange





—

Hold [b] and tighten the Bolt with [d] securely.

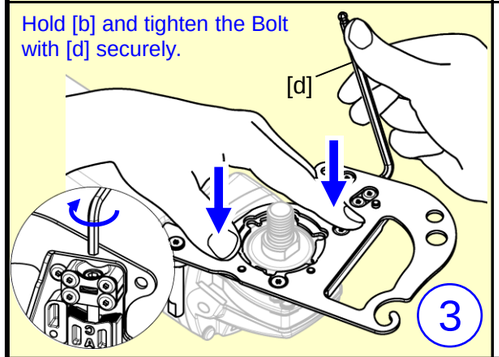

3

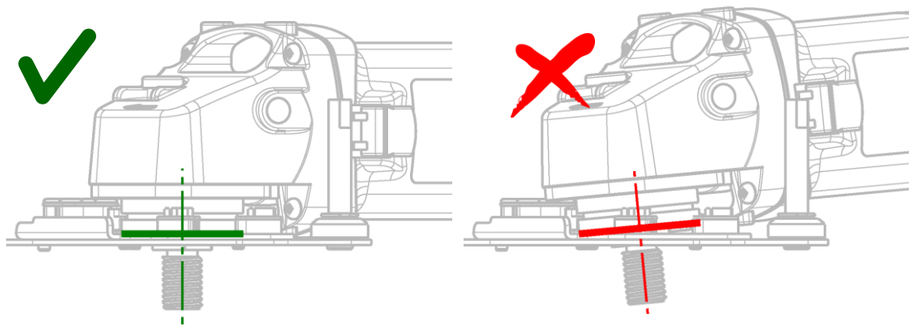

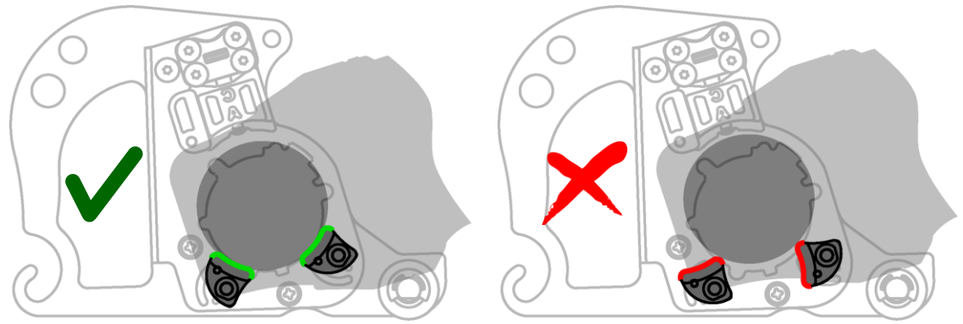

Place [b] on gearcase of the grinder.

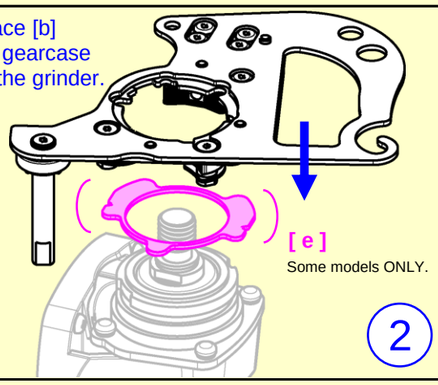

2

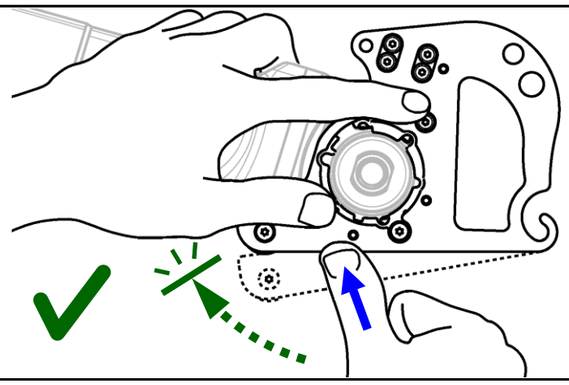

Set Upper / Lower Brackets on [b].

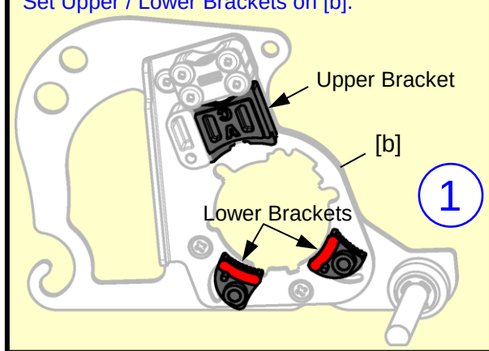

1

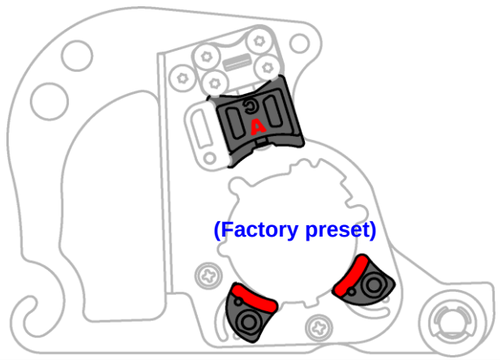

DEWALT

⚠ D28137 / DCG405FN can't be fitted.

※Based on the web information as of 2022 Jan.

DWE4203 / 4206 / 4207 / 4217 / 4237K / 4257 / 4277 / 4357 / 4369, DCG414NT / 418NT type

DWE4056 / 4057 type

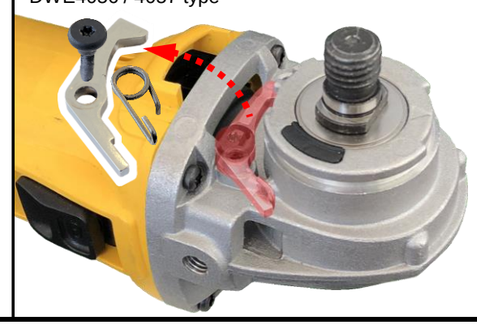

D28134 / DCG412N type

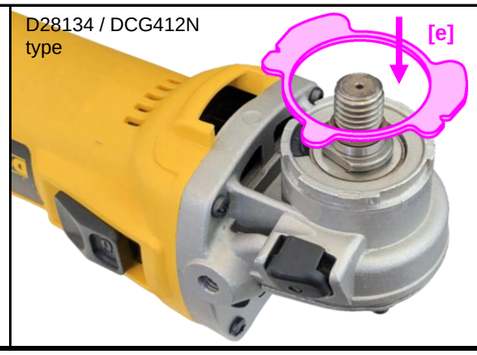

DCG405 / 406 / 409 / 416 type
※Except DCG405FN

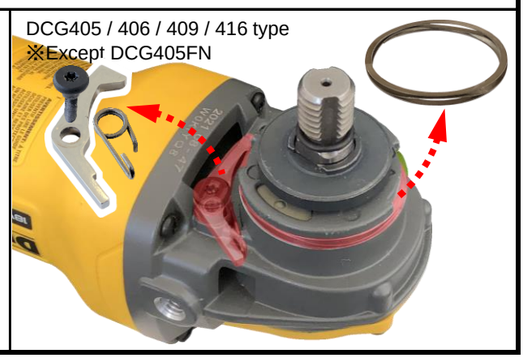

Set [h] / [i] / [k], [g] or Original Flange, and Blade into the Spindle. Then tighten the Lock Nut by Wrench.

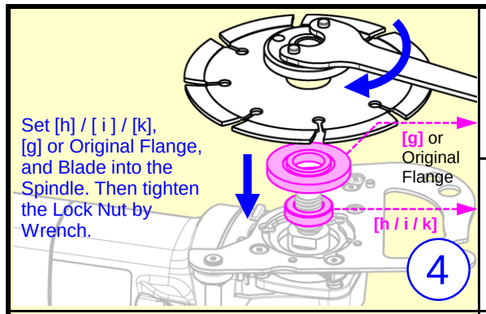

4

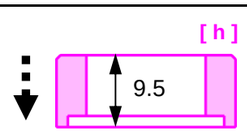

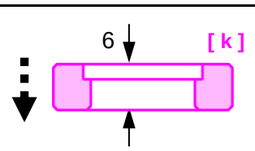

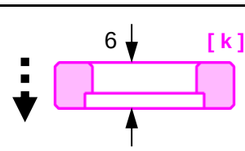

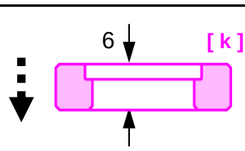

—

Hold [b] and tighten the Bolt with [d] securely.

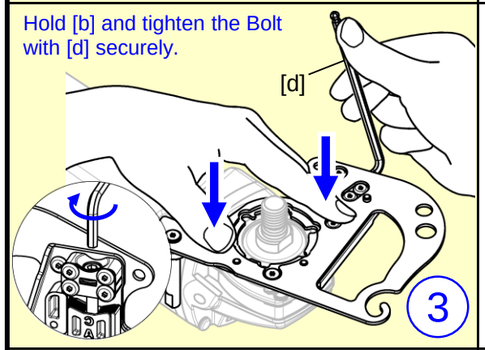

3

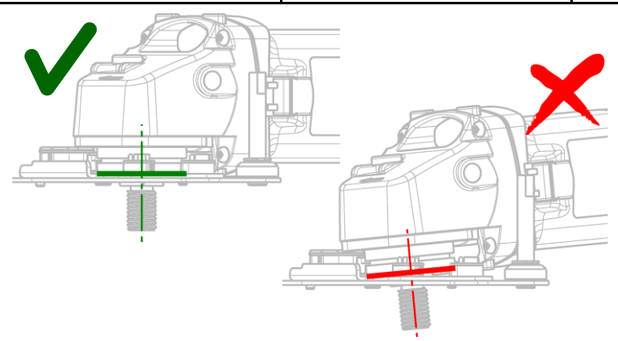

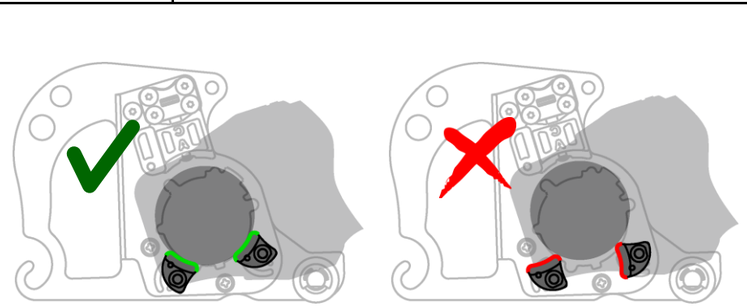

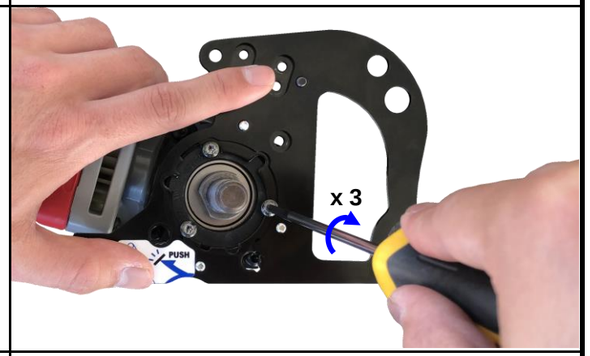

Place [b] on gearcase of the grinder.

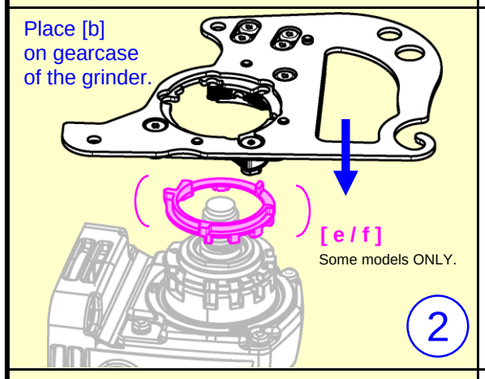

2

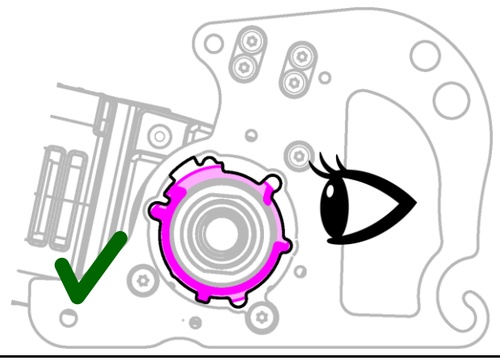

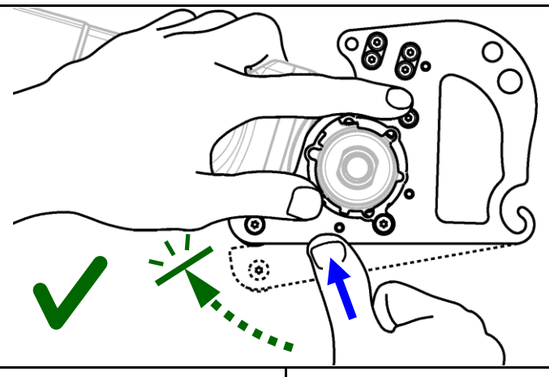

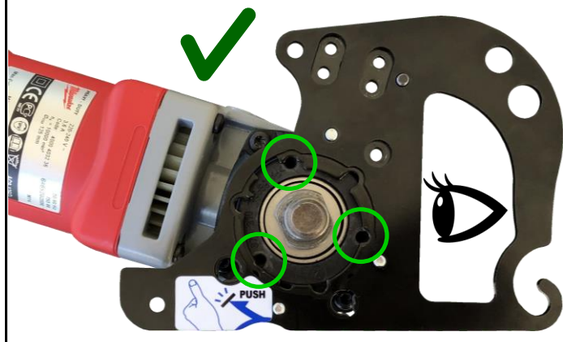

Set Upper / Lower Brackets on [b].

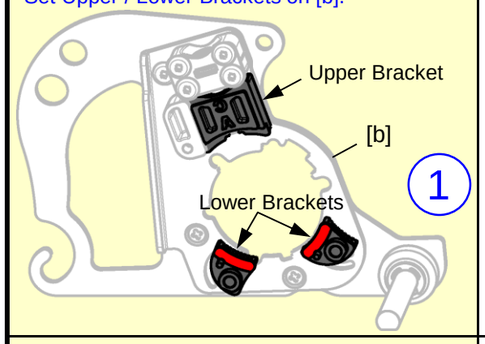

1

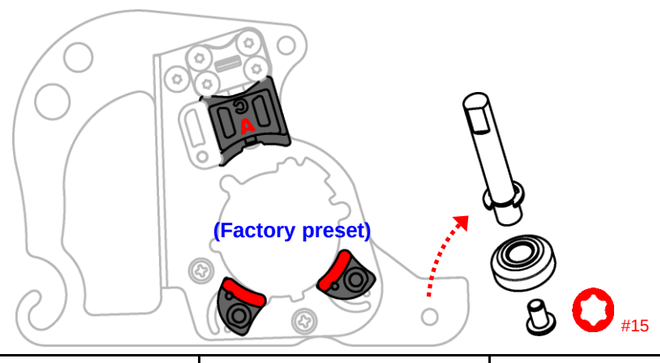

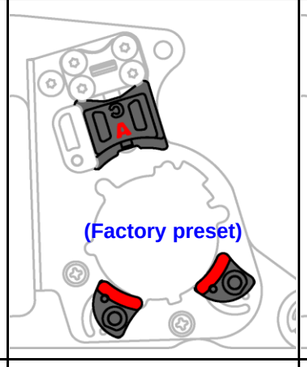

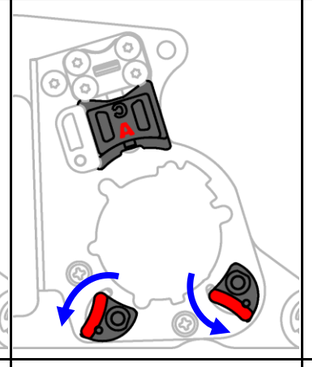

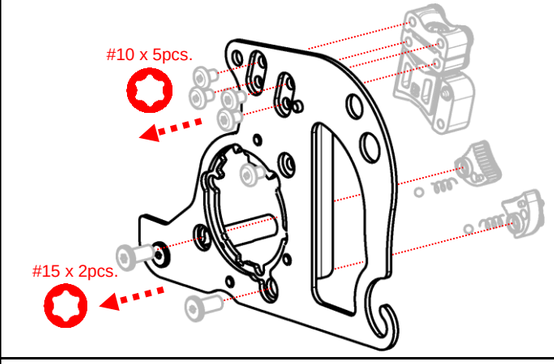

Milwaukee

AGV10-125EK, AG10-125EK, AG800-125EK type can't be fitted.

※Based on the web information as of 2022 Jan.

M18FHSAG125, AGV13-125XSPDEB type

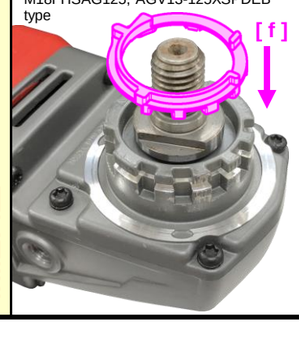

M18FSAGV125 type

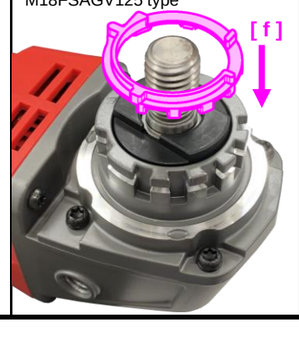

AGV15-125, AGV13-125, AG13-125XSPD, AGV12-125 type

AG800-125E type

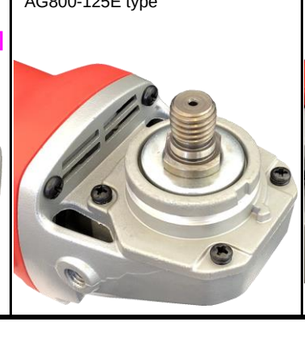

HD18 type

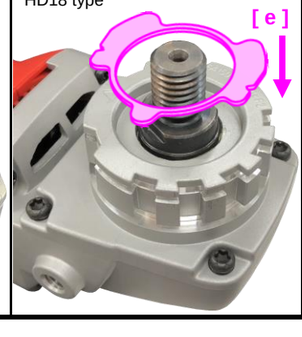

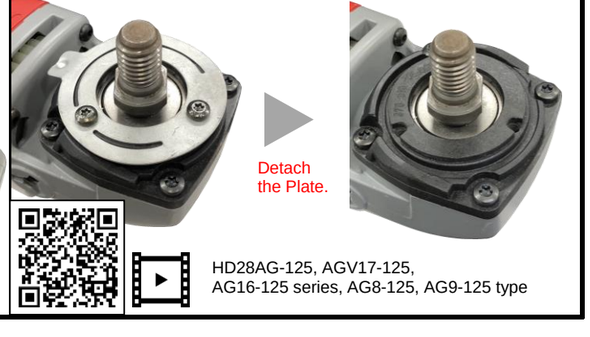

HD28AG-125, AGV17-125, AG16-125 series, AG8-125, AG9-125 type

Set [h] / [i] / [k], [g] or Original Flange, and Blade into the Spindle. Then tighten the Lock Nut by Wrench.

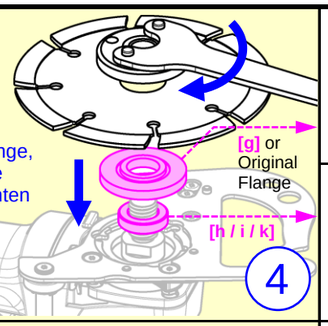

4

—

—

Hold [b] and tighten the Bolt with [d] securely.

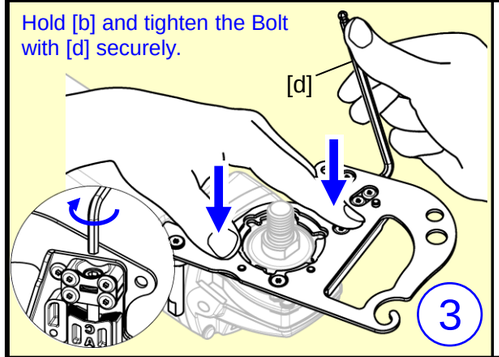

3

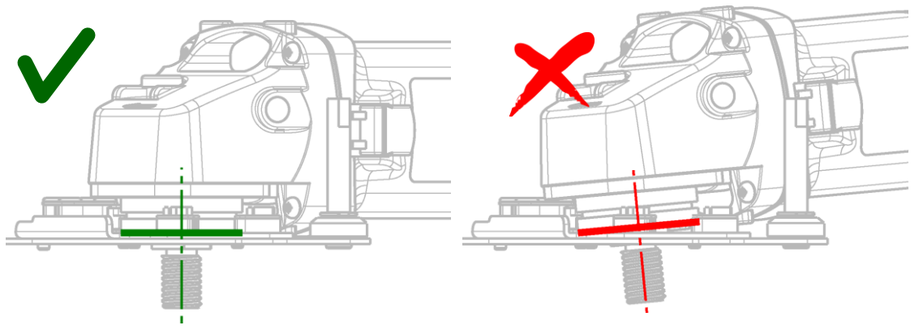

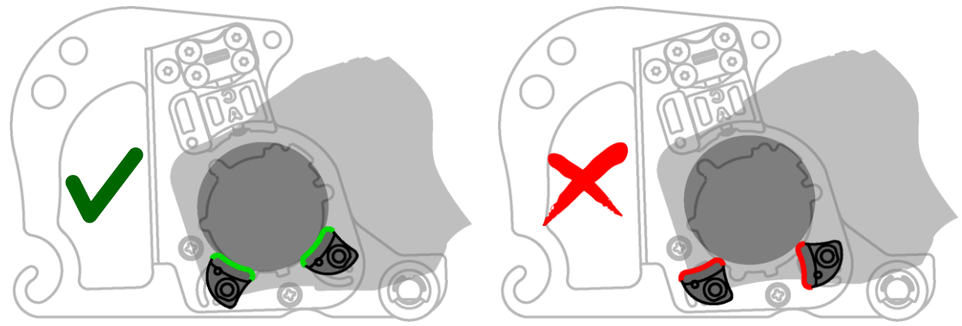

Place [b] on gearcase of the grinder.

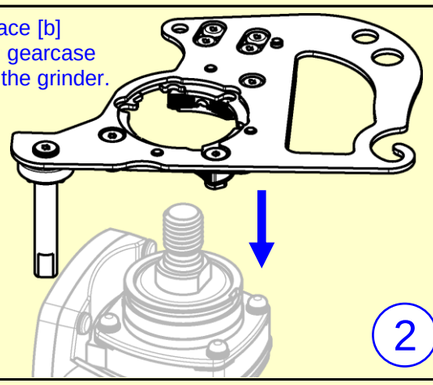

2

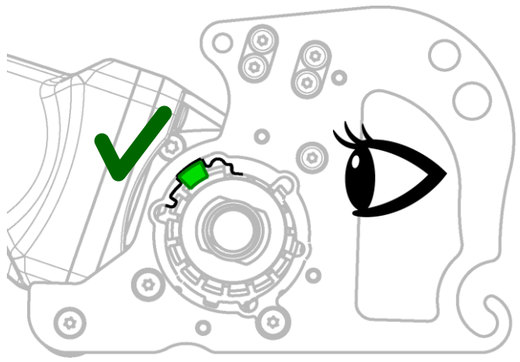

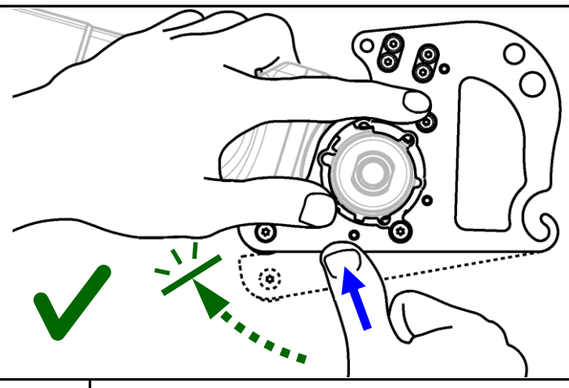

Set Upper / Lower Brackets on [b].

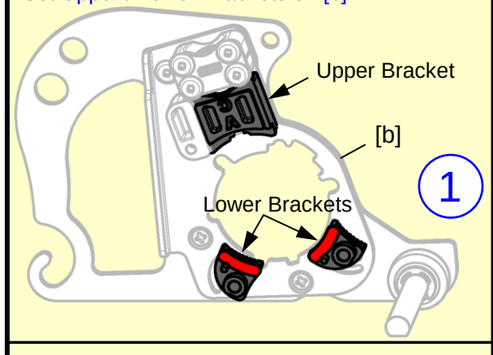

1

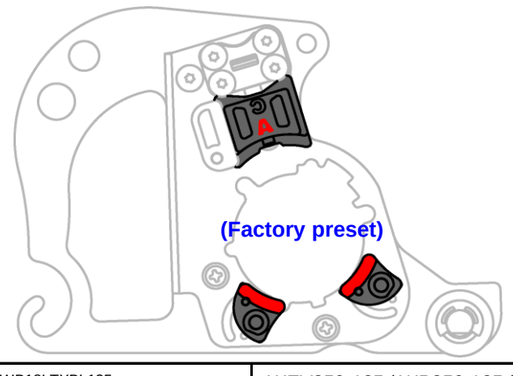

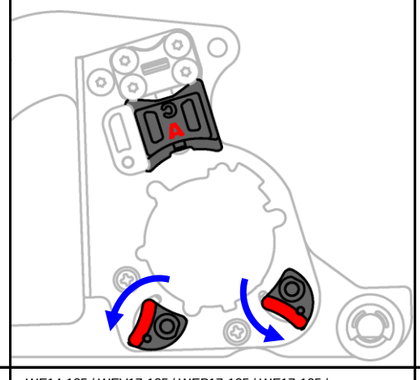

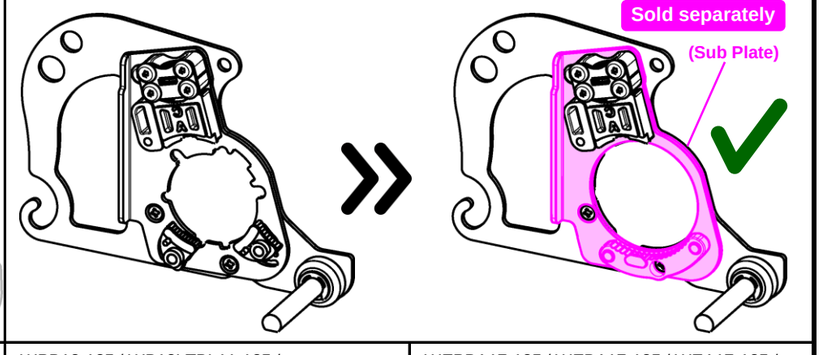

metabo®

※Based on the web information as of 2022 Jan.

WPB18LTXBL125 / WB18LTXBL125 / WP18LTX125 / W18LTX125 / WEV1500-125 / WE1500-125 type

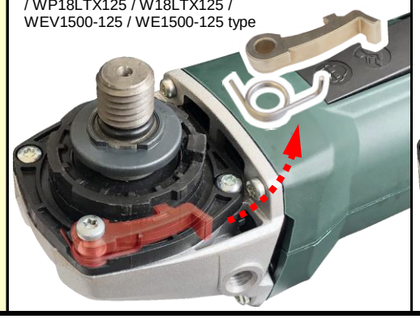

WEV850-125 / WP850-125 / W850-125 / W750-125 type

WE14-125 / WEV17-125 / WEP17-125 / WE17-125 / WEV15-125 / WE15-125 / WEQ1400-125 / WP13-125 / W13-125 / WEV11-125 / WP11-125 / W11-125 / WQ1100-125 / W1100-125 / W9-125 type

WPB13-125 / WB18LTBL11-125 / WVB18LTBL11-125 / WPB18LTBL11-125 type

WEPBA17-125 / WEBA17-125 / WEA17-125 / WEVA15-125 / WA13-125 / WEA11-125 type

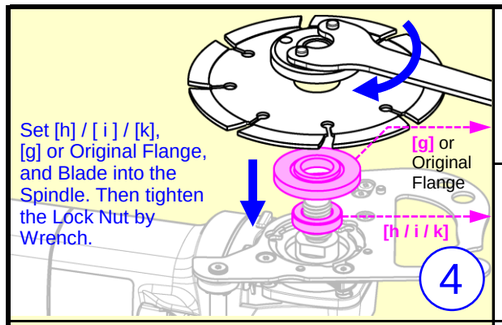

—

—

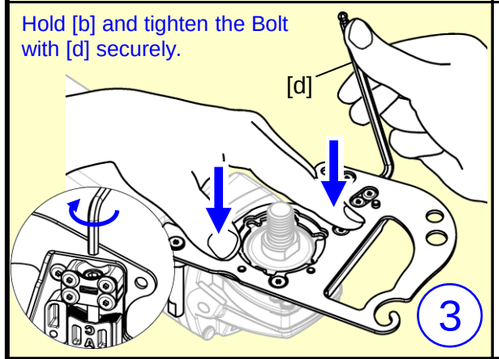

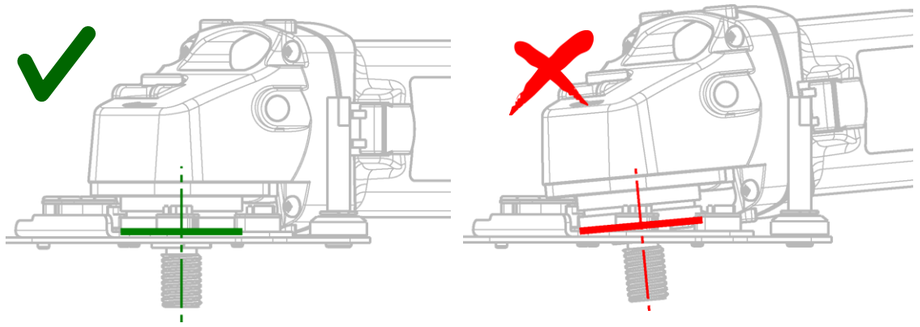

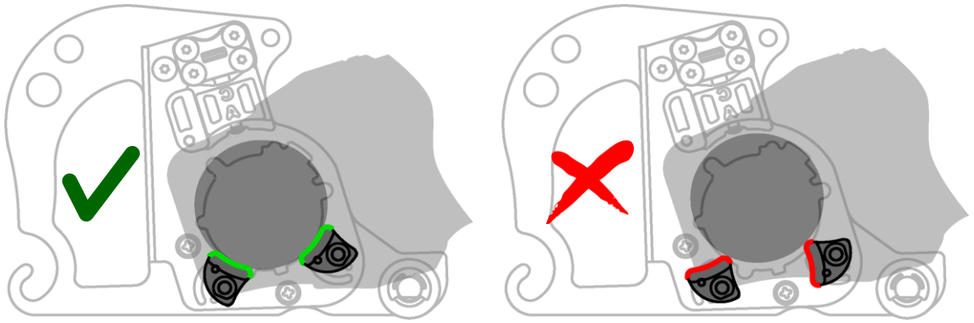

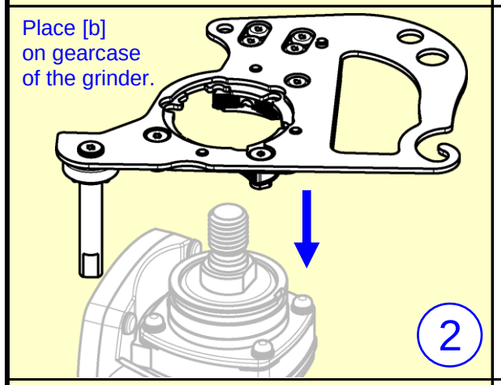

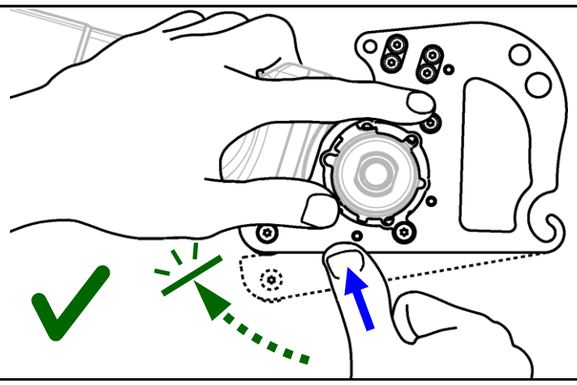

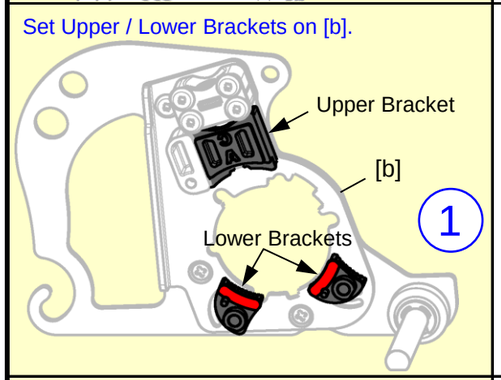

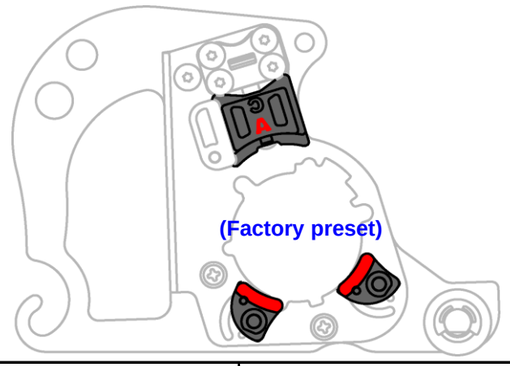

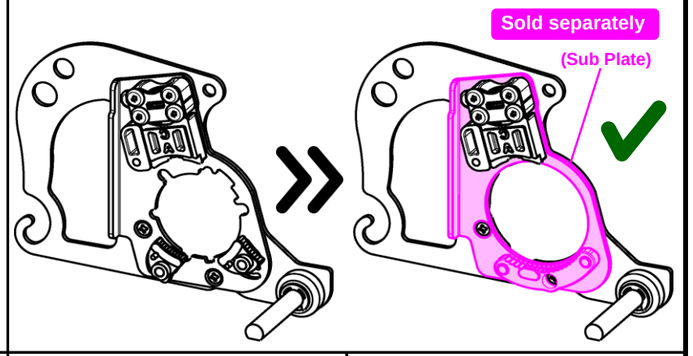

HiKOKI

※Based on the web information as of 2022 Jan.

G12SR3, G13SW, G13VE type

G18DSL, G18DSL2, G13SN2, G13SR4, G13STA type

G18DBBAL, G18DBBVL, G3613DA, G3613DB, G13BYEQ type

G13SE2 / G13YC2 / G13VA type

G13SB4, G13SE3 type

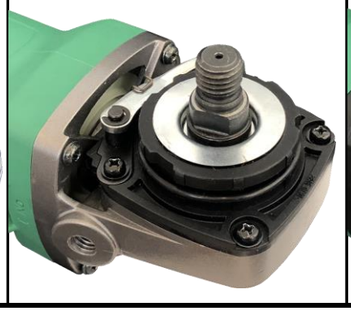

G13BAWQZ, G13BY, G13YG type

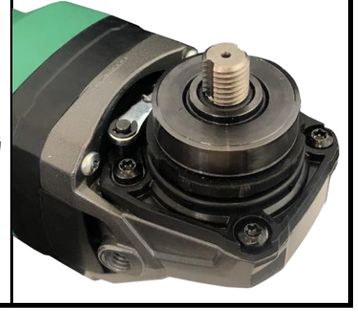

Set [h] / [i] / [k], [g] or Original Flange, and Blade into the Spindle. Then tighten the Lock Nut by Wrench.

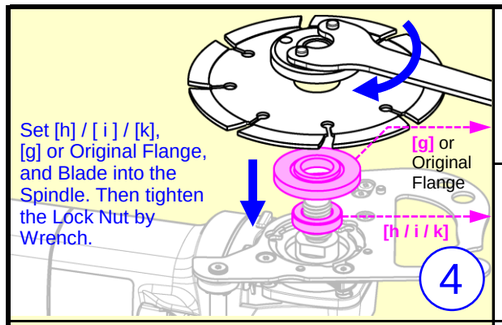

4

FLEX

—





FLEX

—

Hold [b] and tighten the Bolt with [d] securely.

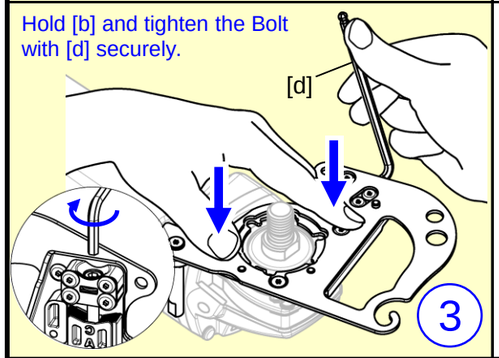

3

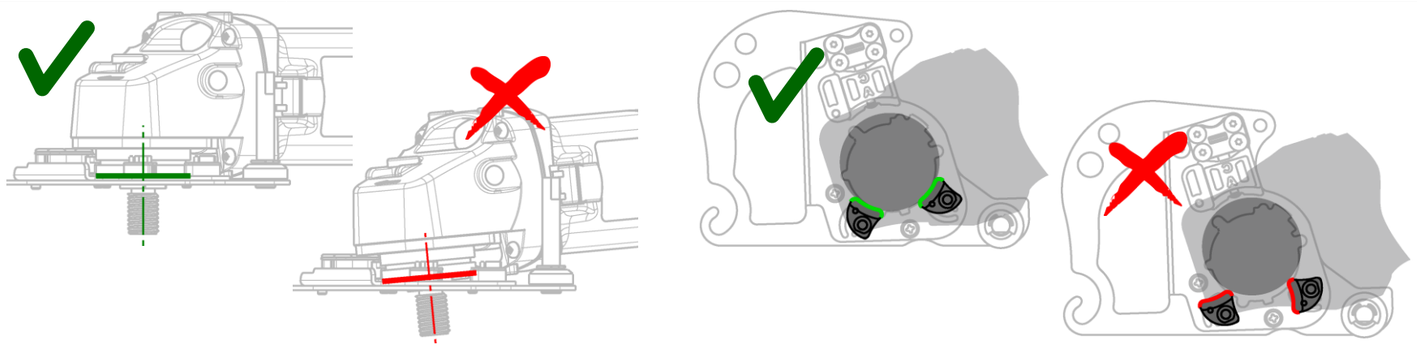

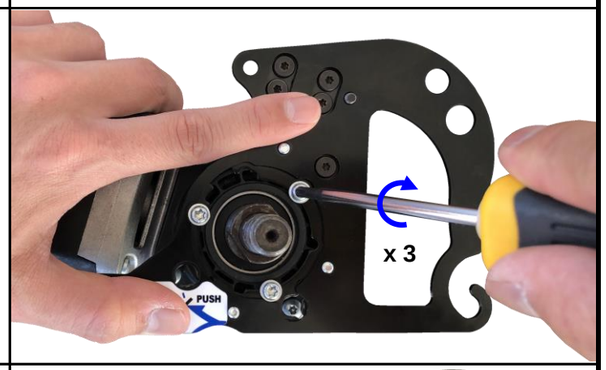

Place [b] on gearcase of the grinder.

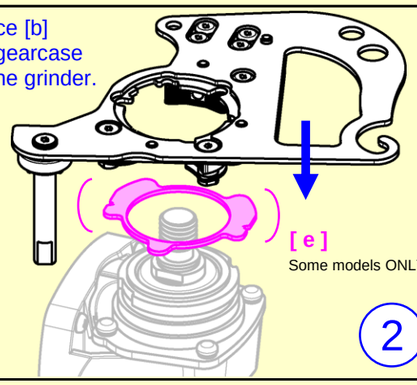

2

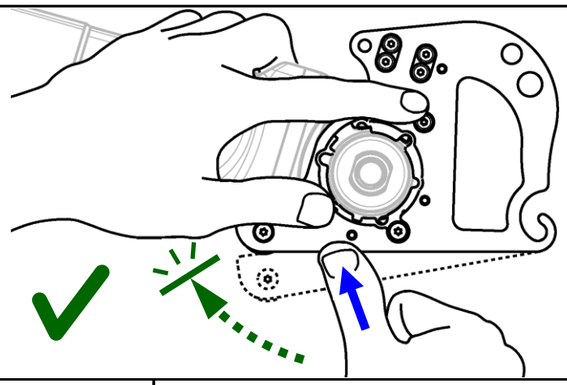

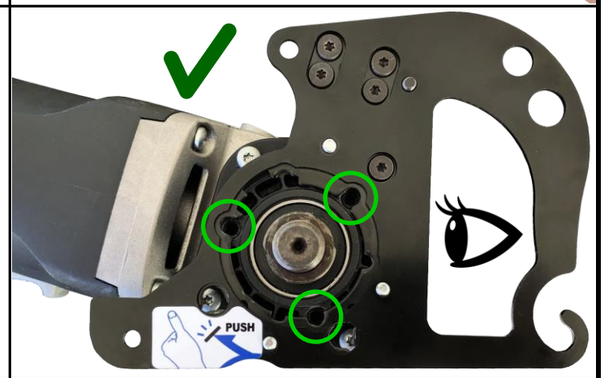

Set Upper / Lower Brackets on [b].

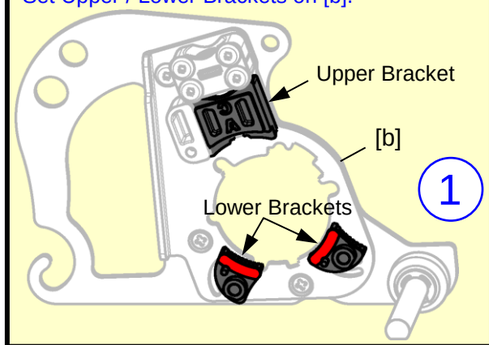

1

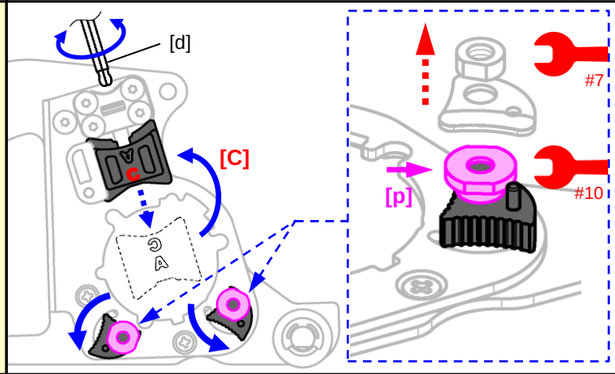

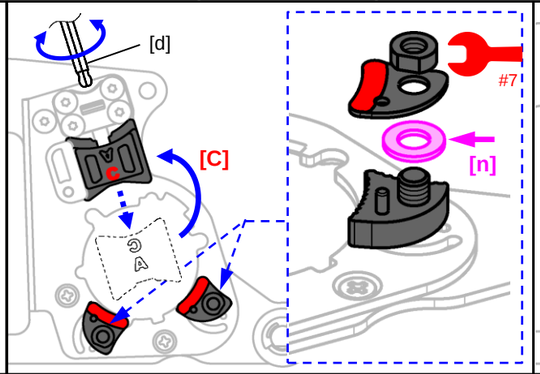

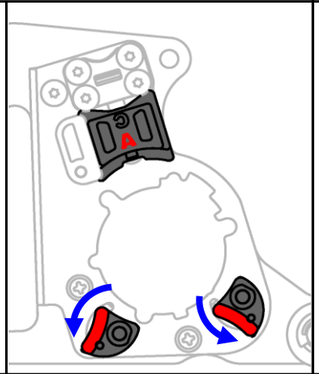

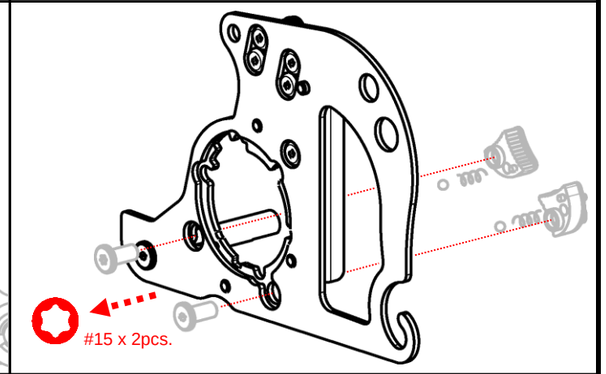

FLEX

※Based on the web information as of 2022 Jan.

L1506VR type

L9-11 125, LE9-11 125, L12-11 125, L13-10 125-EC, LE14-7 125 INOX, L15-11 125, LE15-11 125, L3406VRG, LB17-11 125 type

L1400 125 type

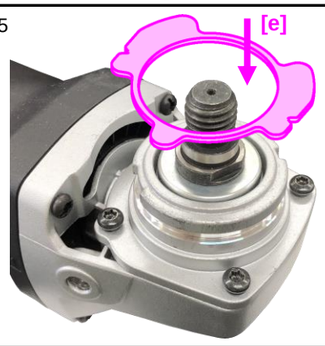

LBE125 18.0-EC, LB125 18.0-EC, L125 18.0-EC type

[OLD type] L3410FR, L3410VR type

Detach the Plate of Guard.

Check the instruction video.

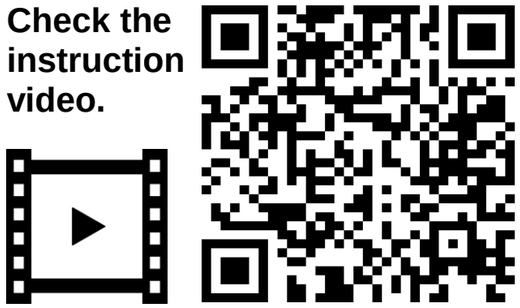

N300294